



CUMMINS

ISX CM871


(2007-2009)

Electrical Wiring Diagrams







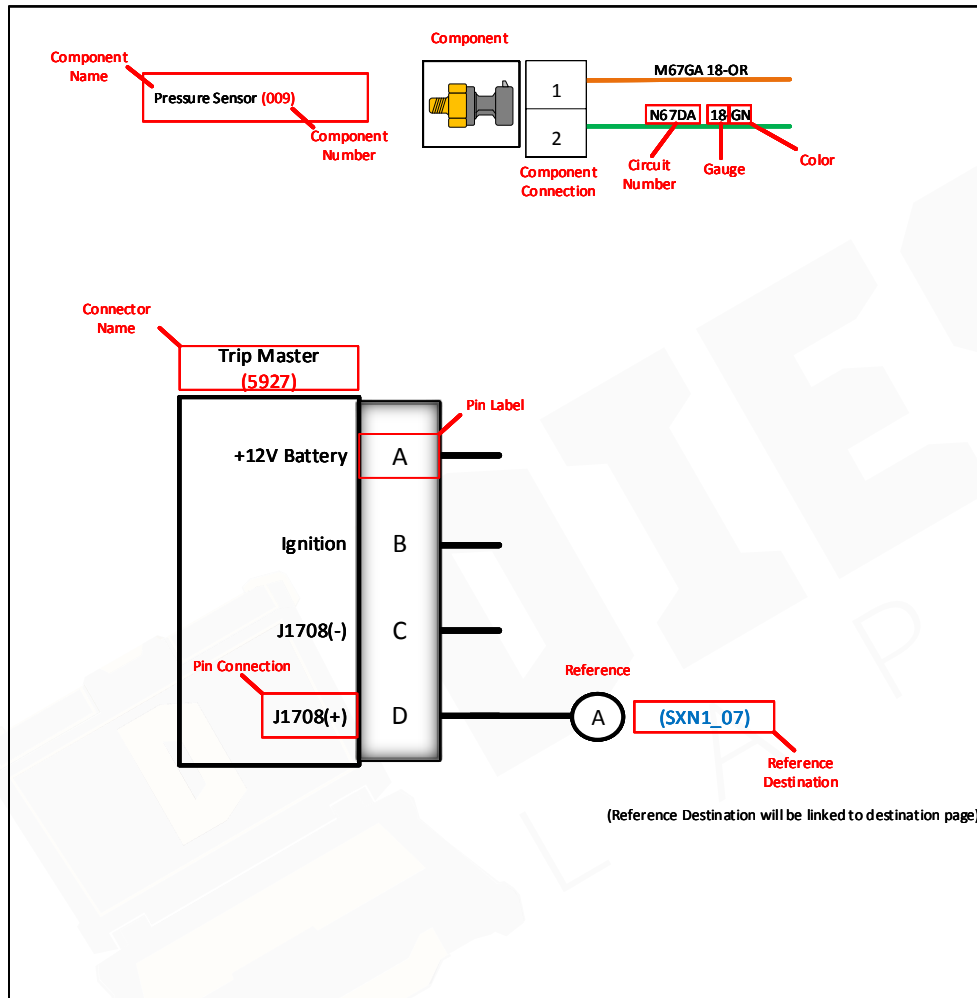



How to Read This Document

NAVIGATION





SYMBOLS


	Splice
	Circuit Breaker
	Fuse
	Diode
	Twisted Pair
	Passthrough Connector
	Ground
	Power


ABBREVIATION	COLOR
RD	RED
WH	WHITE
OR	ORANGE
YL/YE	YELLOW
PK	PINK
BK	BLACK
GY	GRAY
PU/VT	PURPLE
BR/BN	BROWN
GN	GREEN
BU/BL	BLUE


Capital Abbreviation's Represent Wire Main Color
Lower Case Abbreviation's Represent Secondary Color

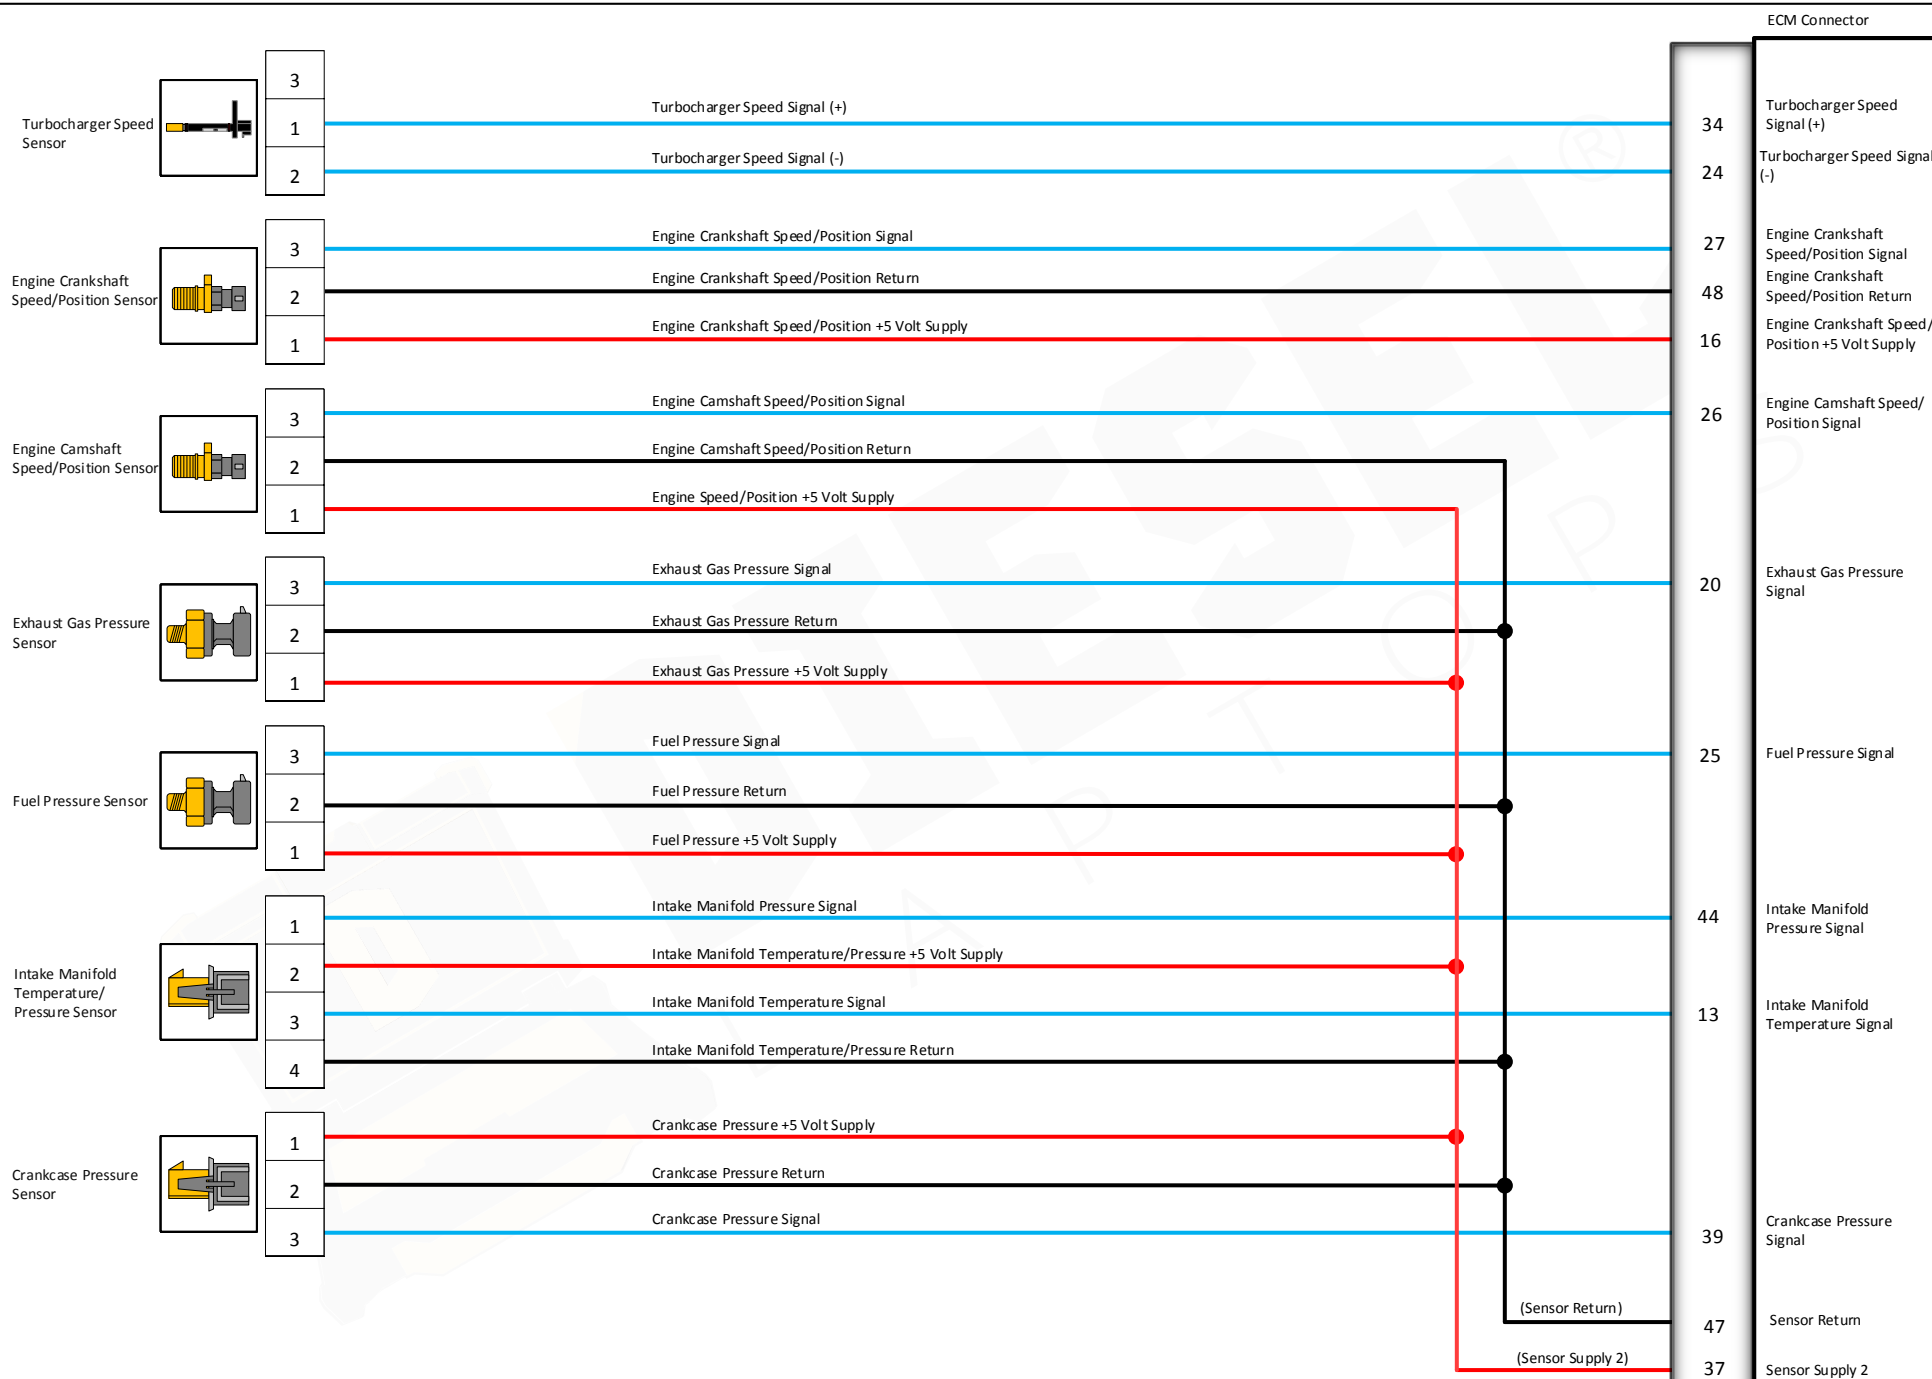


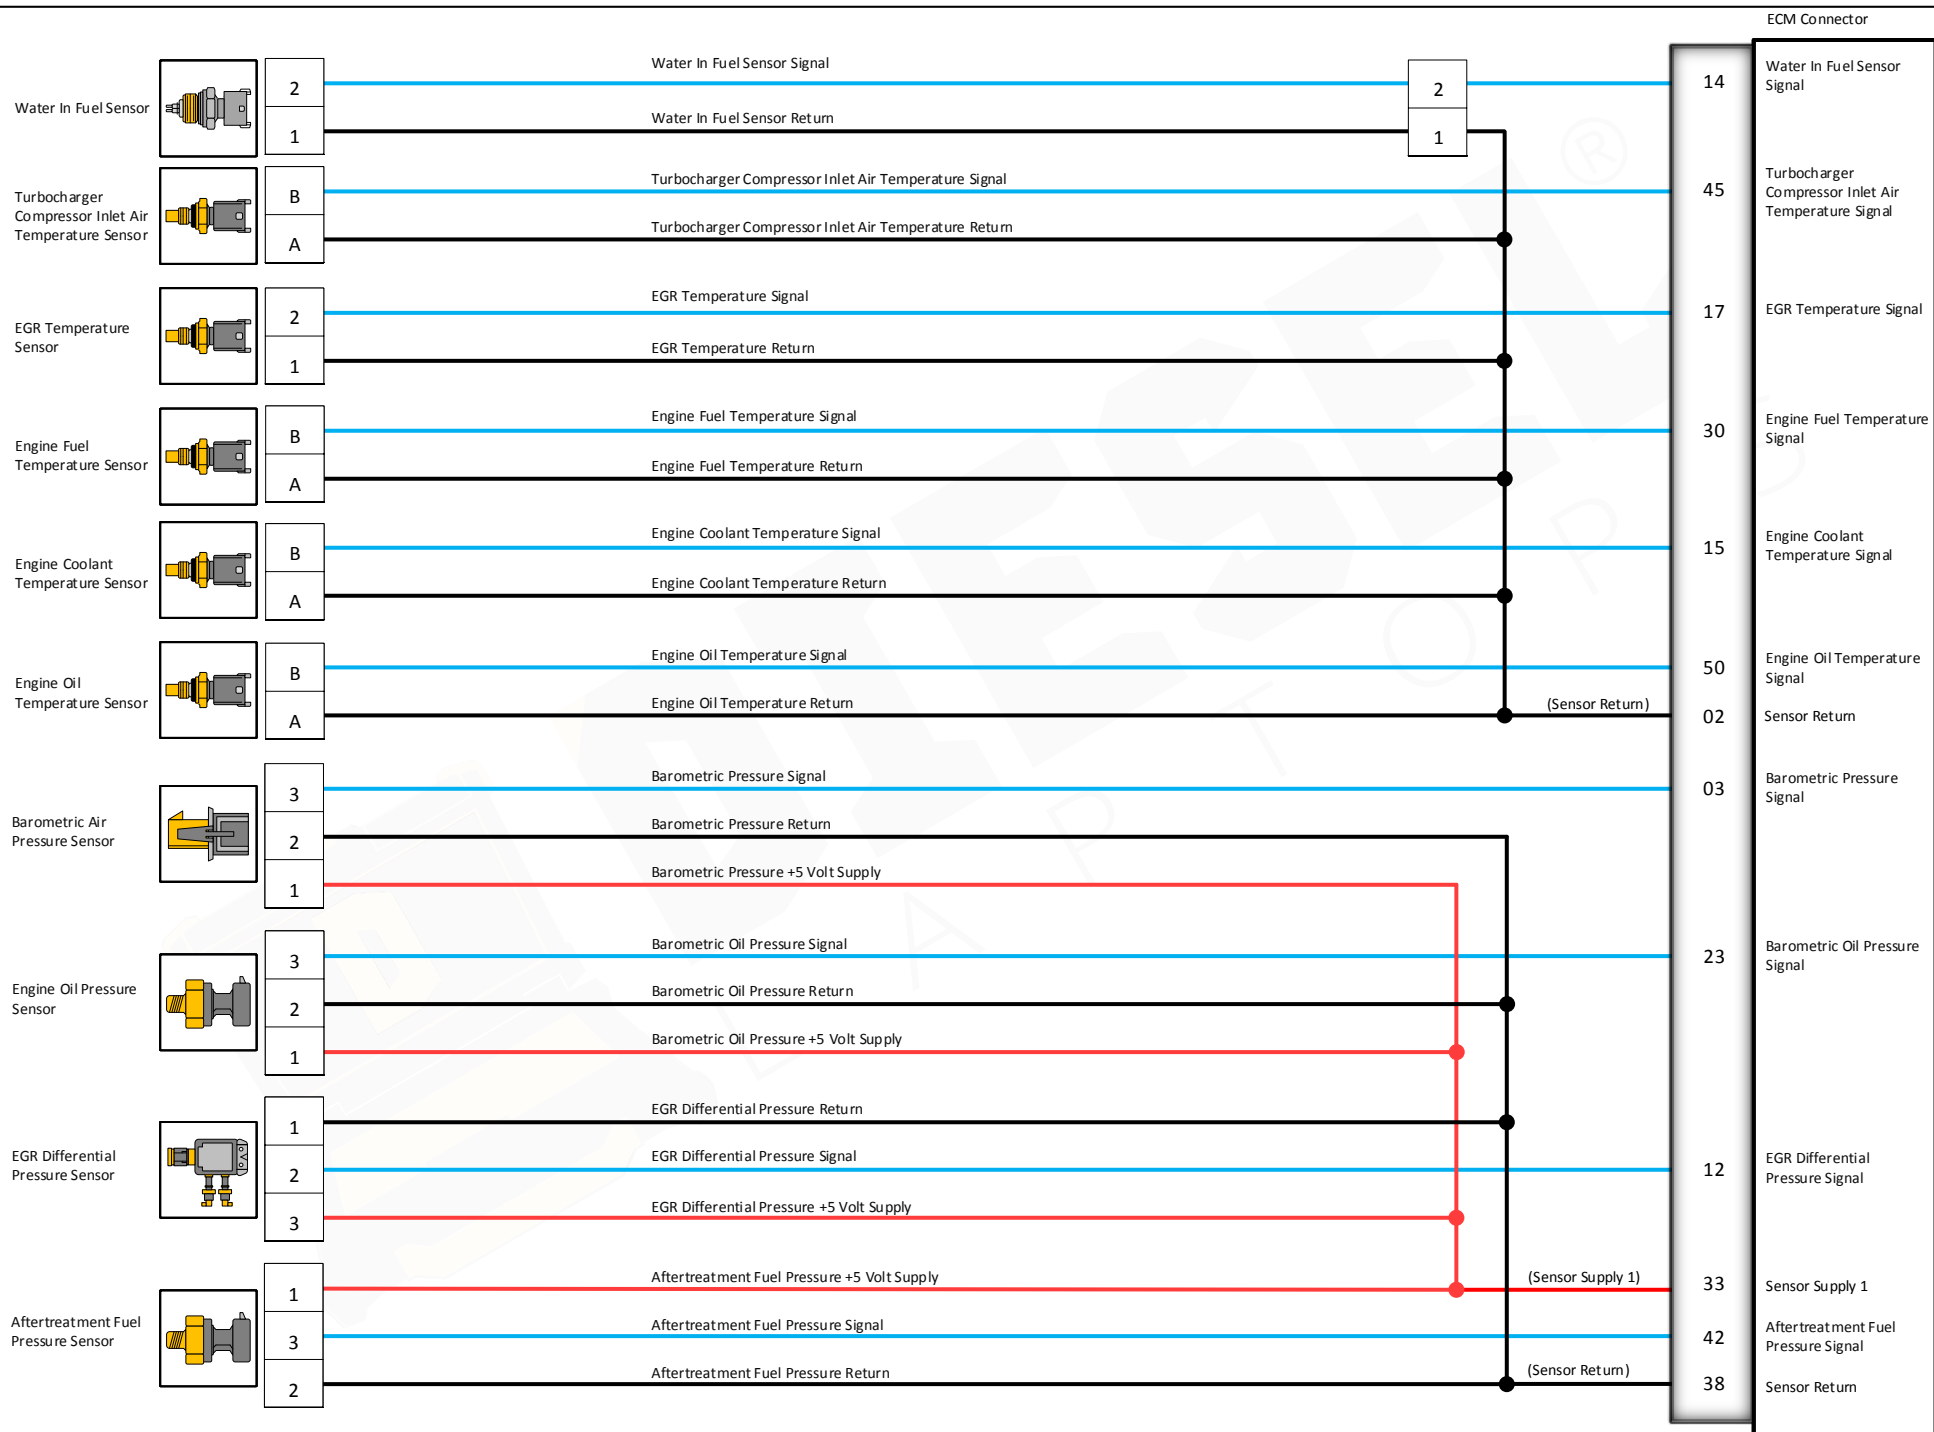

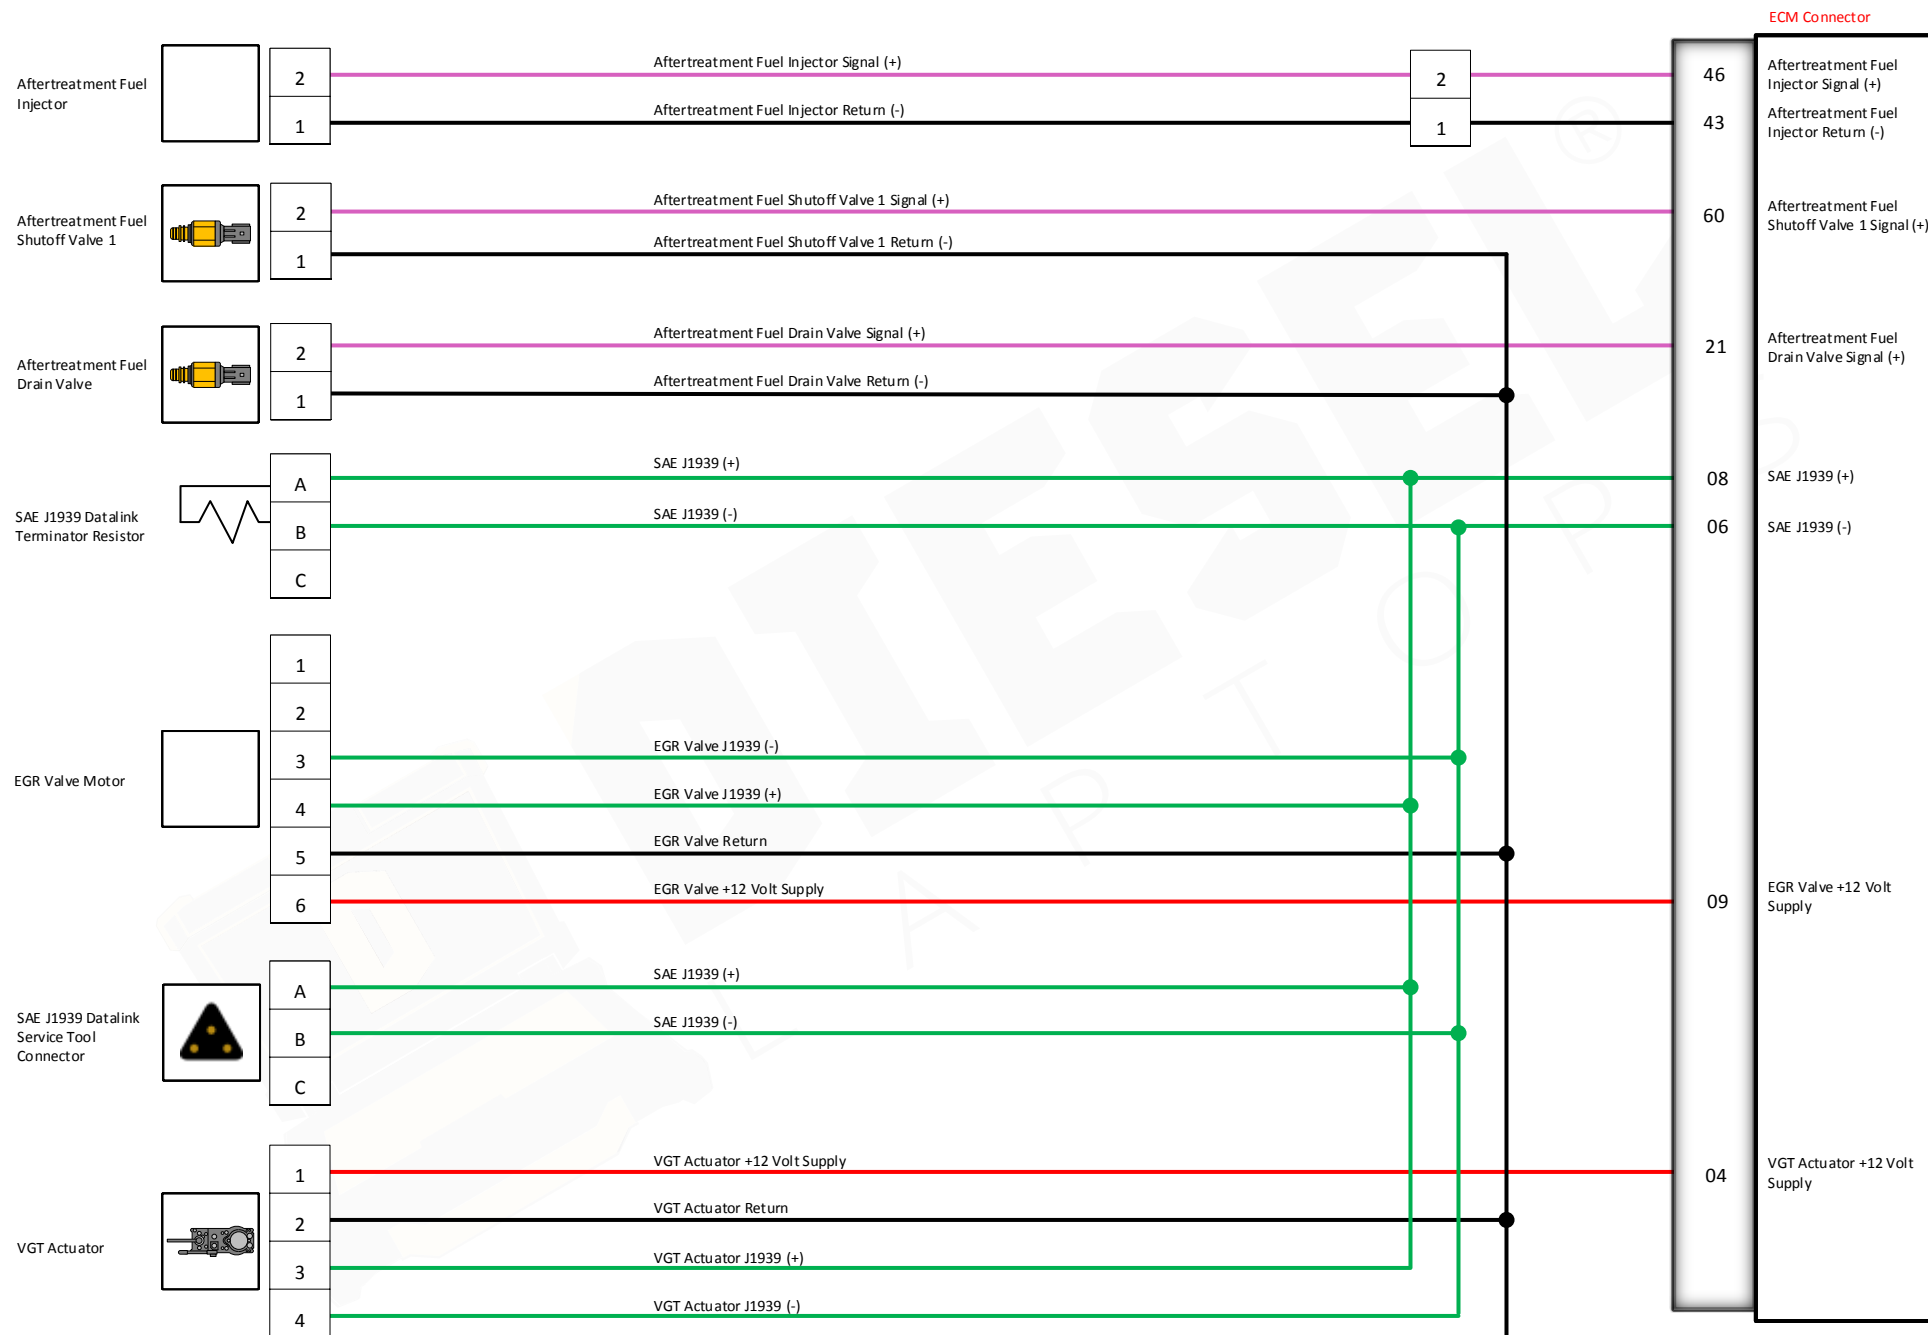


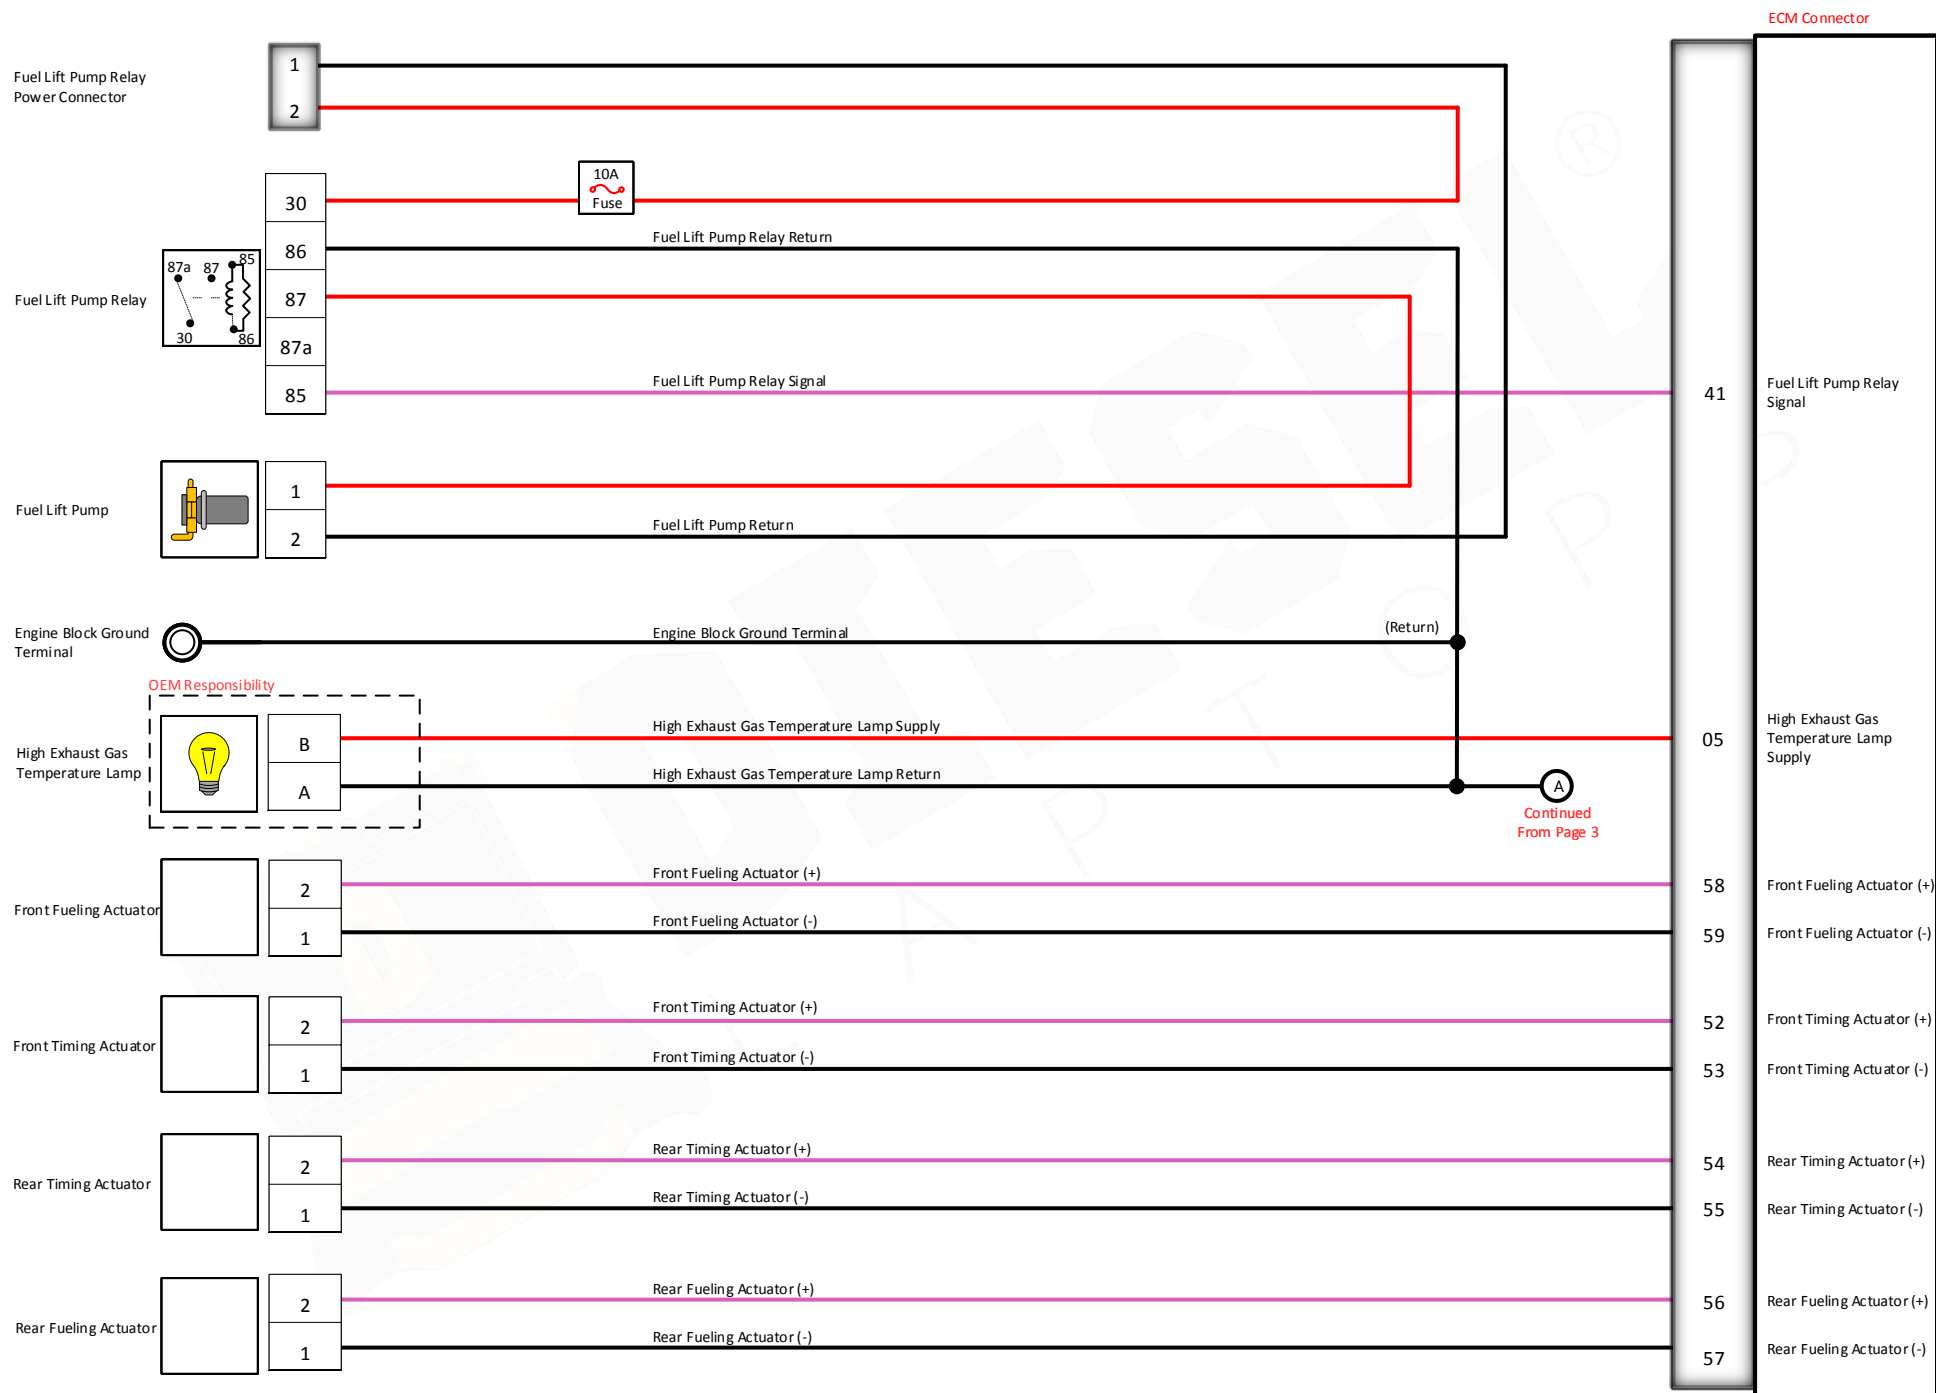

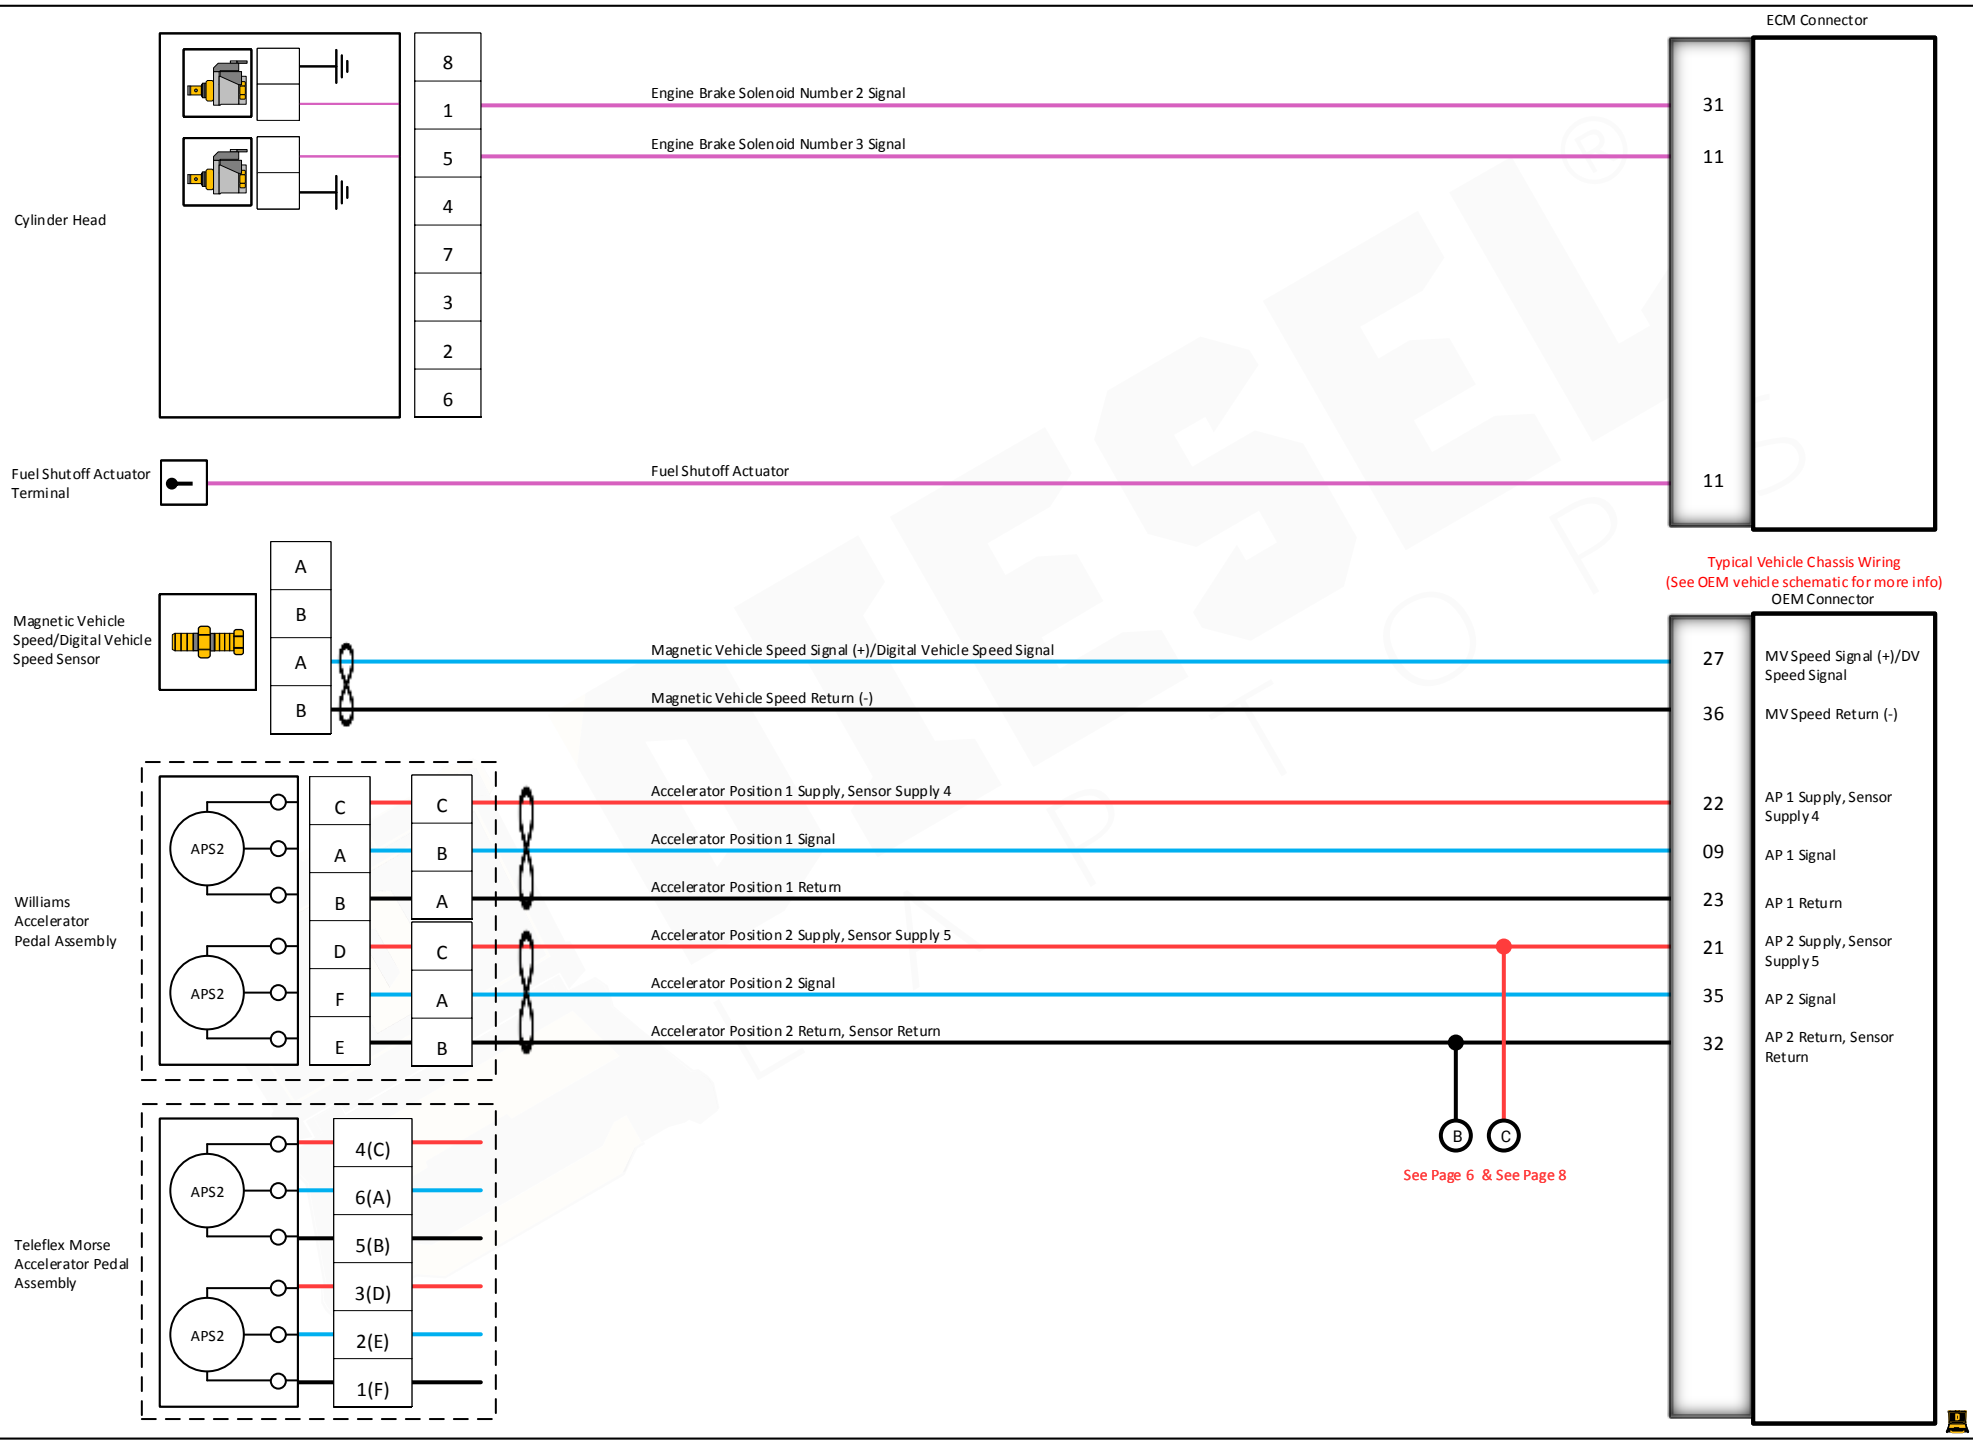


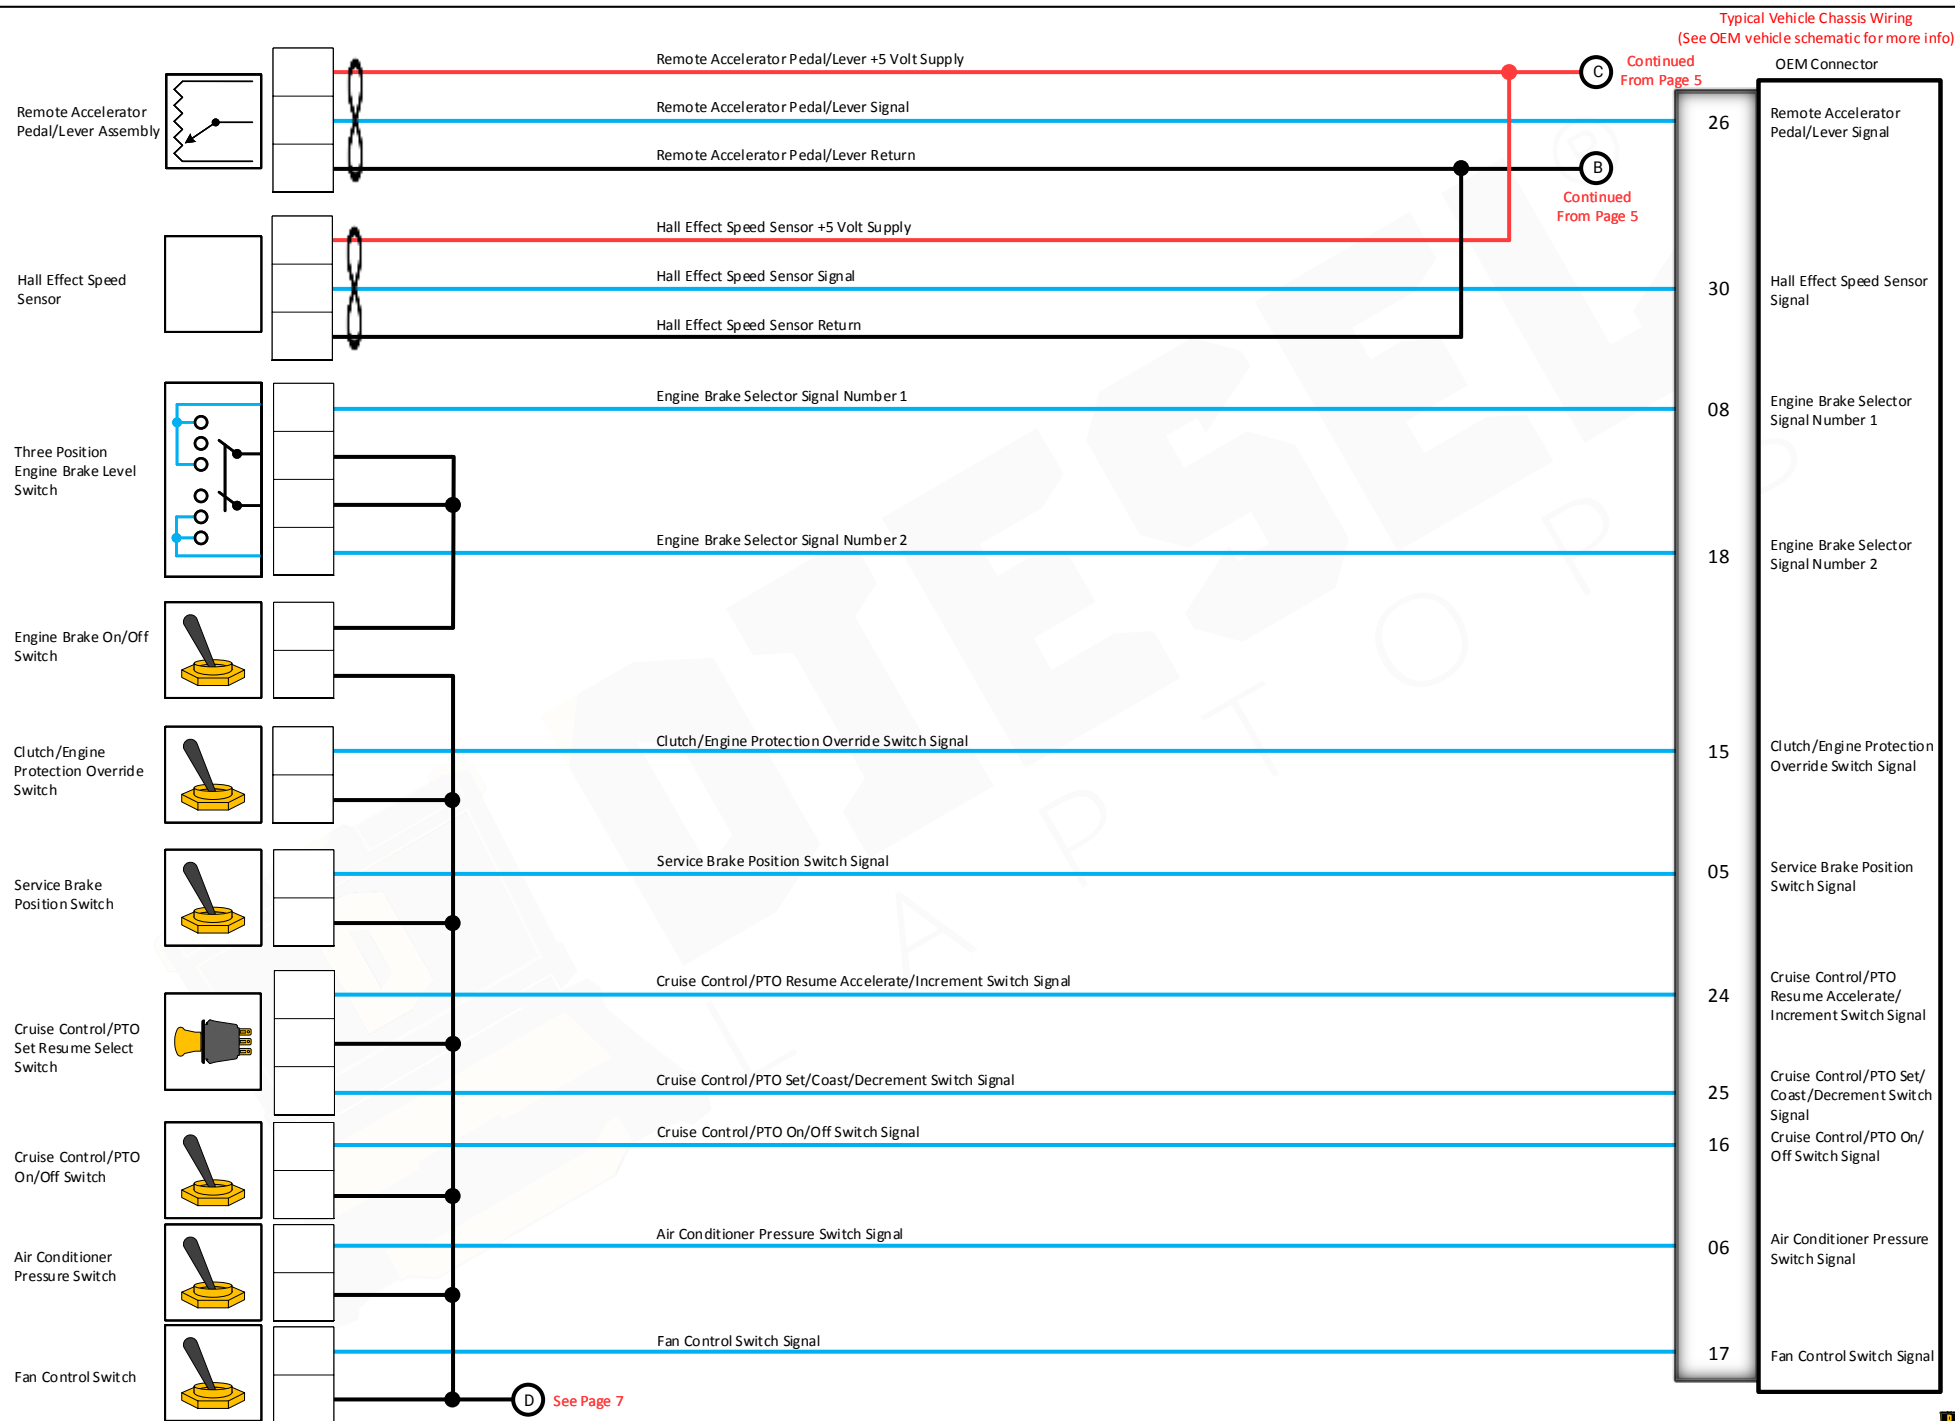


Typical Vehicle Chassis Wiring
(See OEM vehicle schematic for more info)

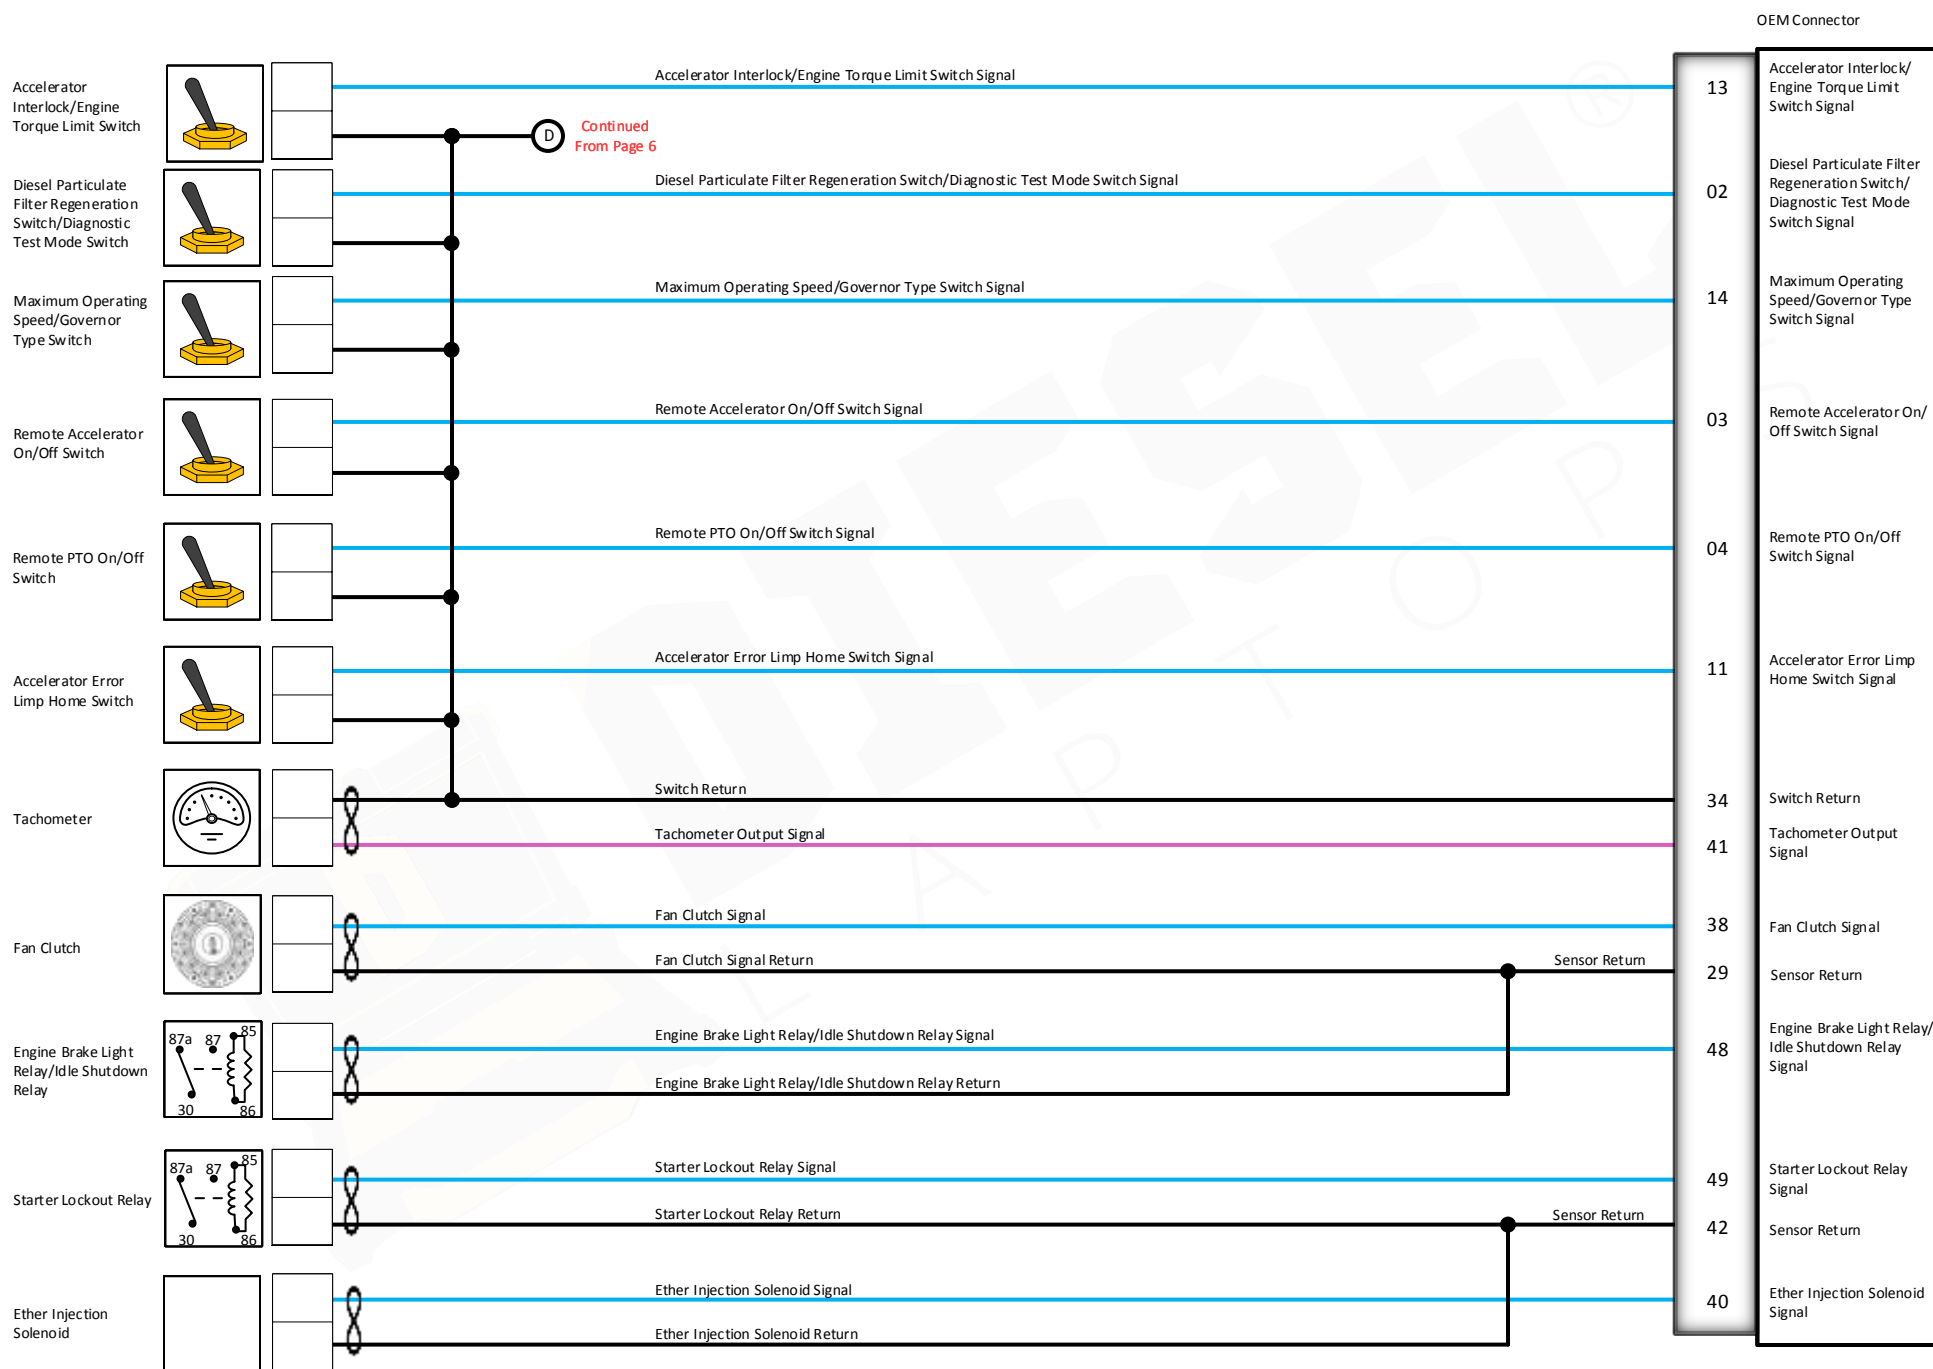




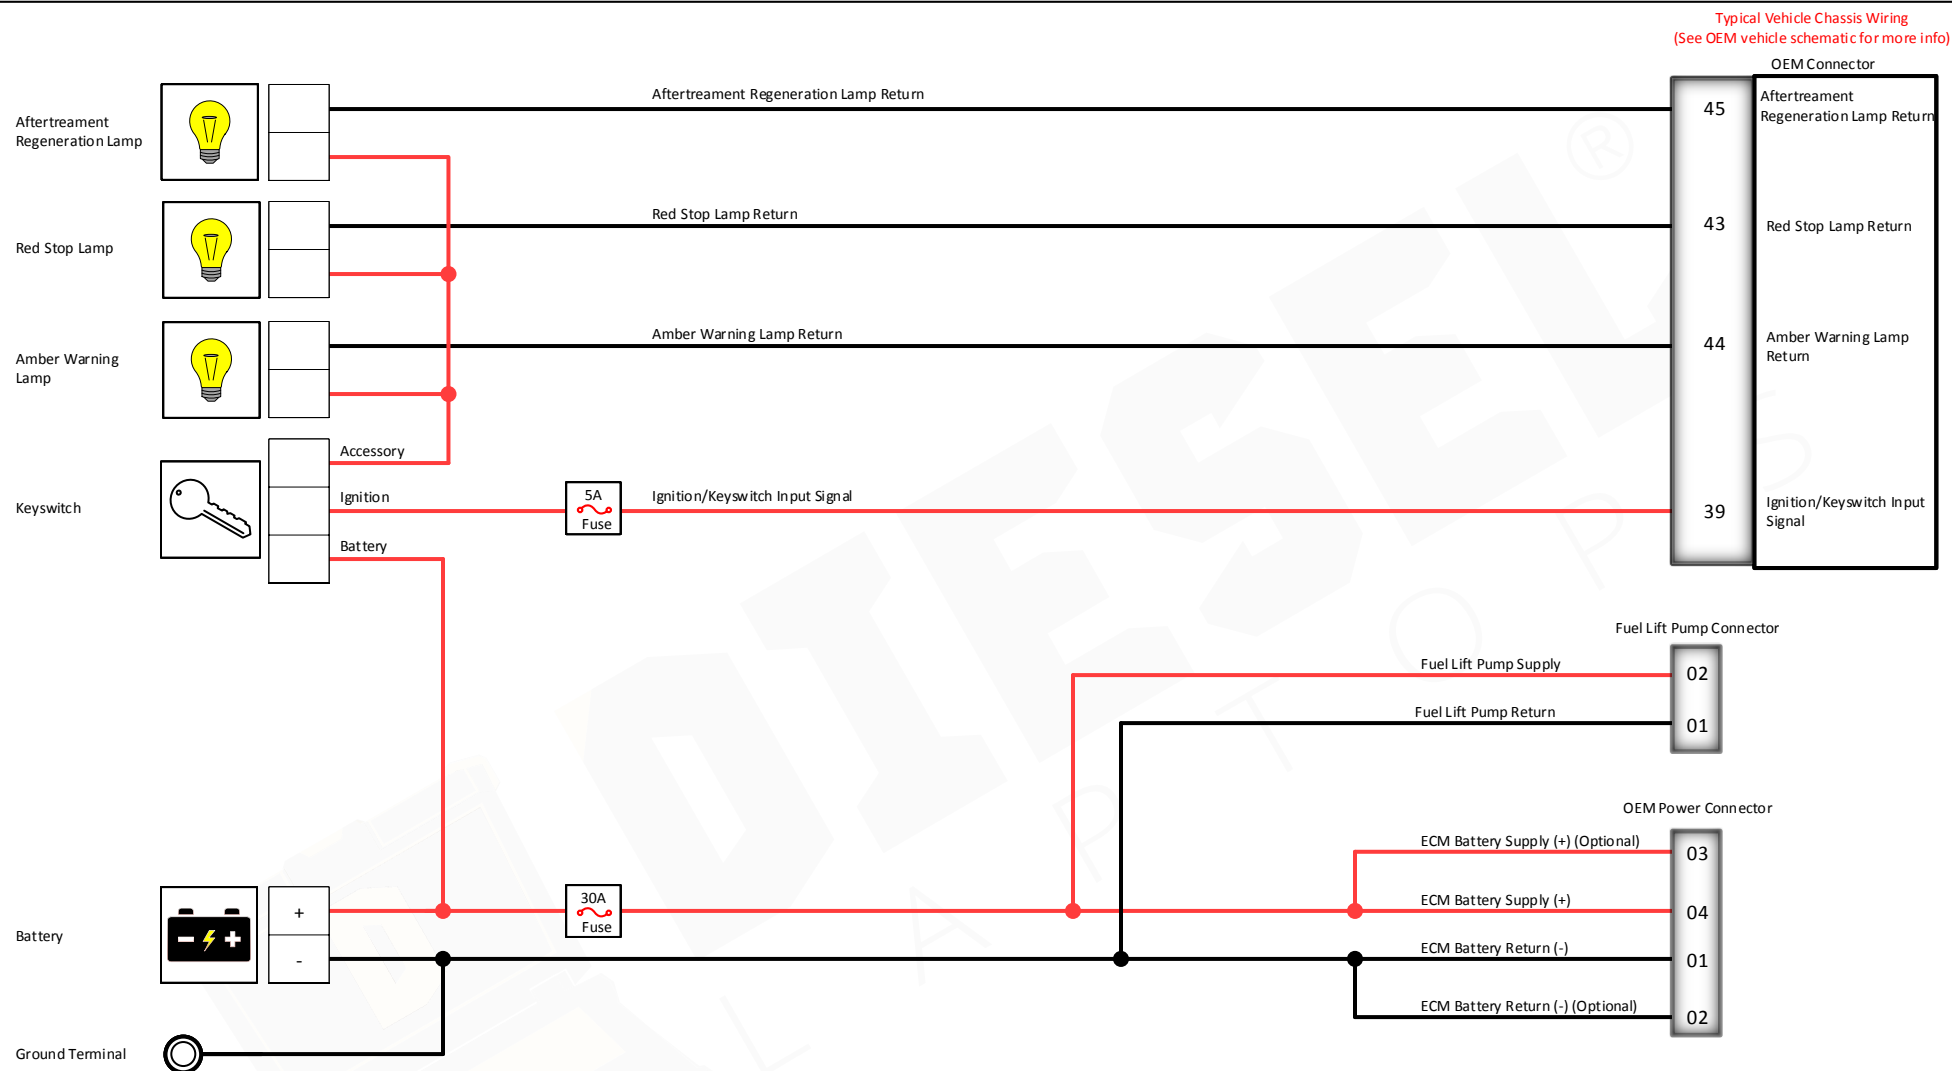


CONNECTORS

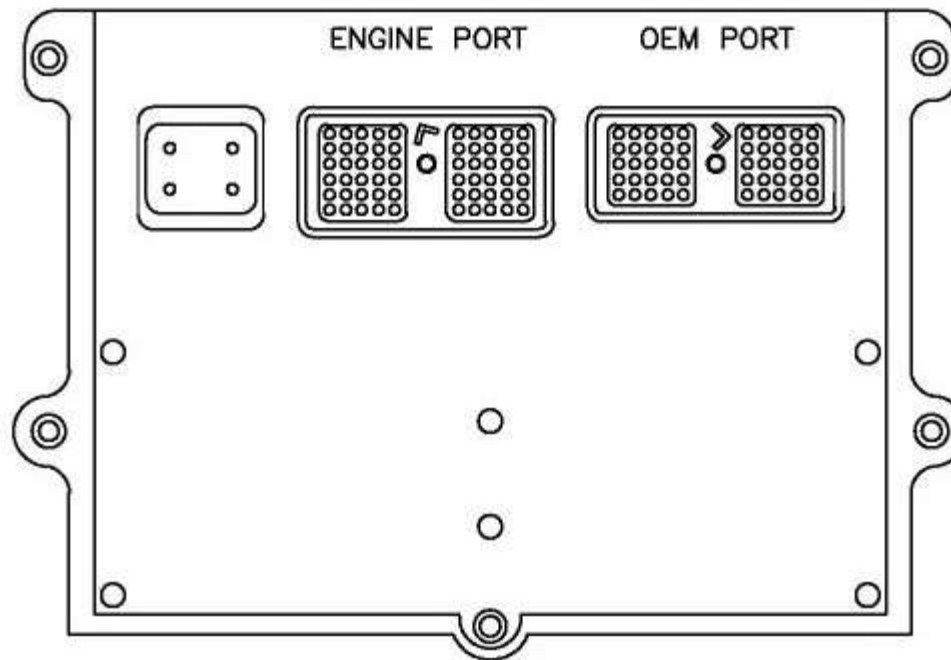

ENGINE HARNESS CONNECTOR
MATING FACE

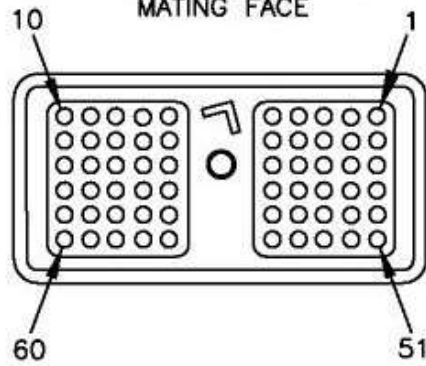

OEM HARNESS CONNECTOR
MATING FACE

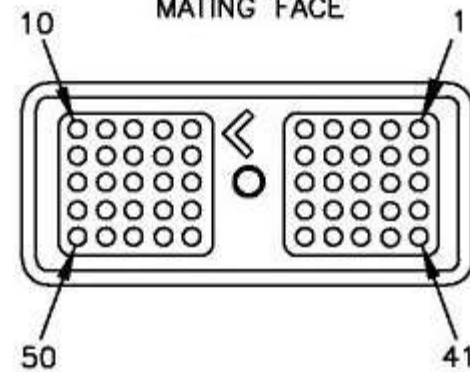



www.DieselLaptops.com

In the interest of continuing product development, Diesel Laptops reserves the right to change specifications within this document at any time without prior notice.
If you require additional reference materials or information, please contact Diesel Laptops.

WARNING: Diesel Laptops will not be held liable for any consequential or incidental damages including, but not limited to: Engine/vehicle downtime; loss of income or profits; damage potentially caused to other engines, vehicles, or property and any attorney fees. Diesel Laptops will not be responsible for any liability you may have in respect to yourself, another person, or entity. Diesel Laptops urges users to carefully follow all proper safety procedures before and during the application of this manual as a reference. Improper safety precautions can result in severe injury or death.

Diesel Laptops will not be held accountable for any inappropriate safety measures or faults made by the user while performing diagnostics.

