 



BLANK  
 S53-1106-000



ENGINE BRAKE  
 S53-1106-001



 PARK BRAKE  
 S53-1106-002




REFRIGERATOR  
 S53-1106-003



CHECK FLUIDS  
 S53-1106-004



 
DON'T SHIFT  
 S53-1106-005




CHECK TRANSMISSION  
 S53-1106-006



 
KINGPIN LOCK  
 S53-1106-007



FUEL HEATER  
 S53-1106-008

 


MESSAGE WAITING  
 S53-1106-009

 


ALTERNATOR  
 S53-1106-010



 
FASTEN SEAT BELT  
 S53-1106-011



ETHER START  
 S53-1106-012

 


ENGINE HEATER  
 S53-1106-013

 


5TH WHEEL SLIDE  
 S53-1106-014



 WAIT TO START  
 S53-1106-015



INTER AXLE LOCK  
 S53-1106-016

 


SERVICE  
 S53-1106-017



TRUCK BODY UP  
 S53-1106-018



 
PTO  
 S53-1106-019



BRAKESAVER  
 S53-1106-020



 TRAILER BODY UP  
 S53-1106-021




AUXILIARY TRANSMISSION  
 S53-1106-022




OVER SPEED  
 S53-1106-023



 
CENTRAL TIRE INFLATION  
 S53-1106-024



PUMP MODE  
 S53-1106-025

 


EXHAUST BRAKE  
 S53-1106-026

 


TRANSMISSION FILTER  
 S53-1106-027



 TRANSMISSION TEMPERATURE  
 S53-1106-028



HIGH BEAM  
 S53-1106-029

 

LEFT TURN ARROW  
 S53-1106-030



RIGHT TURN ARROW  
 S53-1106-031



 
TRAILER DUMP FRONT  
 S53-1106-032



TRAILER DUMP CENTER  
 S53-1106-033



TRAILER DUMP REAR  
 S53-1106-034



WORN BRAKE  
 S53-1106-035



DUAL REAR AXLES DIFFERENTIAL LOCK  
 S53-1106-036



REMOTE SWITCH ENGINE OFF  
 S53-1106-037



STABILITY CONTROL  
 S53-1106-038



 
AIR SUSPENSION DUMP  
 S53-1106-039




FRONT REAR AXLE DIFFERENTIAL LOCK  
 S53-1106-040



REAR REAR AXLE DIFFERENTIAL LOCK  
 S53-1106-041




FILTER REGENERATION  
 S53-1106-042

 


CRANE UP WARNING  
 S53-1106-043



 RESET OVERSPEED SHUTDOWN  
 S53-1106-044




WINCH  
 S53-1106-045

 

EMISSION SYSTEM TEMPERATURE WARNING  
 S53-1106-046



 TRACTION ENHANCEMENT  
 S53-1106-047




MALFUNCTION INDICATOR LAMP (MIL)  
 S53-1106-048



LANE DEPARTURE WARNING (LDW)  
 S53-1106-049



 LOW VOLTAGE DISCONNECT (LVD)  
 S53-1106-050



SERVICE TRANSMISSION  
 S53-1106-051



RANGE INHIBIT  
 S53-1106-052



BRAKE FAILURE  
 S53-1106-053



SIDE AIRBAG  
 S53-1106-054



 
DIESEL EXHAUST FLUID (DEF)  
 S53-1106-055




HILL HOLD  
 S53-1106-056



WATER IN FUEL  
 S53-1106-057



FUEL PRESSURE  
 S53-1106-058

 

TRAILER POWER WIRE  
 S53-1106-059



PARK BRAKE  
 S53-1106-060



BRAKE FAILURE  
 S53-1106-061