



FUSE AND CIRCUIT BREAKER LOCATION

LOCATION	SIZE	DESCRIPTION
F1-A	30A	HEATER MOTOR, HIGH FAN SPEED
F1-B	10A	AIR CONDITIONER COMPRESSOR
F1-C	20A	HEATER & A/C CONTROLS; LOW, MEDIUM FAN SPEEDS
F1-D	15A	READING/SPOT LIGHTS
F2-A	15A	CIGARETTE LIGHTER/WORK LIGHTS
F2-B	10A	DOVE AND COURTESY LIGHTS
F2-C	30A	IGNITION RELAY
F2-D	20A	TURN SIGNAL AND HAZARD FLASHER LIGHTS
F3-A	20A	TRAILER MARKER AND IDENTIFICATION LIGHTS
F3-B	20A	TRACTOR STOP LIGHTS
F3-C	30A	TRAILER TAIL AND CLEARANCE LIGHTS & F8-C
F3-D	10A	TRAILER TAIL & CLEAR MARKER & IDENT LTS RELAY
F4-A	10A	IGN - INSTRUMENTS
F4-B	25A	PASSENGER ELECTRIC WINDOW
F4-C	10A	BACK-UP LIGHTS
F4-D	15A*	WINDSHIELD WIPER - WINDSHIELD WASHER
F5-A	10A	HEATED MIRRORS
F5-A	15A	HEATED AND MOTORIZED MIRRORS
F5-B	15A	RADIO/CB/DEFROSTER FANS
F5-C	15A	BAT - RADIO MEMORY/INSTRUMENT/HORN
F5-D	20A	BATTERY POWER SOURCE/ENGINE DATA LINK
F6-A	20A	SPARE 1 (B+)
F6-B	10A	SPARE 2 (B+)

\* TYPE 1 CIRCUIT BREAKER ONLY

Power distribution center fuse & relay locations (Part 1 of 3)

International/Navistar
 Fuse Identification
 5000i, 9200i, 9400i & 9900i