



CKT NUMBER	INSUL	GA	COLOR	WIRE NUMBER	DESCRIPTION	FROM CONN	TO CONN	PIN
19	GXL	18	VIO/WHT	16-04762	BAT_PWR_TO_RADIO	J2	7	P6 D
116	GXL	18	WHT	16-04762	AMP_SENSOR_RADIO_TO_AMP	J1	F8	J3 2
239	GXL	18	BLK	16-04762	GROUND_TO_RADIO	J2	8	P6 A
A239	GXL	18	BLK	16-04762	GROUND_AMP_TO_SPLICE	J1	E8	S8 1
A239-1	GXL	18	BLK	16-04762	GROUND_AMP_TO_SPLICE	S8	1	J1 E9
A239-2	GXL	12	BLK	16-05749	GROUND_AMP_PWR_TO_SPLICE	S8	1	P5 A
A252	GXL	18	RED	16-04762	ACCESS_PWR_REAR_SEAT_AUDIO_TO_SPLICE	P1	C	S5 1
A252-1	GXL	18	RED	16-04762	ACCESS_PWR_SPLICE_TO_RADIO_PWR	S5	1	P6 C
A252-2	GXL	18	RED	16-04762	ACCESS_PWR_SPLICE_TO_RADIO	S5	1	J2 4
A252-3	GXL	18	RED	16-04762	ACCESS_PWR_SPLICE_TO_RADIO	J2	6	S5 1
A298	GXL	18	VIO/WHT	16-04762	BAT_PWR_AMP_TO_SPLICE	J1	E11	S7 1
A298-1	GXL	18	VIO/WHT	16-04762	BAT_PWR_AMP_TO_SPLICE	S7	1	J1 E12
A298-2	GXL	12	VIO/WHT	16-05749	BAT_PWR_SPLICE_TO_AMP_PWR	S7	1	P5 B
430	GXL	18	WHT	16-04762	LEFT_FRONT (+) MID-BASS SPEAKERS_TO_AMP	J1	E13	P4 B
A430	GXL	18	WHT	16-04762	LEFT_FRONT (+) RADIO_TO_AMP	J2	13	J1 E2
B430	GXL	18	WHT	16-04762	LEFT_FRONT (+) CAB_HEADLINER_SPEAKERS_TO_AMP	J1	E15	P3 B
431	GXL	18	GRN	16-04762	LEFT_REAR (+) SLEEPER SPEAKERS_TO_AMP	J1	F15	P2 H
A431	GXL	18	GRN	16-04762	LEFT_REAR (+) AMP_TO_SPLICE	J1	E6	S4 1
A431-1	GXL	18	GRN	16-04762	LEFT_REAR (+) REAR_SEAT_AUDIO_TO_SPLICE	S4	1	P1 H
A431-2	GXL	18	GRN	16-04762	LEFT_REAR (+) RADIO_TO_SPLICE	J2	15	S4 1
432	GXL	18	GRAY	16-04762	RIGHT_FRONT (+) AMP_TO_CAB_MID-BASS SPEAKERS	J1	F2	P4 D
A432	GXL	18	GRAY	16-04762	RIGHT_FRONT (+) AMP_TO_RADIO	J2	11	J1 E1
B432	GXL	18	GRAY	16-04762	RIGHT_FRONT (+) CAB_HEADLINER_SPEAKERS_TO_AMP	J1	F7	P3 D
433	GXL	18	VIOLET	16-04762	RIGHT_REAR (+) SLEEPER SPEAKERS_TO_AMP	J1	F14	P2 E
A433	GXL	18	VIOLET	16-04762	RIGHT_REAR (+) AMP_TO_SPLICE	J1	E5	S3 1
A433-1	GXL	18	VIOLET	16-04762	RIGHT_REAR (+) REAR_SEAT_AUDIO_TO_SPLICE	S3	1	P1 F
A433-2	GXL	18	VIOLET	16-04762	RIGHT_REAR (+) RADIO_TO_SPLICE	J2	9	S3 1
434	GXL	18	WHT/BLK	16-04762	LEFT_FRONT (-) AMP_TO_CAB_MID-BASS SPEAKERS	J1	E14	P4 A
A434	GXL	18	WHT/BLK	16-04762	LEFT_FRONT (-) RADIO_TO_AMP	J2	14	J1 E3
B434	GXL	18	WHT/BLK	16-04762	LEFT_FRONT (-) AMP_TO_CAB_HEADLINER SPEAKERS	J1	E16	P3 A
435	GXL	18	GRN/BLK	16-04762	LEFT_REAR (-) AMP_TO_SLEEPER SPEAKERS	J1	F16	P2 G
A435	GXL	18	GRN/BLK	16-04762	LEFT_REAR (-) AMP_TO_SPLICE	J1	E7	S2 1
A435-1	GXL	18	GRN/BLK	16-04762	LEFT_REAR (-) SPLICE_TO_REAR_SEAT_AUDIO	S2	1	P1 G
A435-2	GXL	18	GRN/BLK	16-04762	LEFT_REAR (-) SPLICE_TO_RADIO	S2	1	J2 16
436	GXL	18	GRAY/BLK	16-04762	RIGHT_FRONT (-) AMP_TO_CAB_MID-BASS SPEAKERS	J1	F3	P4 C
A436	GXL	18	GRAY/BLK	16-04762	RIGHT_FRONT (-) AMP_TO_RADIO	J2	12	J1 F1
B436	GXL	18	GRAY/BLK	16-04762	RIGHT_FRONT (-) AMP_TO_CAB_HEADLINER SPEAKERS	J1	F6	P3 C
437	GXL	18	VIO/BLK	16-04762	RIGHT_REAR (-) AMP_TO_SLEEPER SPEAKERS	J1	F13	P2 F
A437	GXL	18	VIO/BLK	16-04762	RIGHT_REAR (-) AMP_TO_SPLICE	J1	E4	S1 1
A437-1	GXL	18	VIO/BLK	16-04762	RIGHT_REAR (-) SPLICE_TO_REAR_SEAT_AUDIO	S1	1	P1 E
A437-2	GXL	18	VIO/BLK	16-04762	RIGHT_REAR (-) SPLICE_TO_RADIO	J2	10	S1 1
A671	GXL	18	WHT/RED	16-04762	SUB1 (+) AMP_TO_SLEEPER SPEAKERS	J1	F11	P2 B
B671	GXL	18	WHT/RED	16-04762	SUB2 (+) AMP_TO_SLEEPER SPEAKERS	J1	F5	P2 D
A672	GXL	18	WHT	16-04762	SUB1 (-) AMP_TO_SLEEPER SPEAKERS	J1	F10	P2 A
B672	GXL	18	WHT	16-04762	SUB2 (-) AMP_TO_SLEEPER SPEAKERS	J1	F4	P2 C
724	GXL	18	BLU	16-04762	RSA_ENABLE_AMP_TO_SPLICE	J1	E10	S6 1
724-1	GXL	18	BLU	16-04762	RSA_ENABLE_SPLICE_TO_REAR_SEAT_AUDIO	S6	1	P1 A
724-2	GXL	18	BLU	16-04762	RSA_ENABLE_SPLICE_TO_RADIO	S6	1	J3 3
725	GXL	18	WHT/BLU	16-04762	RSA_ANALOG_RADIO_TO_REAR_SEAT_AUDIO	J3	6	P1 B

