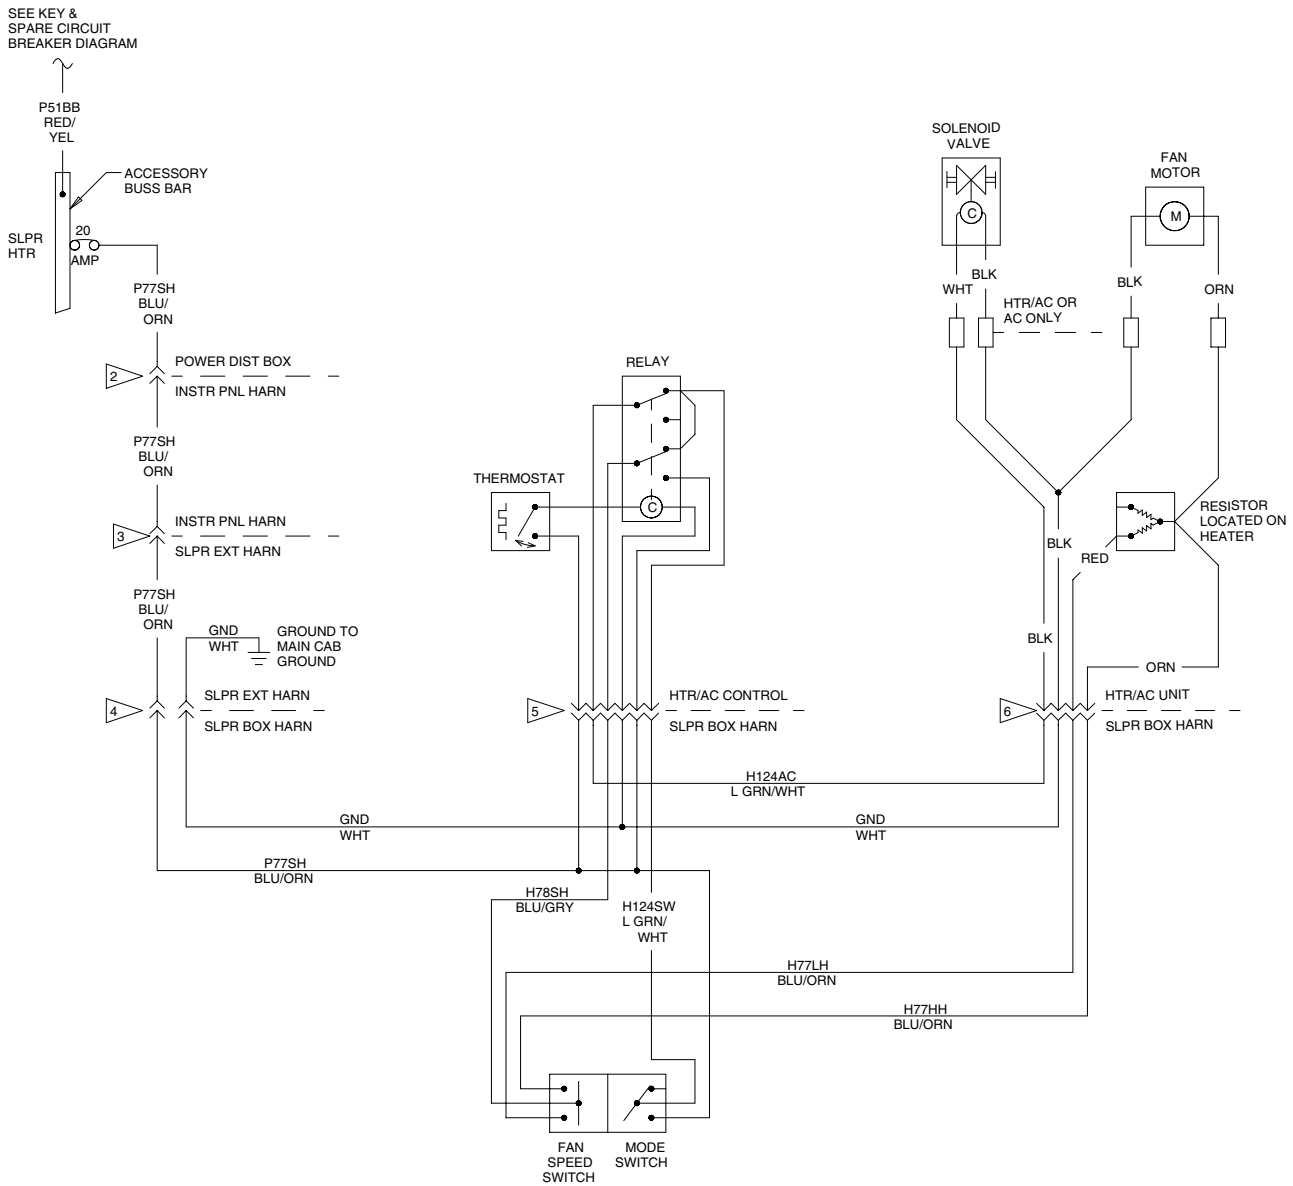

1) USE WITH HEATER/AC, A/C ONLY AND HEATER ONLY ON W9B, T6A OR T8 WITH 1524 (60") SLEEPER AND STRUCTURAL FOAM STORAGE/CLOSET COMPARTMENTS. FOR HEATER ONLY OPTIONS THE SOLENOID VALVE DOES NOT COME WITH THE HEATER UNIT. THE CIRCUIT FUNCTION IS AS FOLLOWS:

FOR HEATER/AC AND AC ONLY, MODE SWITCH UP - FAN CYCLES ON AND OFF. MODE SWITCH DOWN - SOLENOID CYCLES ON AND OFF FAN RUNS CONTINUOUSLY.

FOR HEATER ONLY, MODE SWITCH UP - FAN CYCLES ON AND OFF. MODE SWITCH DOWN - FAN RUNS CONTINUOUSLY.

2 GREY 8 WAY MOLDED CONNECTOR LOCATED AT POWER DISTRIBUTION BOX. SEE R115-4017 FOR PIN CONFIGURATION.

3 BLACK 8 WAY MOLDED CONNECTOR LOCATED AT FIREWALL. SEE R115-4014 FOR PIN CONFIGURATION.

4 BLACK 3 WAY HARDSHELL CONNECTOR LOCATED UNDER SLEEPER BOX.

5 BLACK 6 WAY HARDSHELL CONNECTOR LOCATED BEHIND LEFT HAND SLEEPER ACCESSORY PANEL.

6 BLACK 4 WAY HARDSHELL CONNECTOR LOCATED IN SLEEPER HEATER/AC COMPARTMENT.

FOR SERVICE PARTS OR INVENTORY BALANCE ONLY

SUPERSEDED BY P94-1333

PROD	X
SERV	