

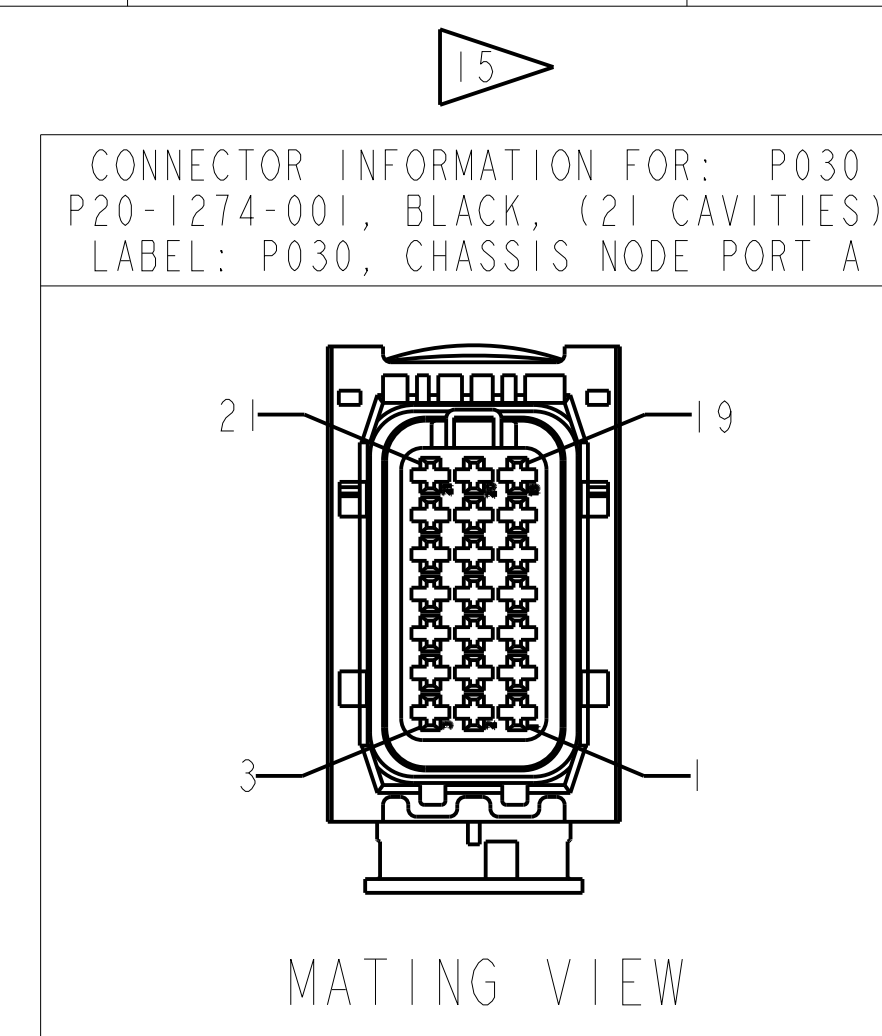
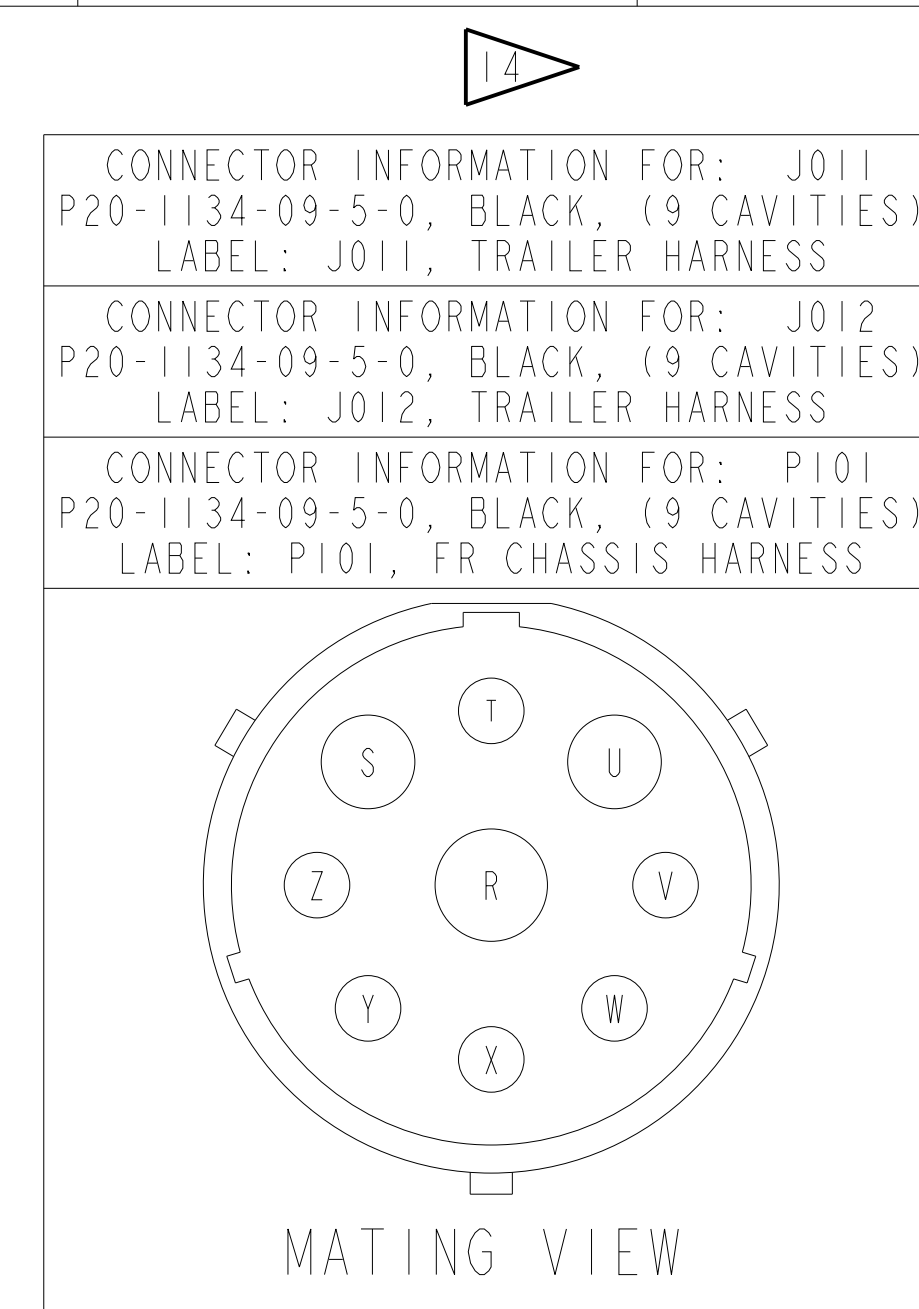
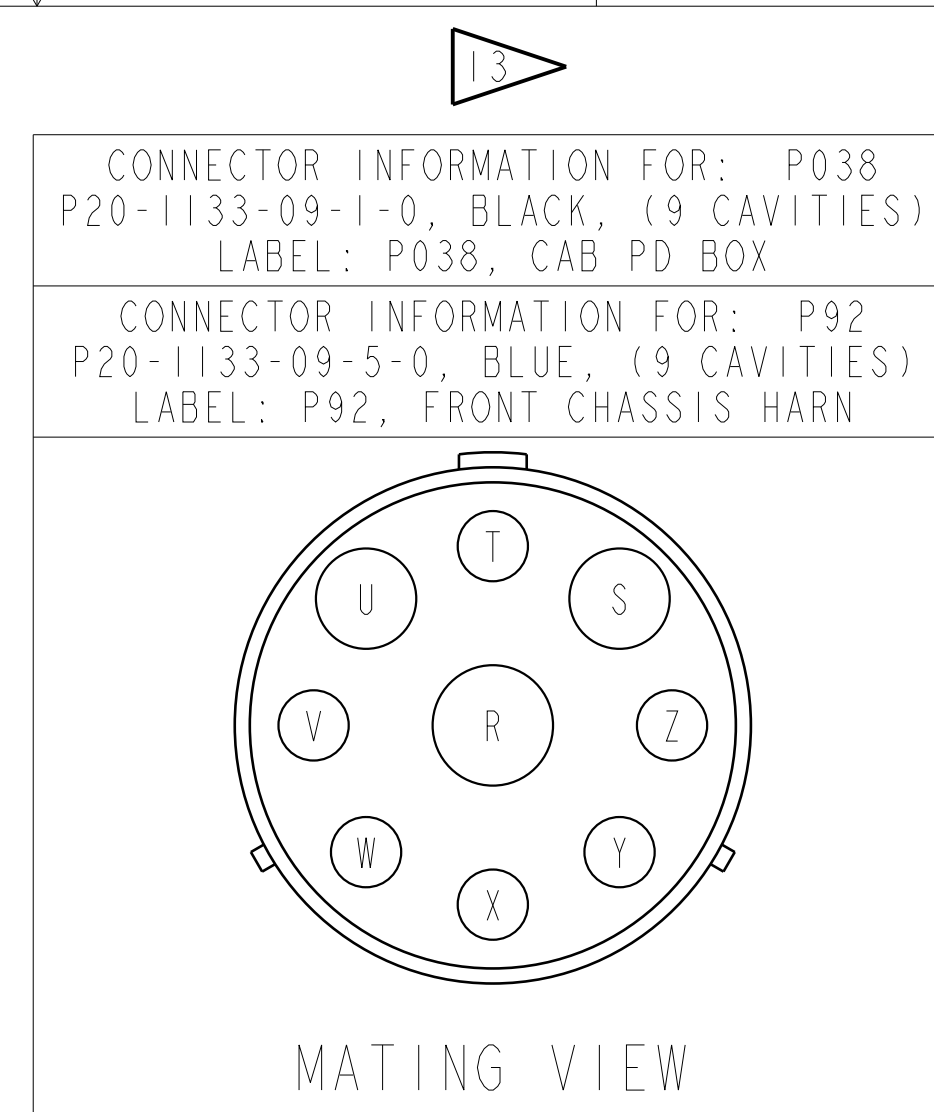
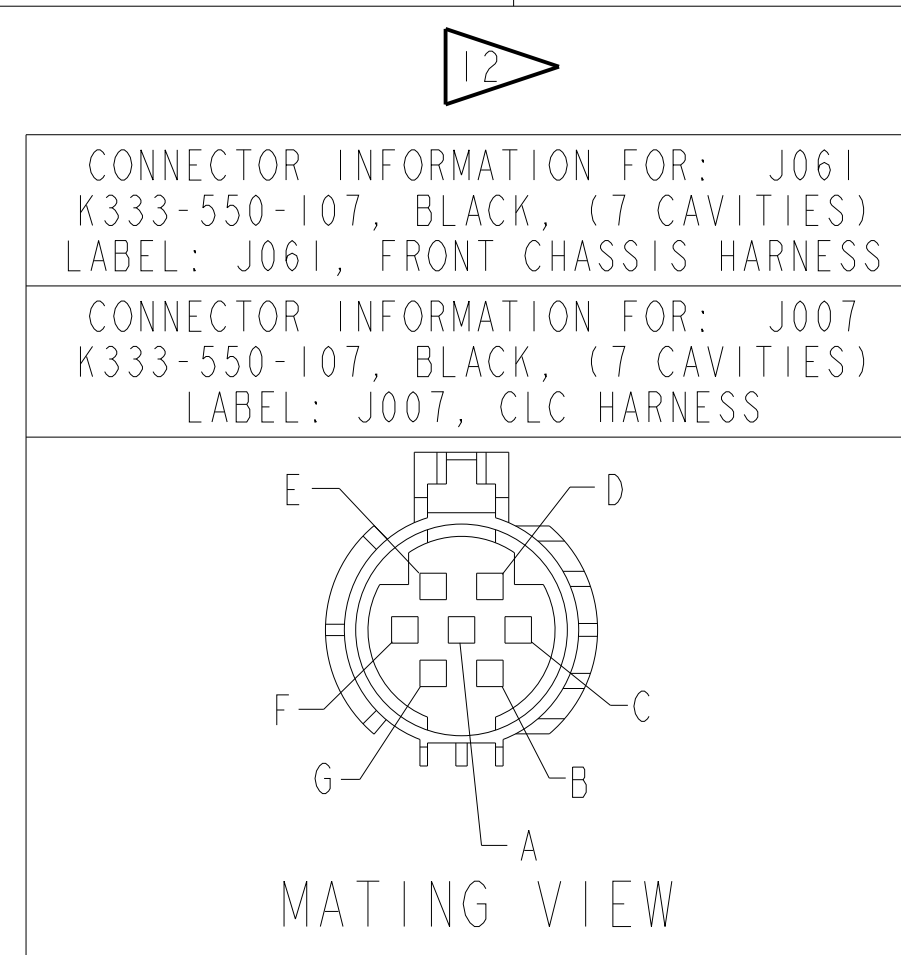
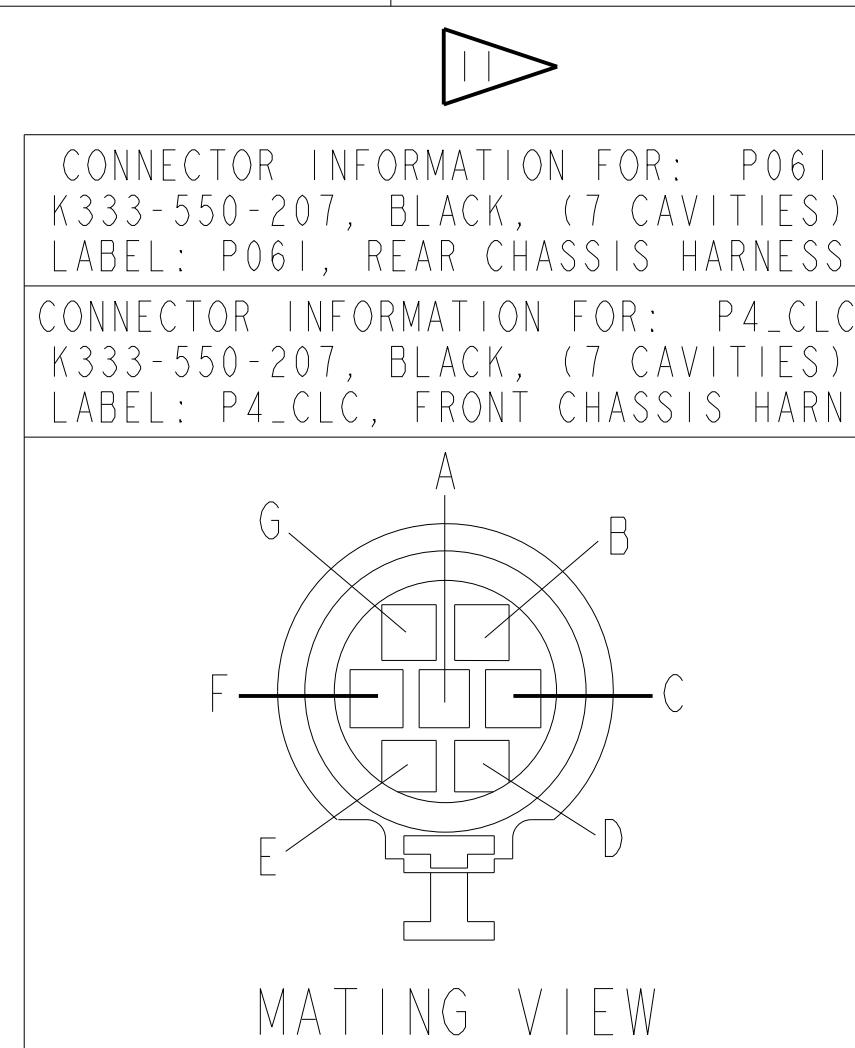
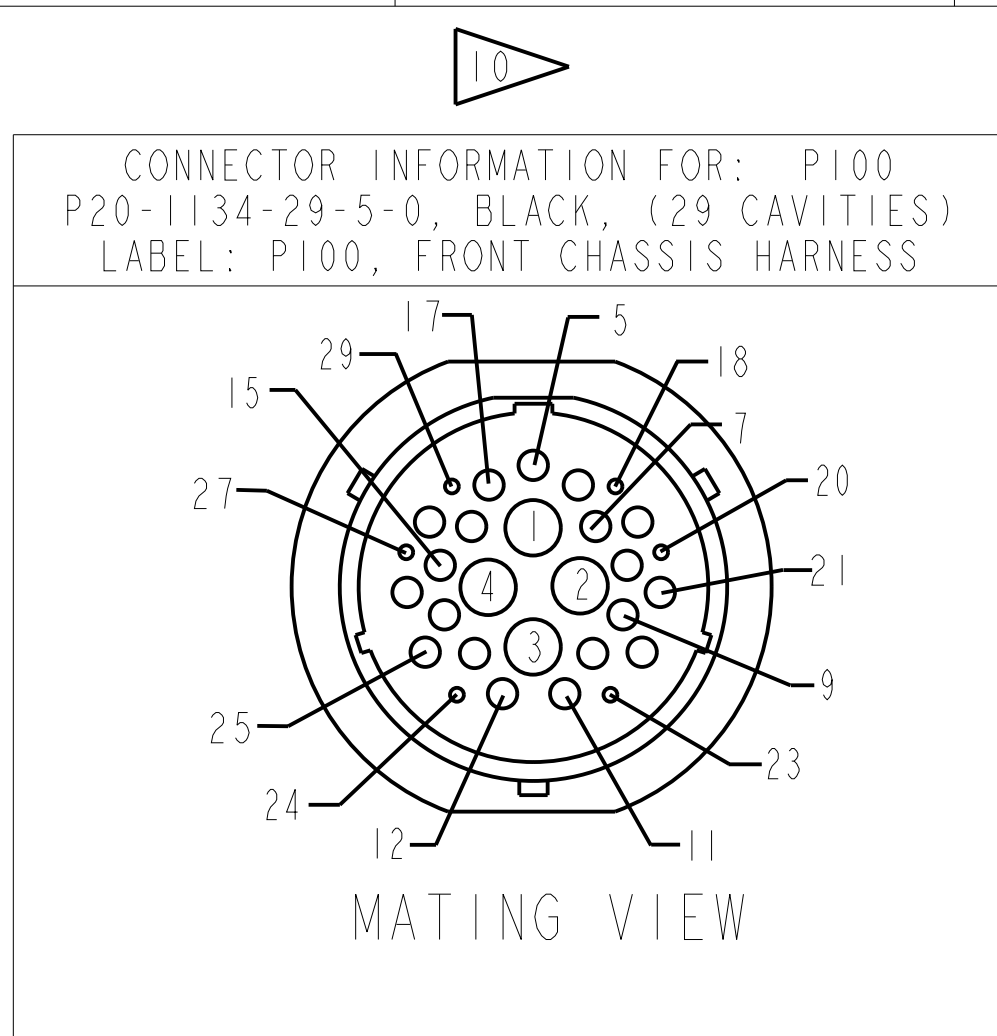
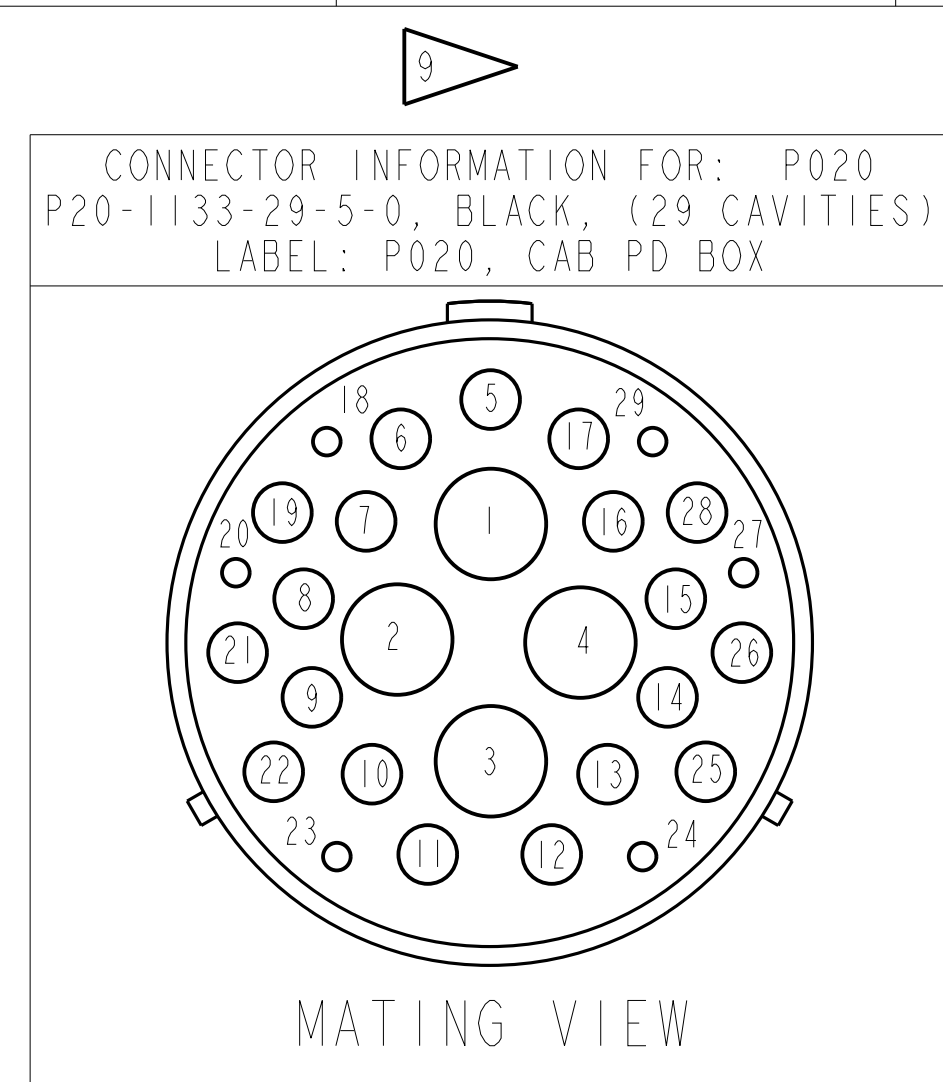
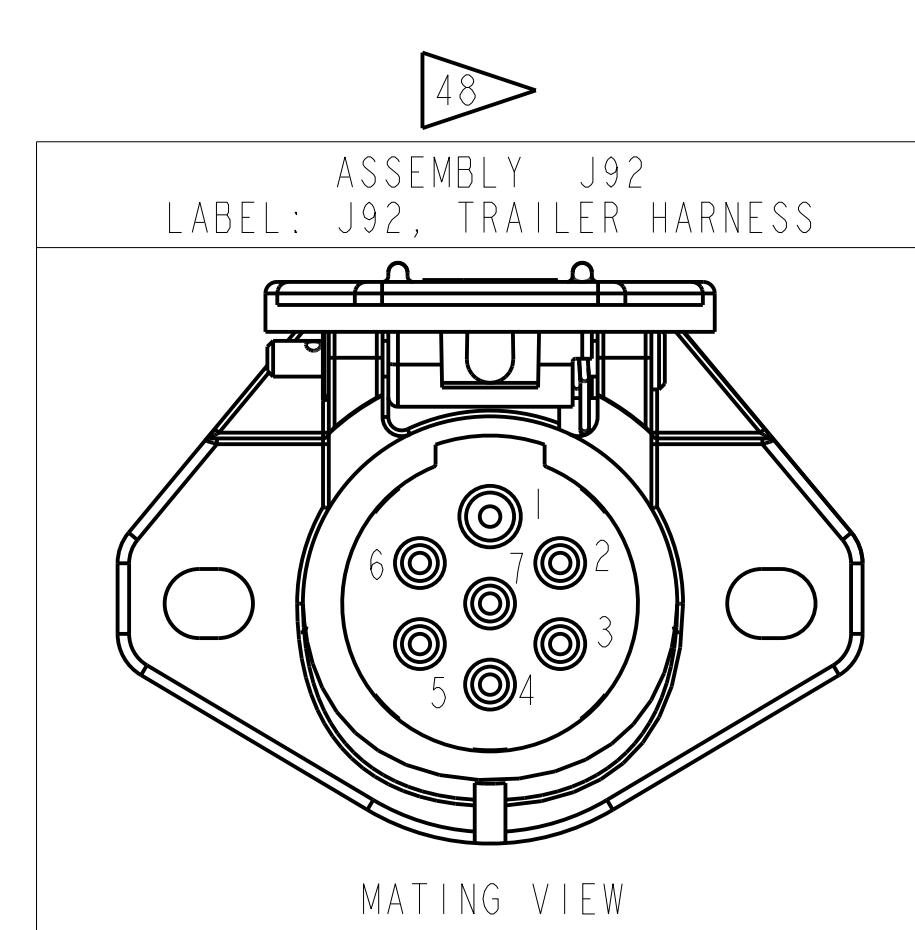
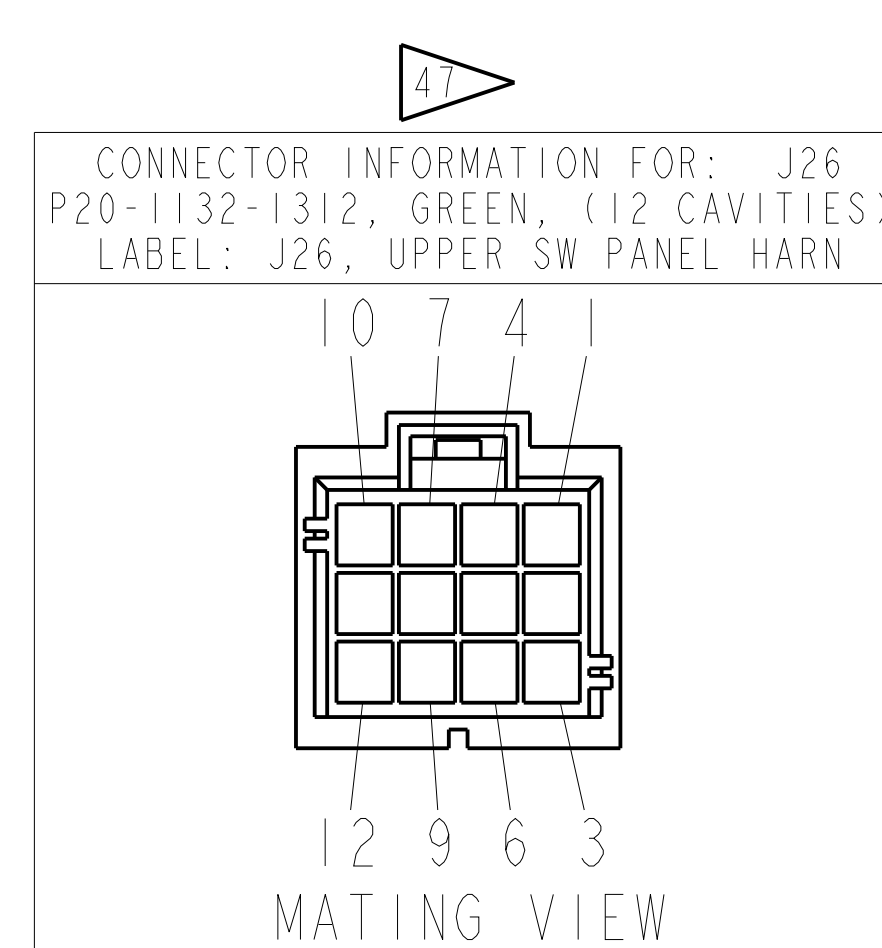
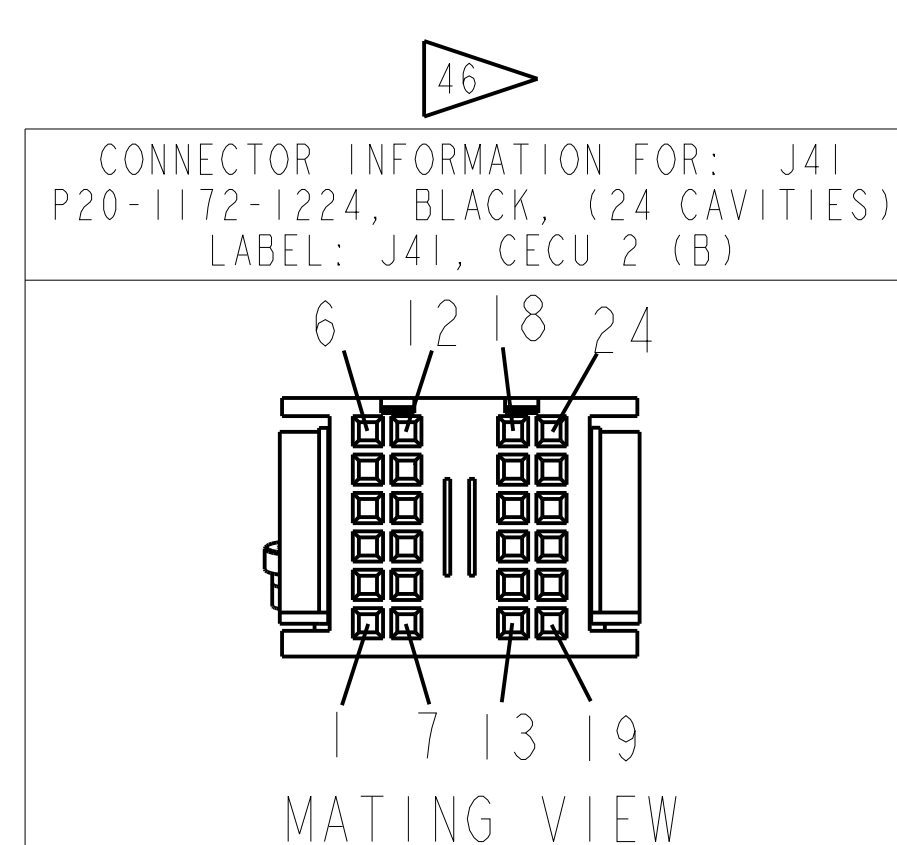
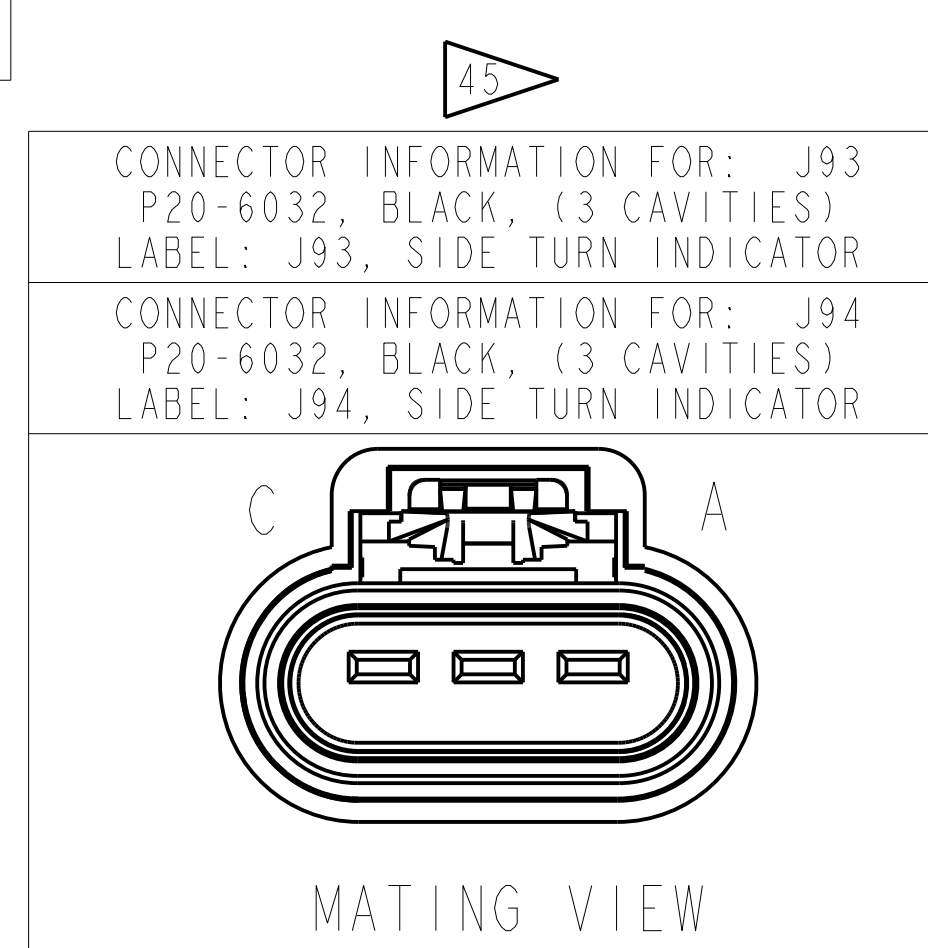
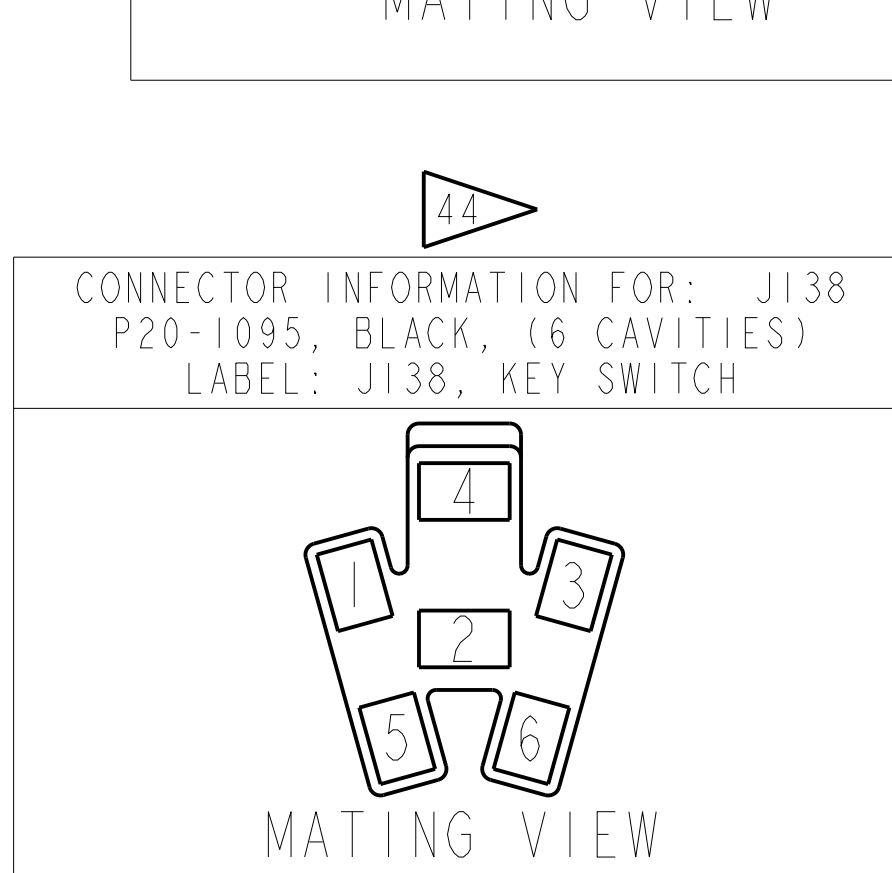
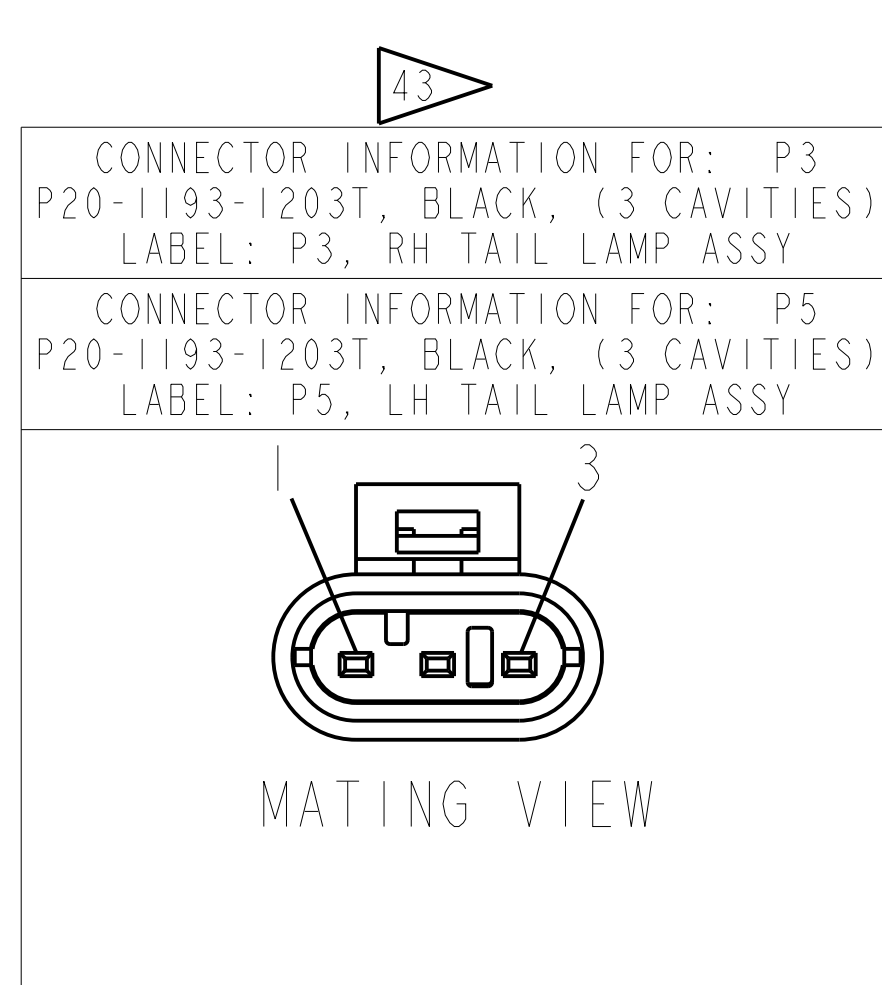
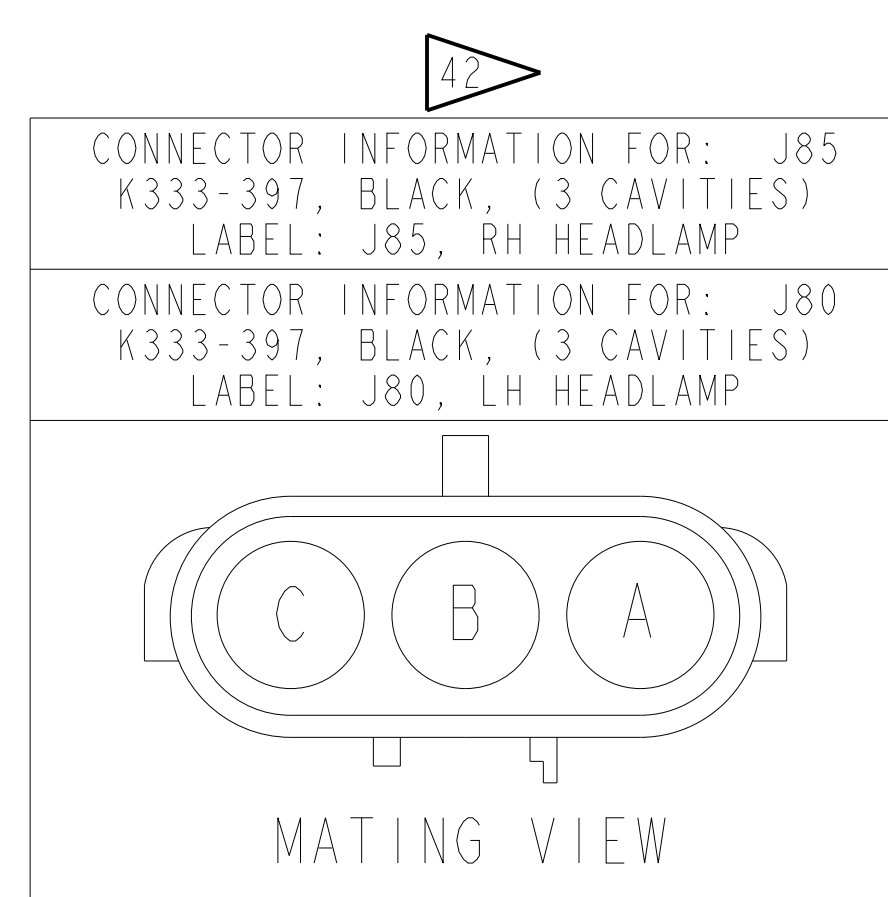
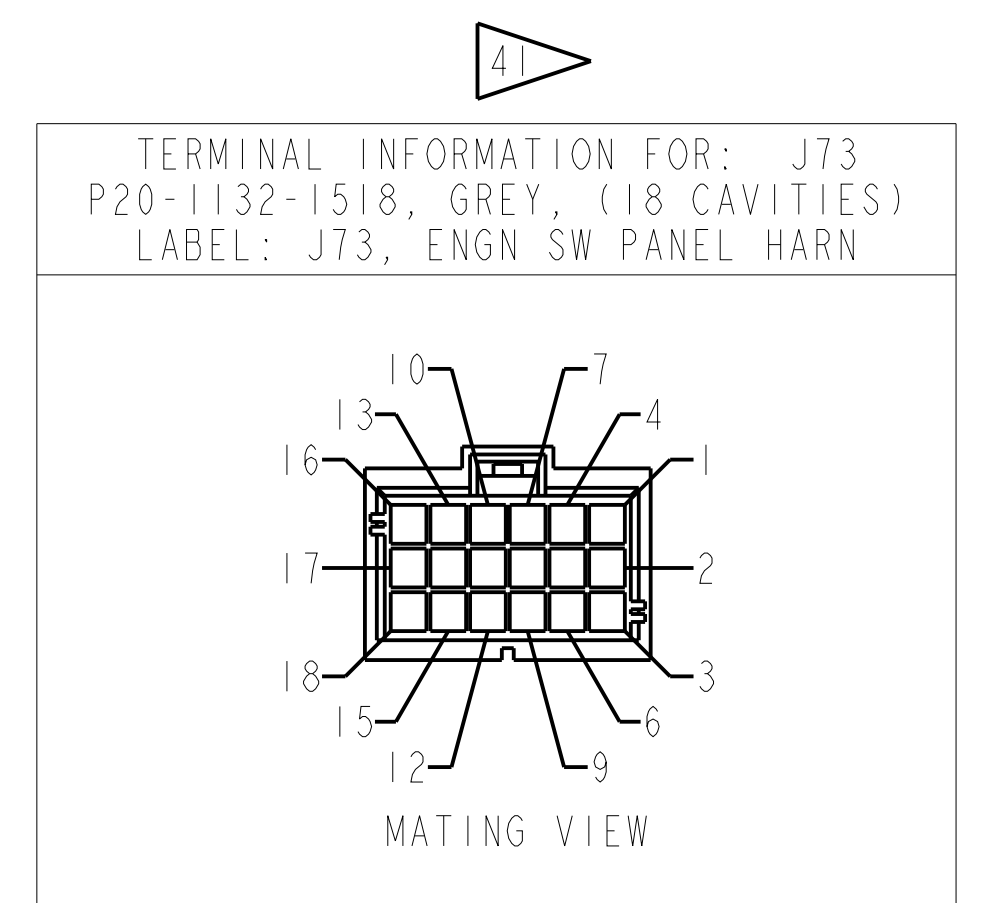
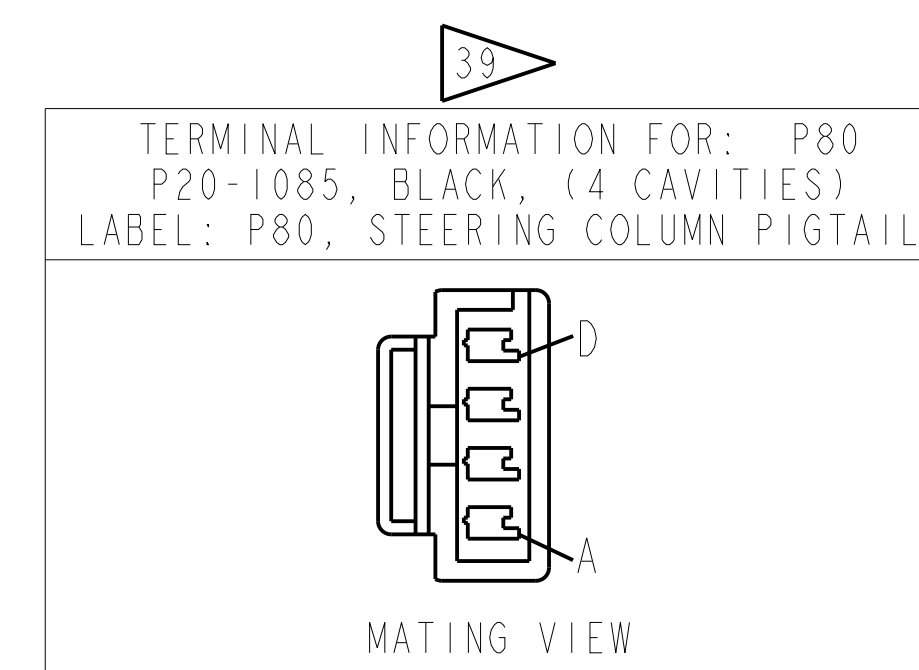
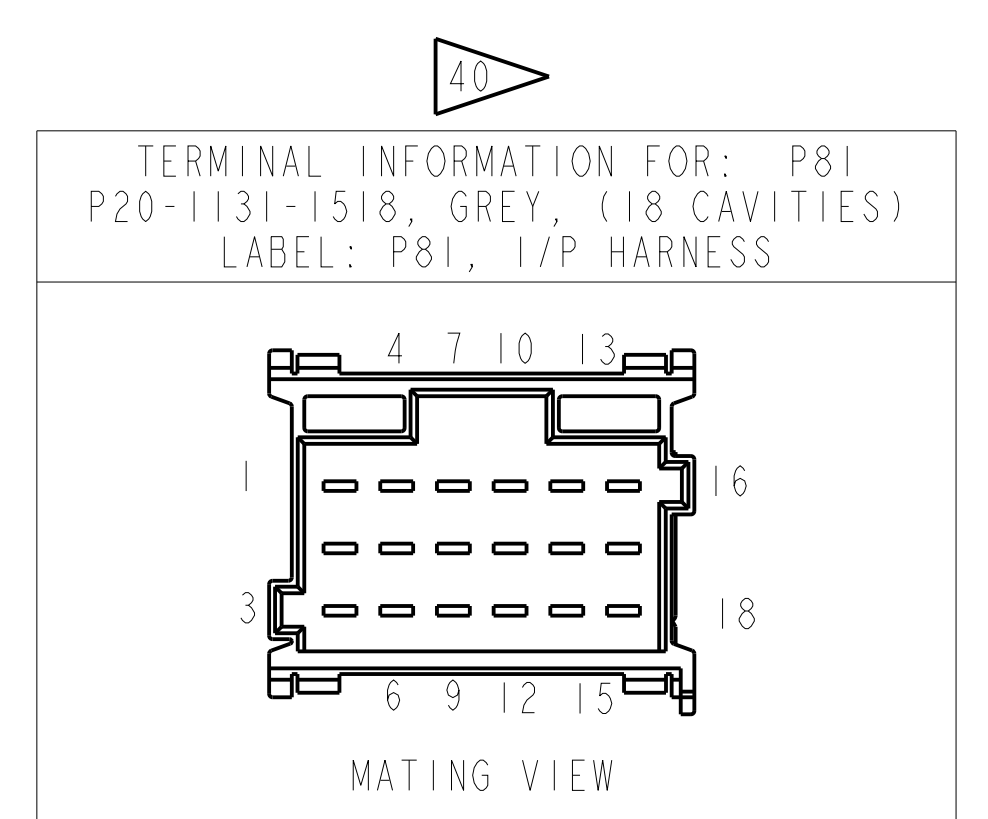
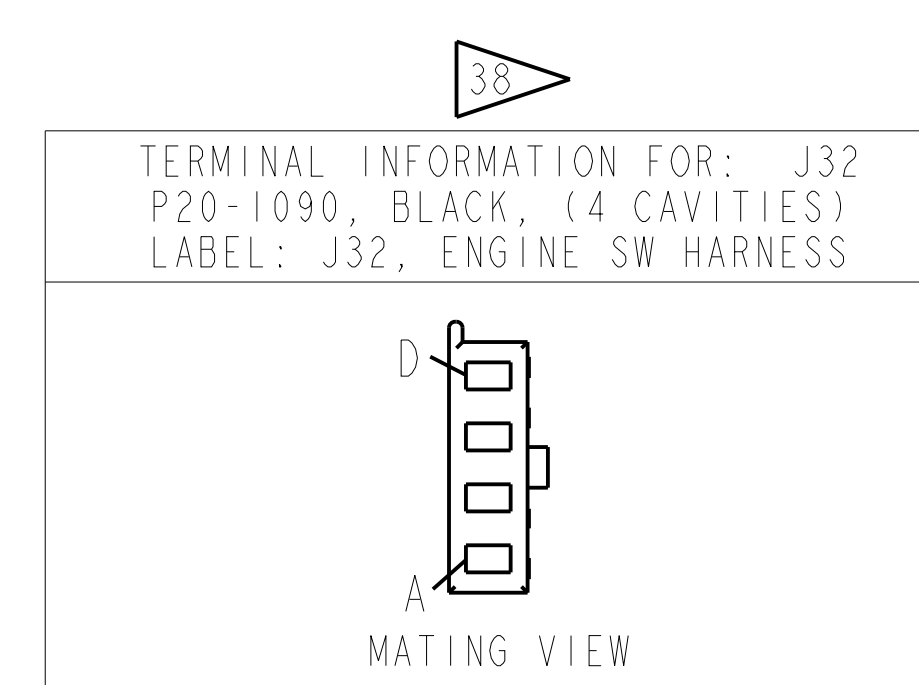
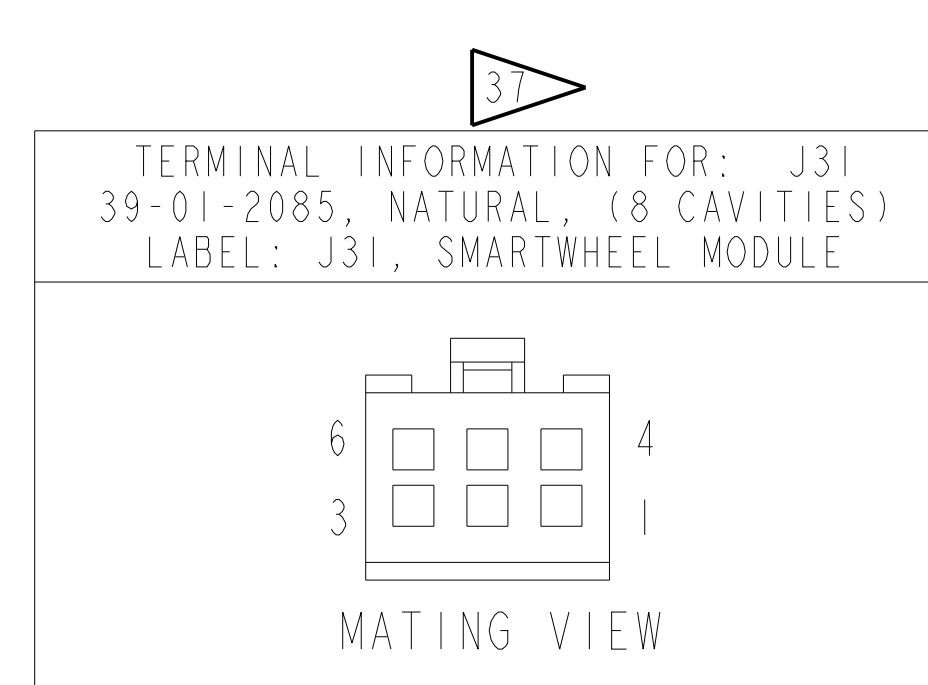
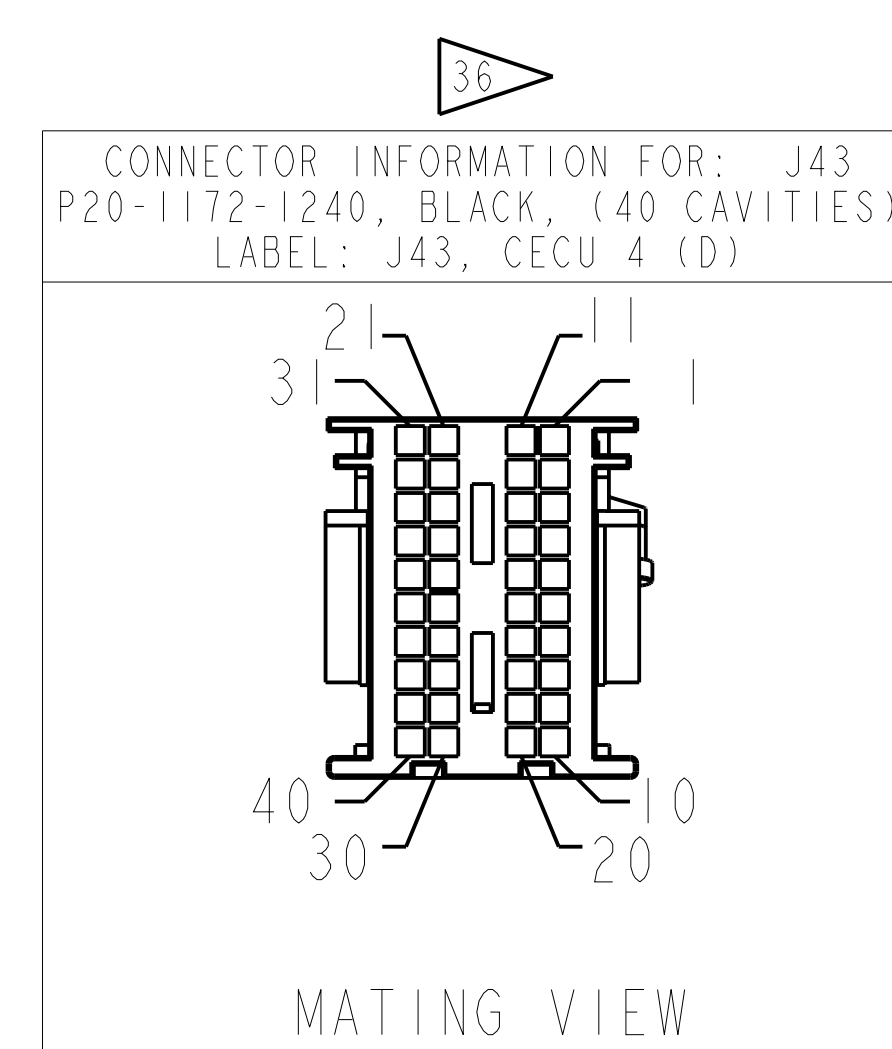
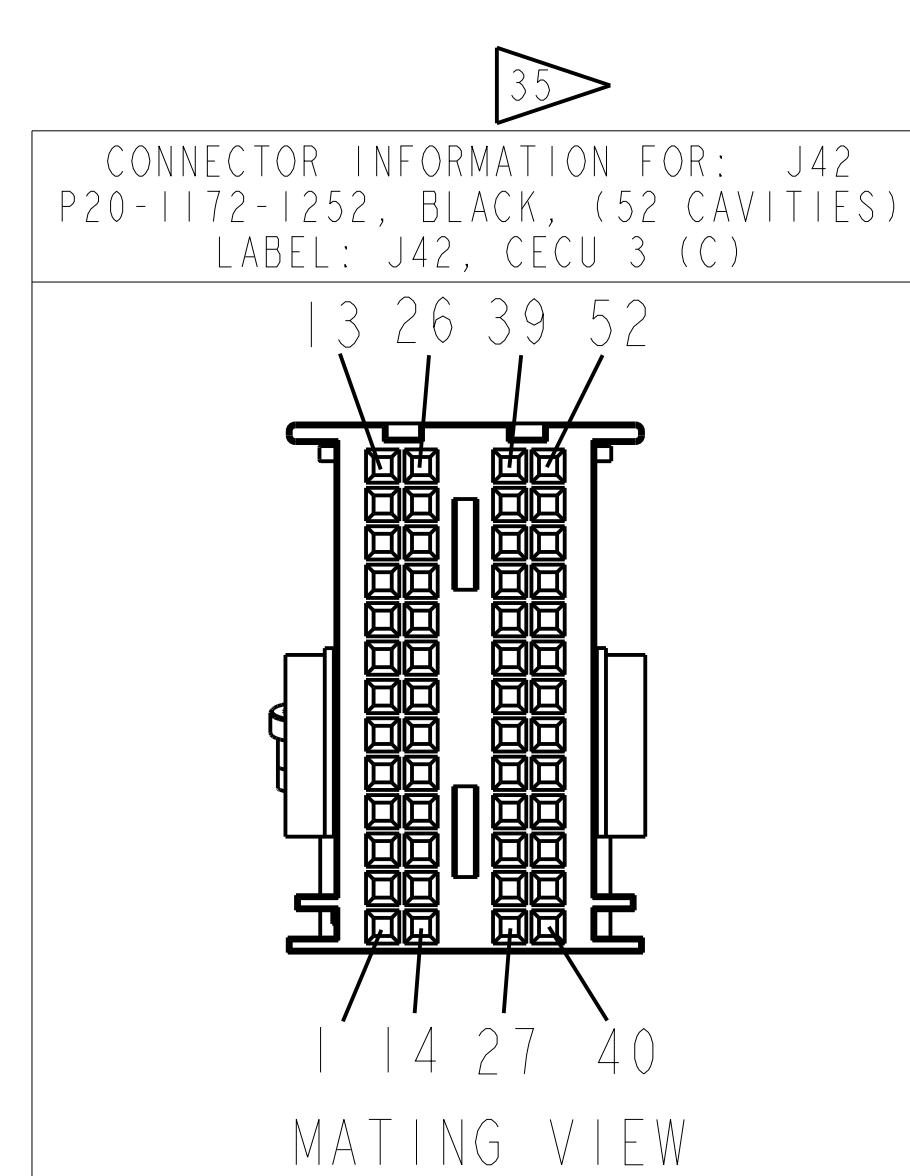
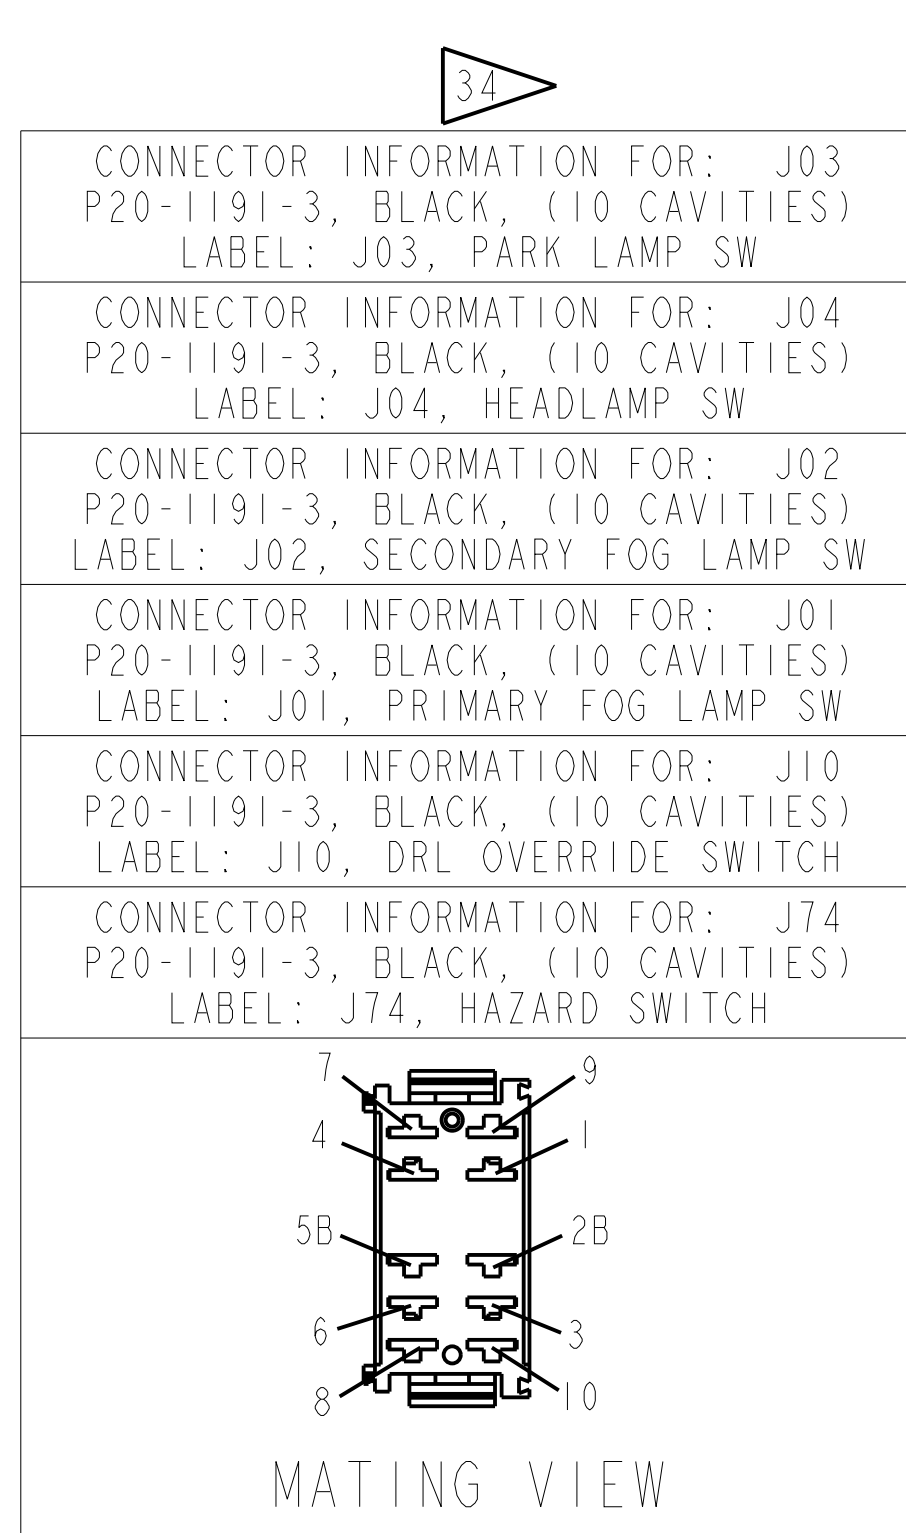
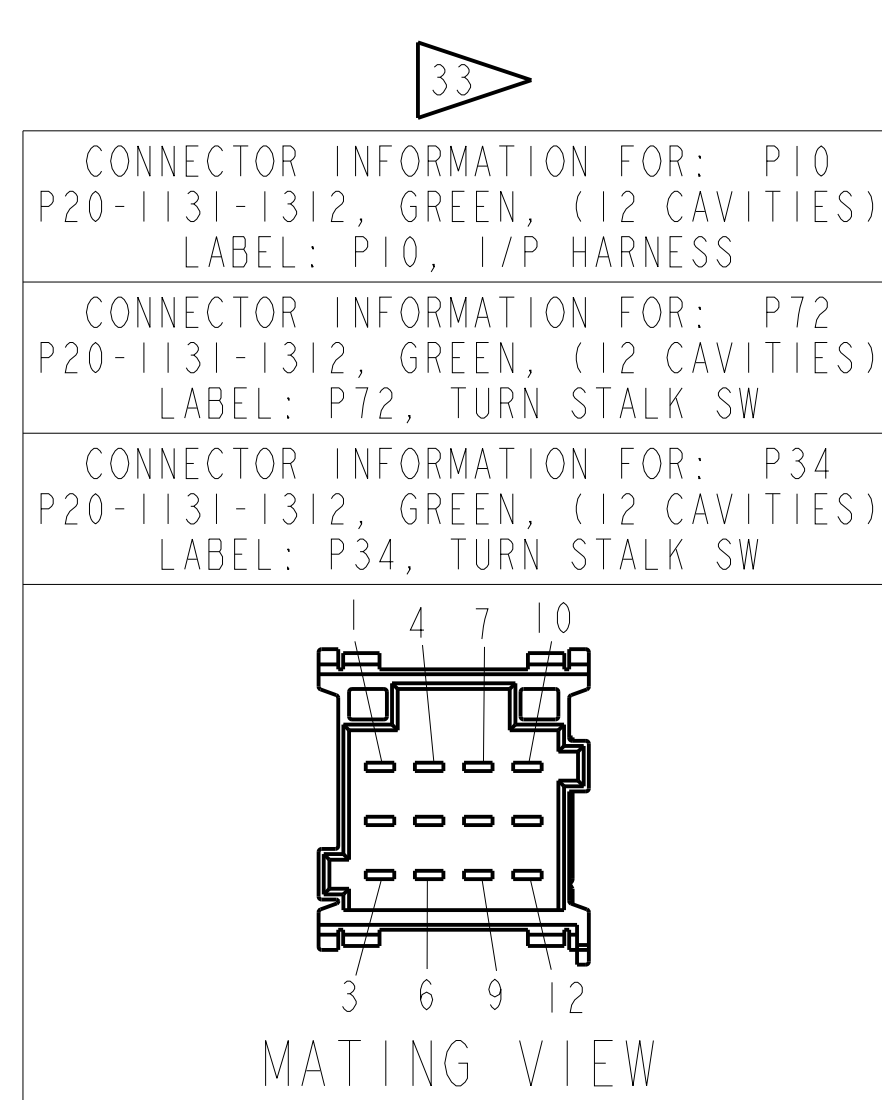
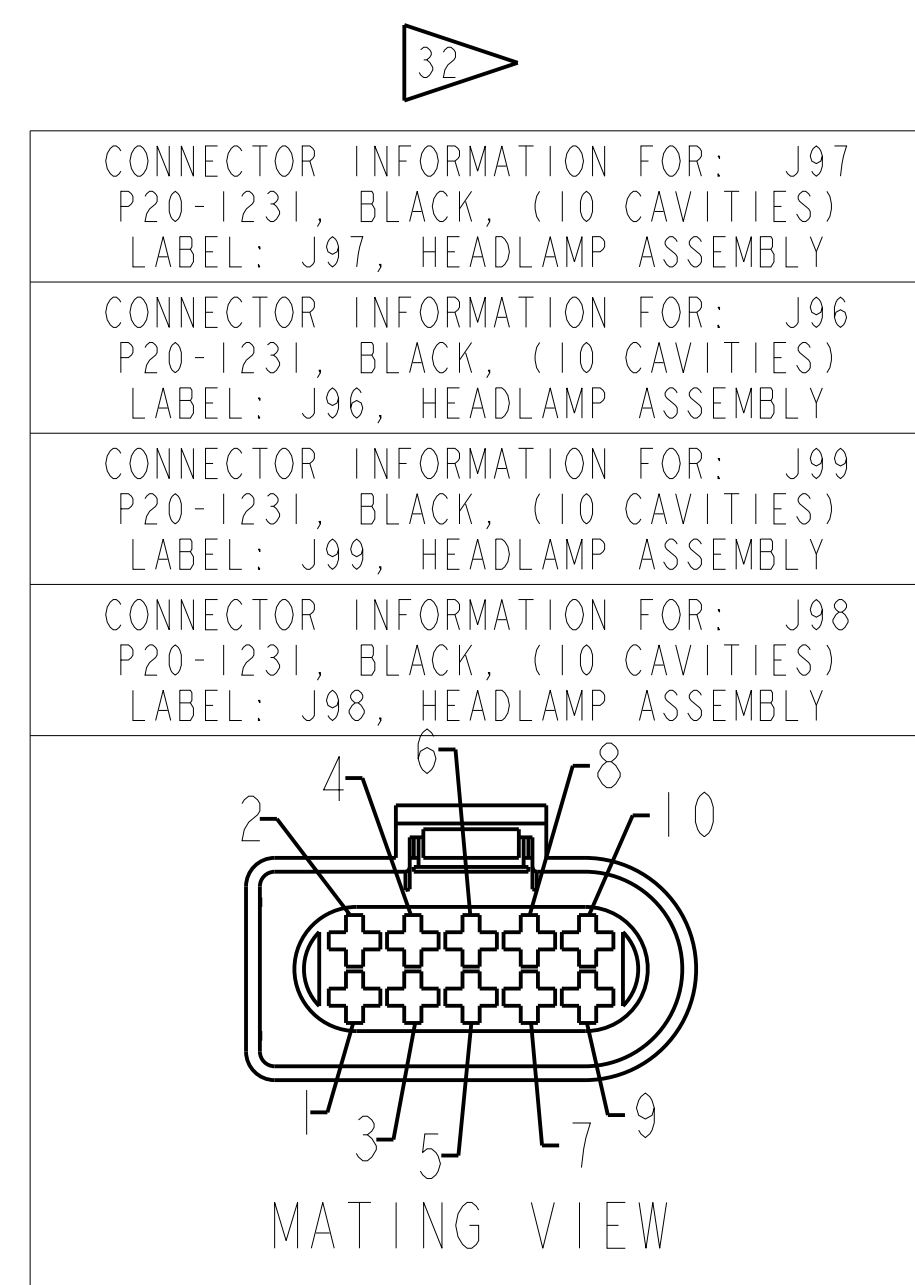
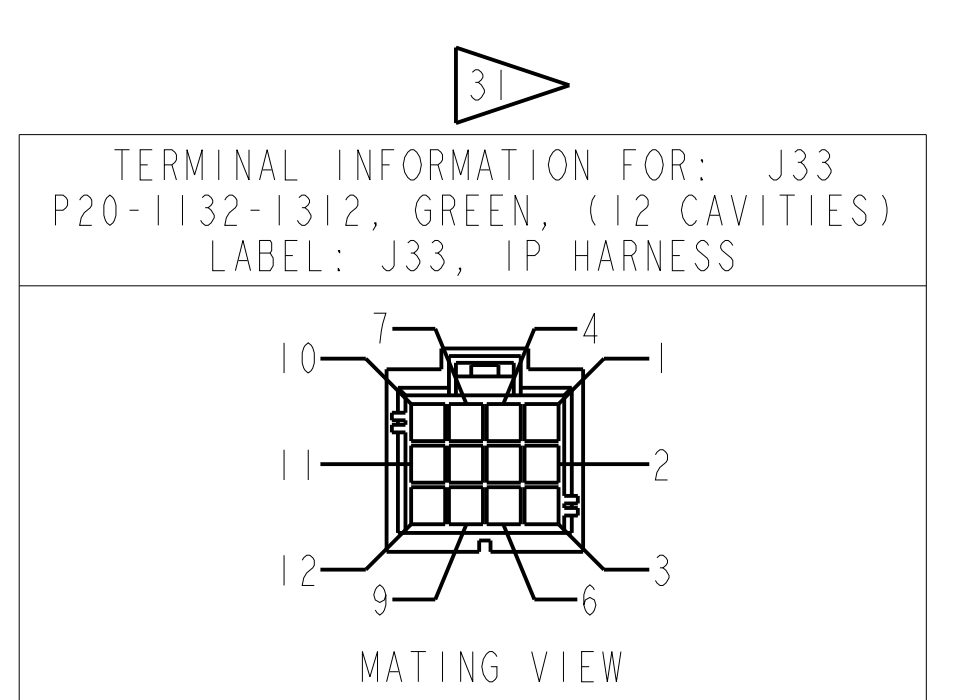
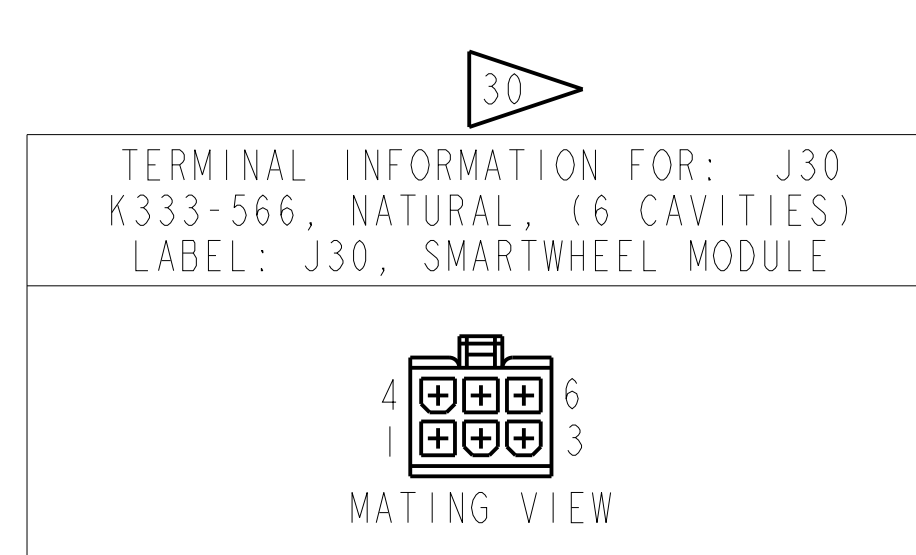
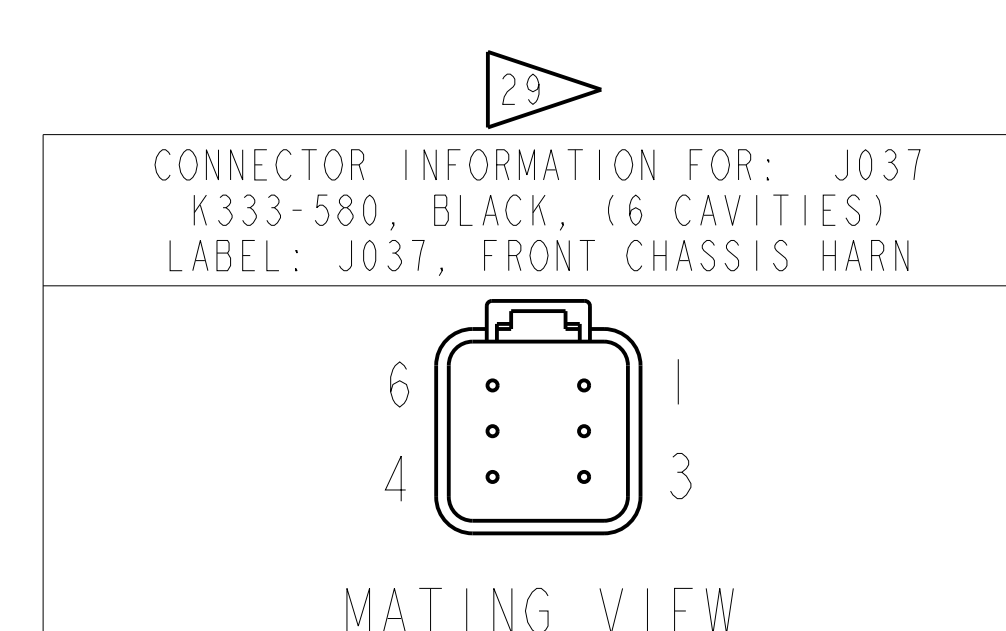
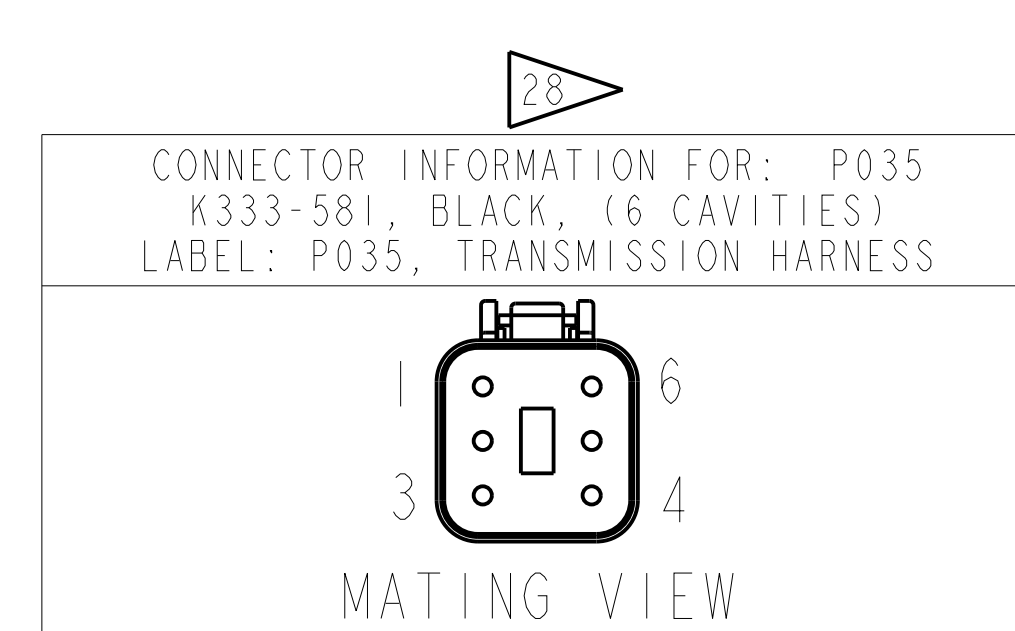
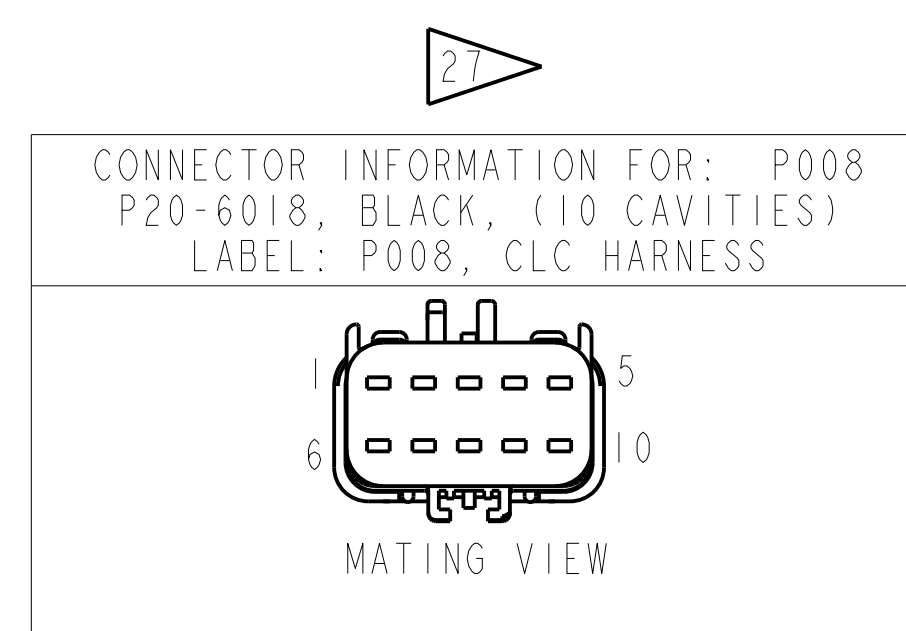
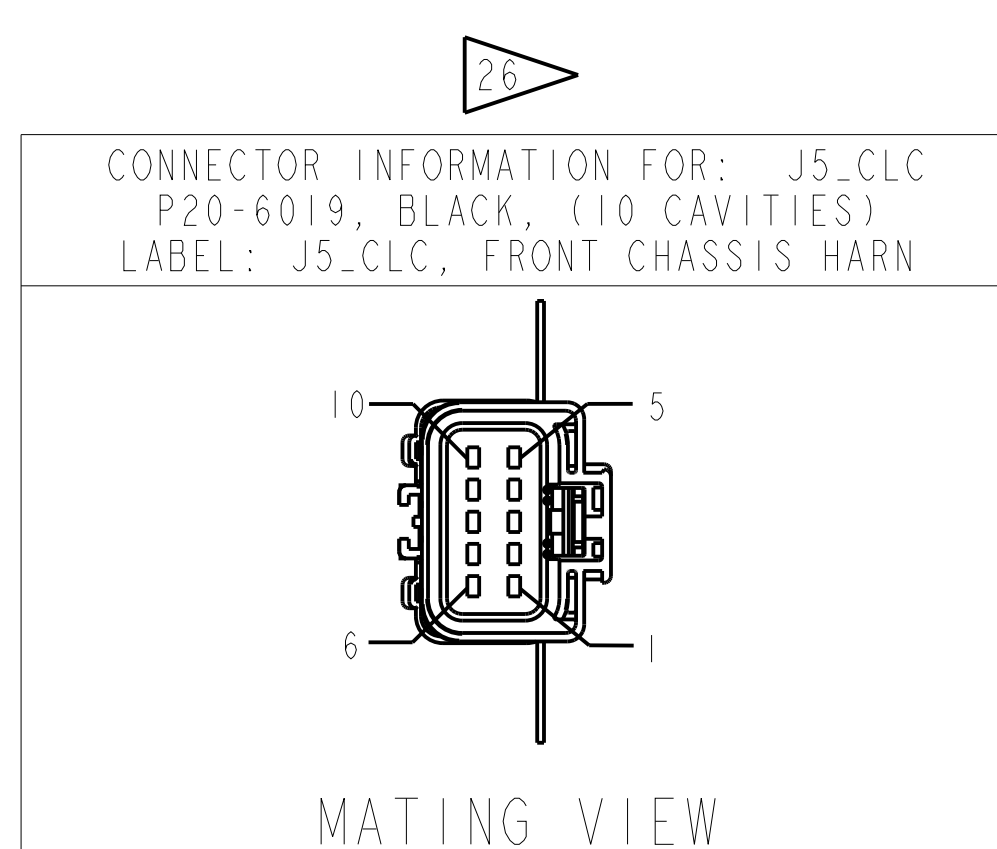
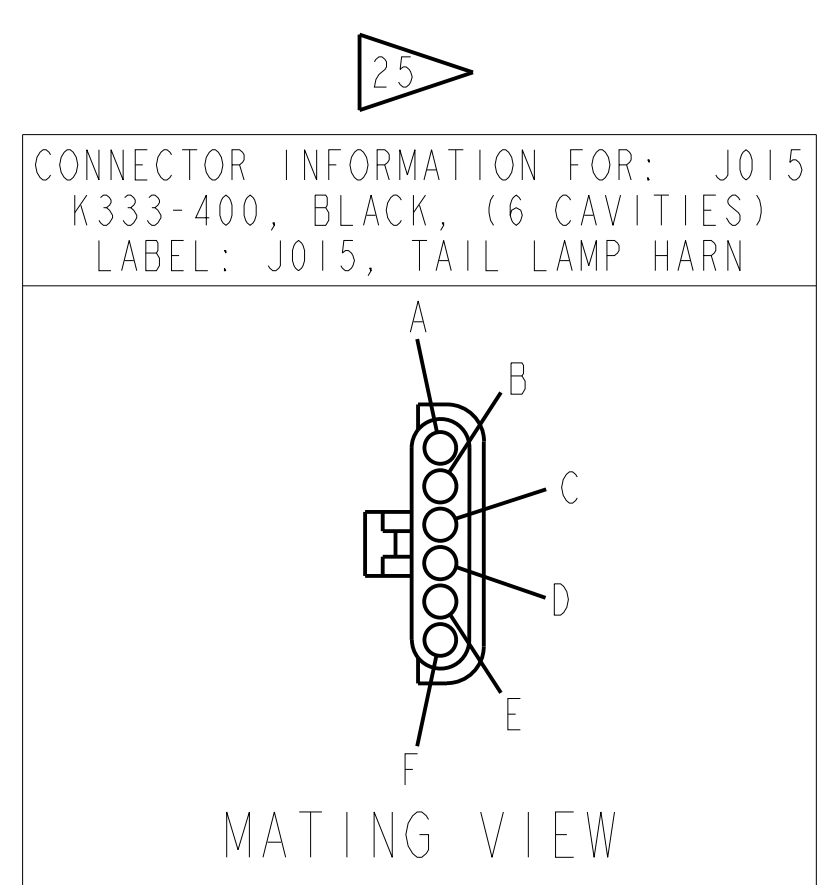
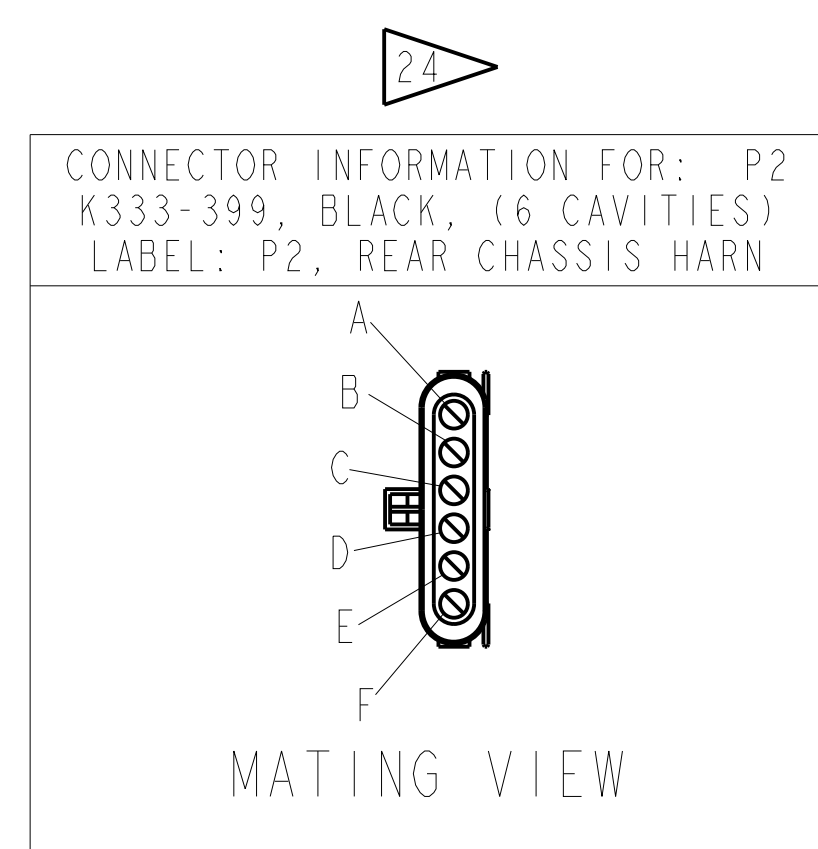
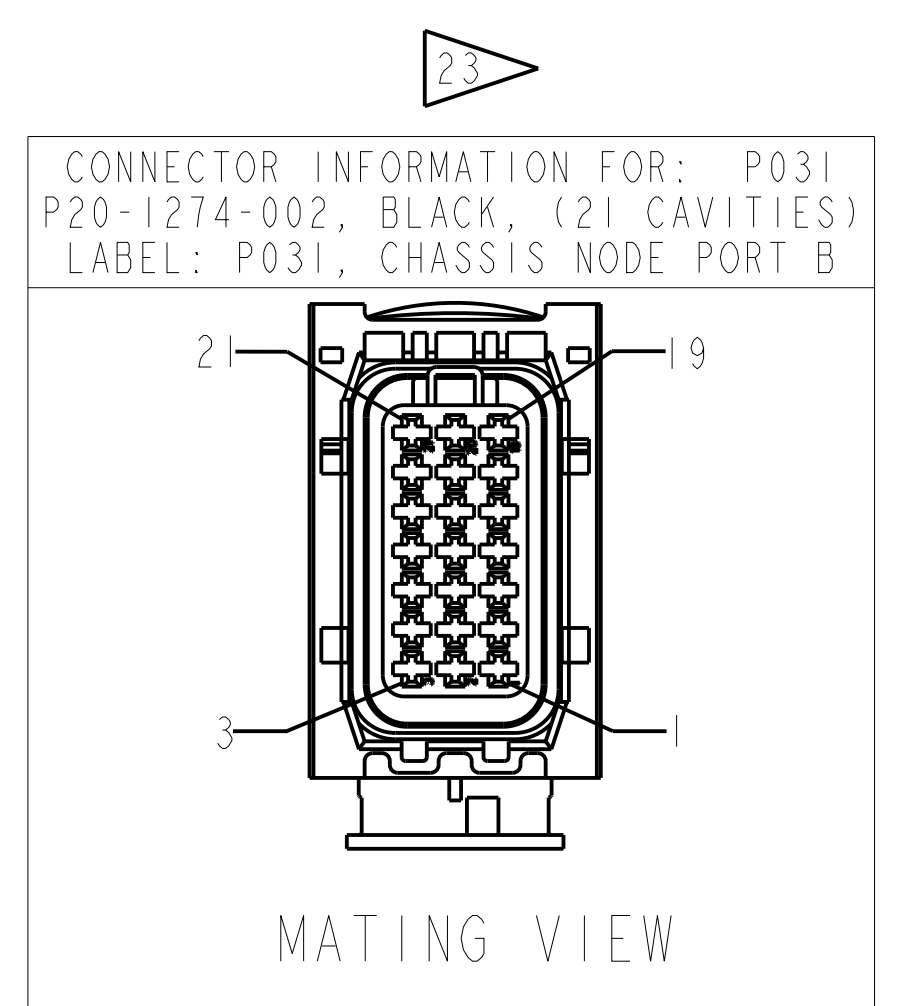
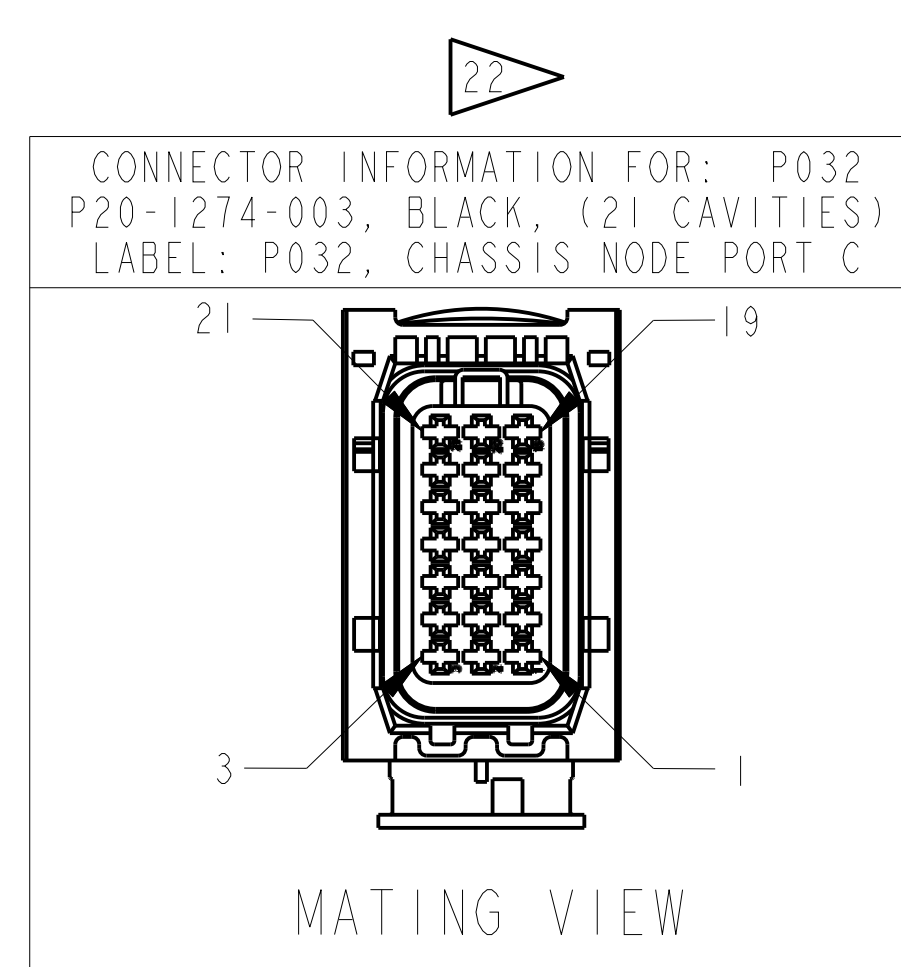
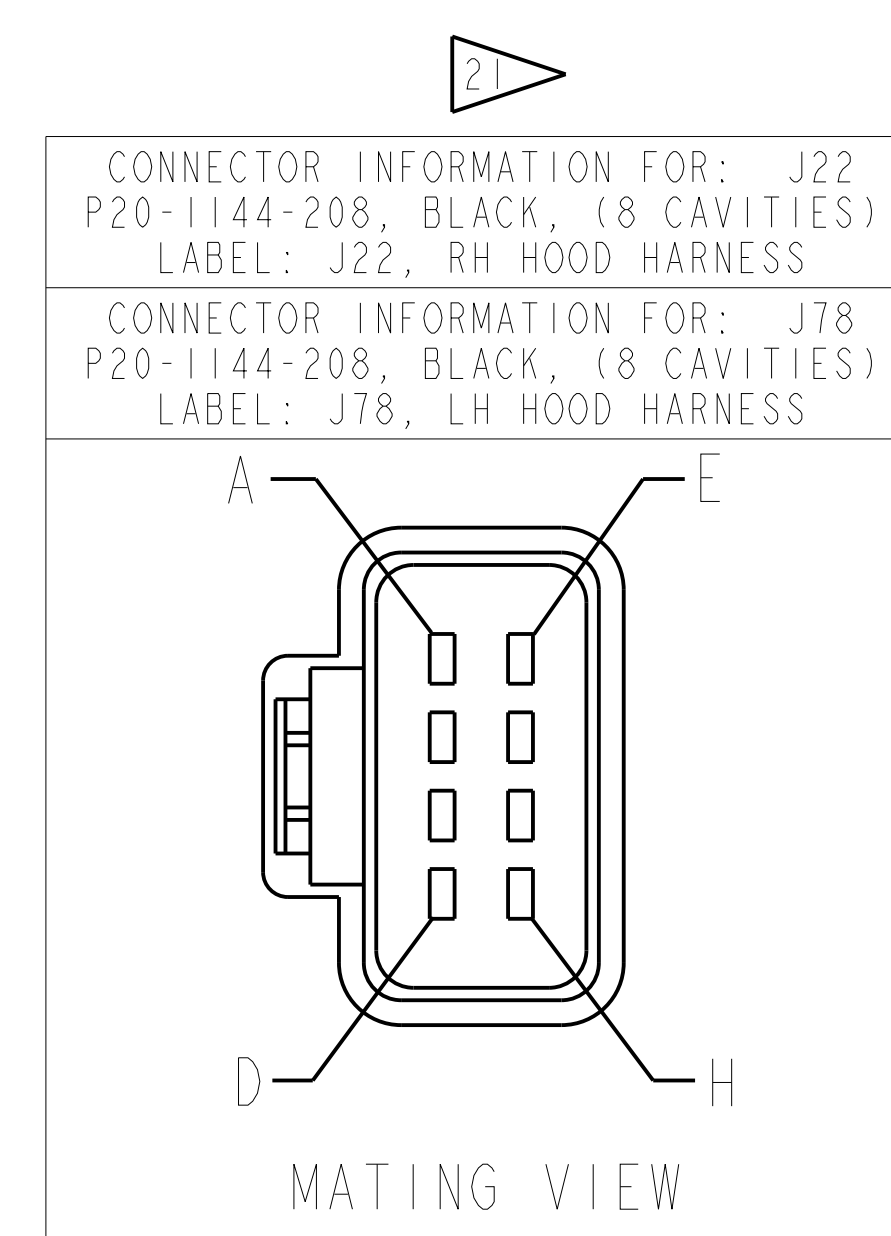
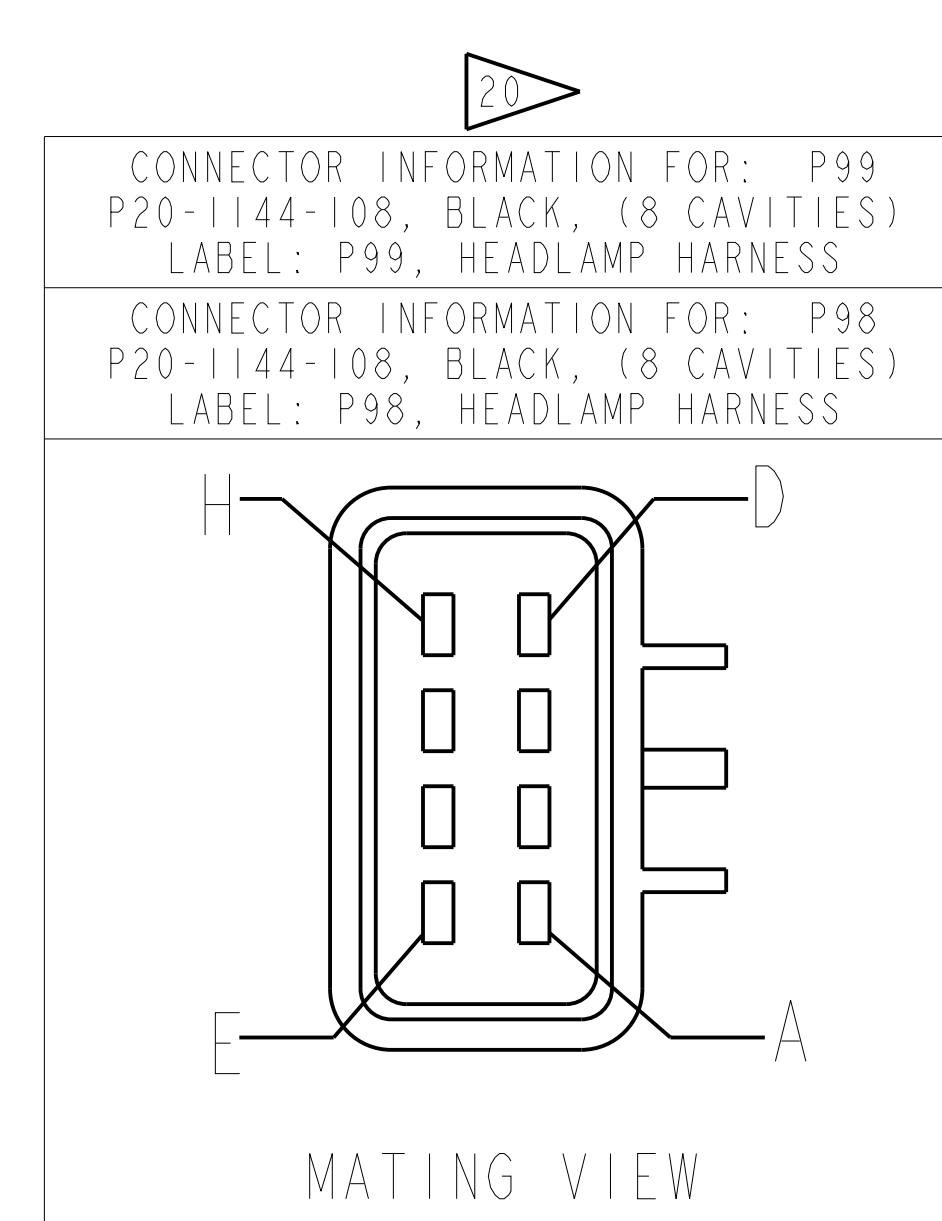
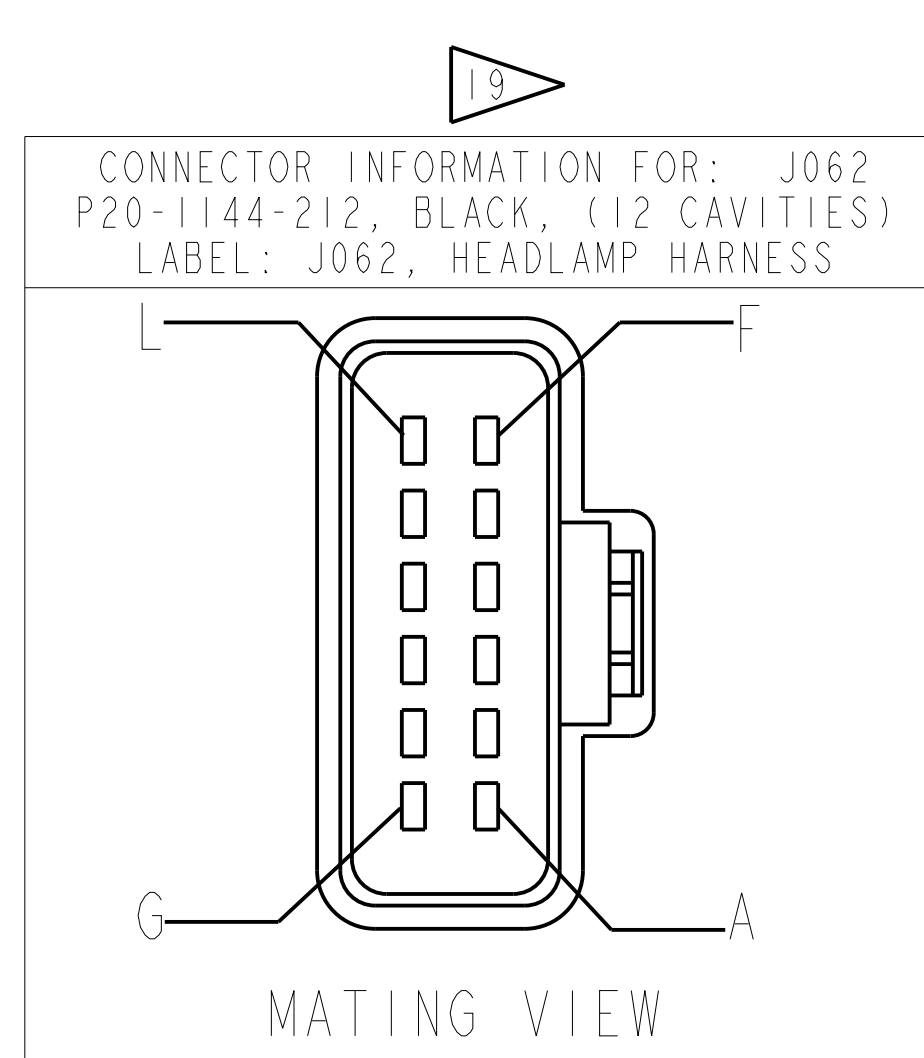
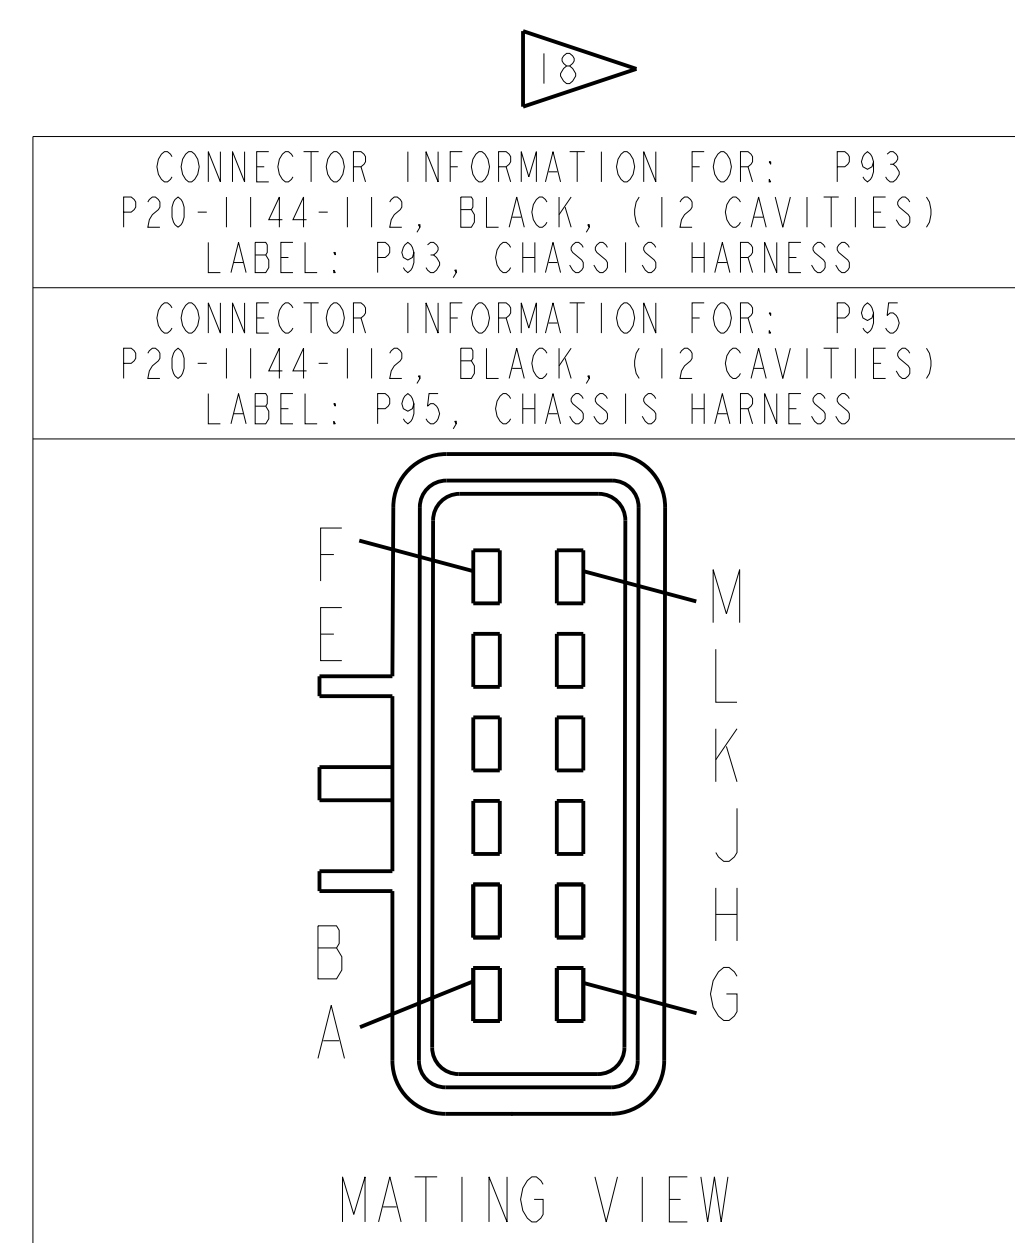



[illegible]

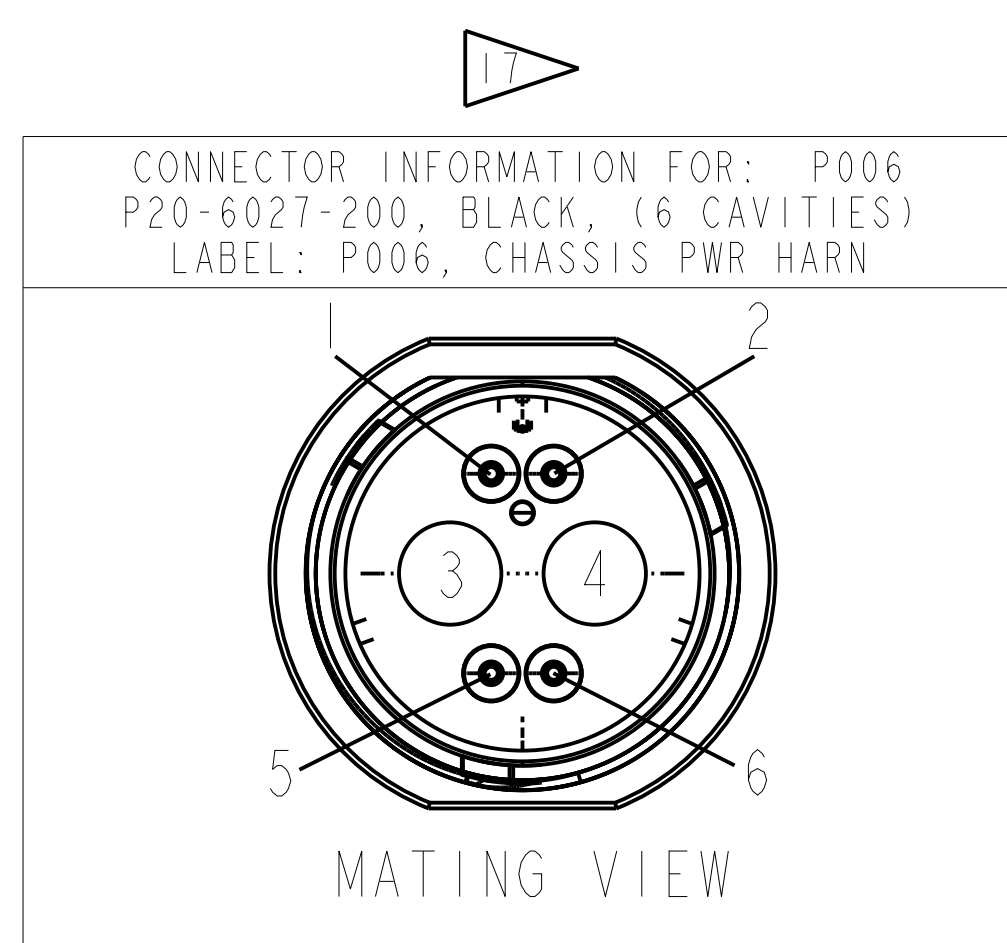

USAGE NOTE:  
USE ON T4/W9/T6/T8/C5 WITH  
2010 ENGINES AND NAMUX III  
INSTRUMENTATION.

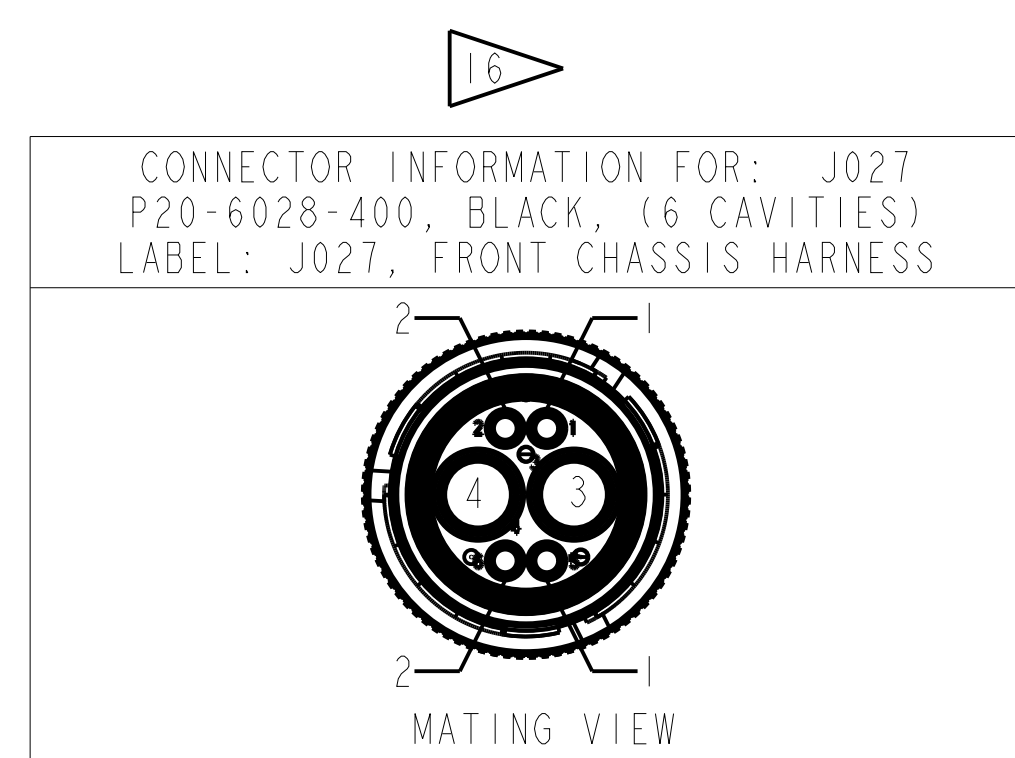

UNLESS OTHERWISE NOTED  
THIS DRAWING AND THE  
INFORMATION CONTAINED  
HEREIN ARE PROPRIETARY  
TO PACCAR INC.  
IT SHALL NOT BE  
REPRODUCED, COPIED OR  
DISCLOSED, IN WHOLE OR  
IN PART, OR USED FOR  
MANUFACTURE OR FOR  
OTHER PURPOSE WITHOUT  
THE WRITTEN PERMISSION  
OF PACCAR INC.

TITLE			
DIAG- EXTERIOR LIGHT BC			
		DRAWING	
		P94-1835	
SCALE	NONE	DRAWING VERSION	A 7
		SHEET	

A  
DWG  
SIZE  
A0







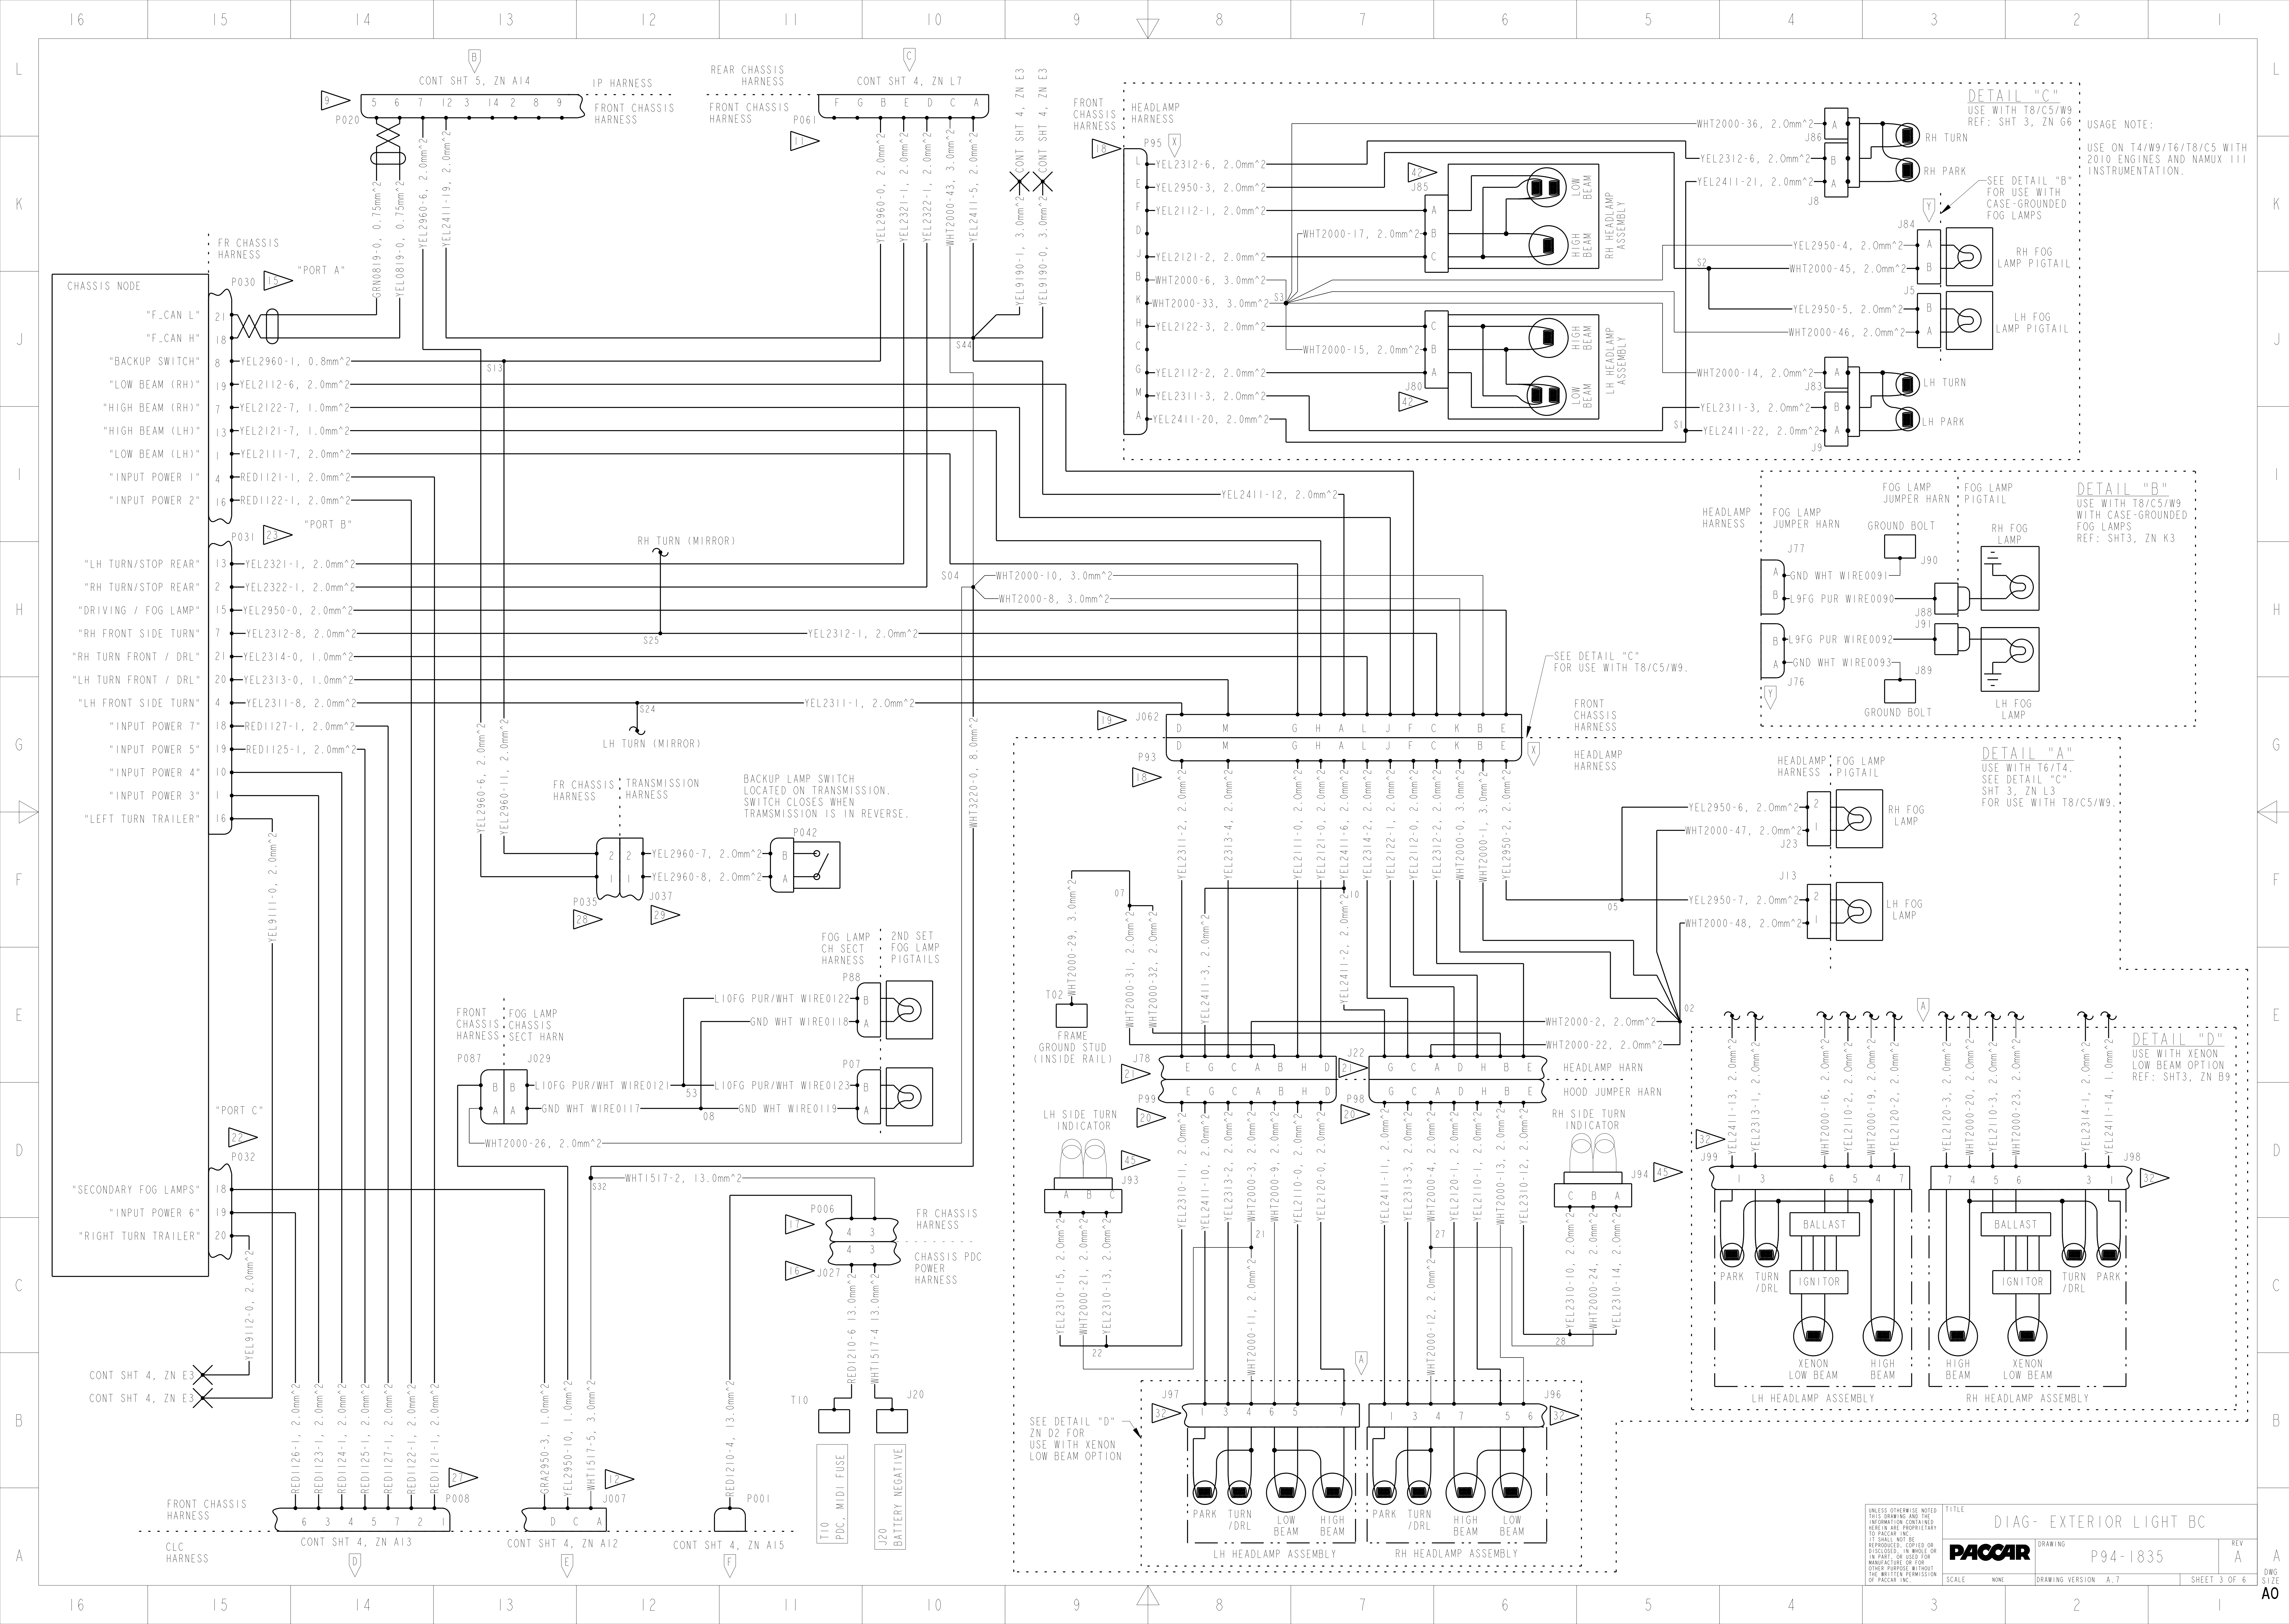


TABLE 2: CLC FUSES AND FUNCTIONS								
FUNCTION	FUSE	A1	A2	A3	A4	A9	A10	A11
RIGHT HEADLAMP HIGH BEAM		X						
LEFT HEADLAMP LOW BEAM		X						
LEFT HEADLAMP HIGH BEAM			X					
RIGHT HEADLAMP LOW BEAM			X					
LEFT TURN FRONT/SIDE				X				
RIGHT TURN/STOP REAR				X				
RIGHT TURN FRONT/SIDE					X			
LEFT TURN/STOP REAR					X			
LEFT TURN TRAILER						X		
RIGHT TURN TRAILER							X	
DRIVING OR FOG LAMPS								X
LEFT TURN FRONT/DRL								X
RIGHT TURN FRONT/DRL								X

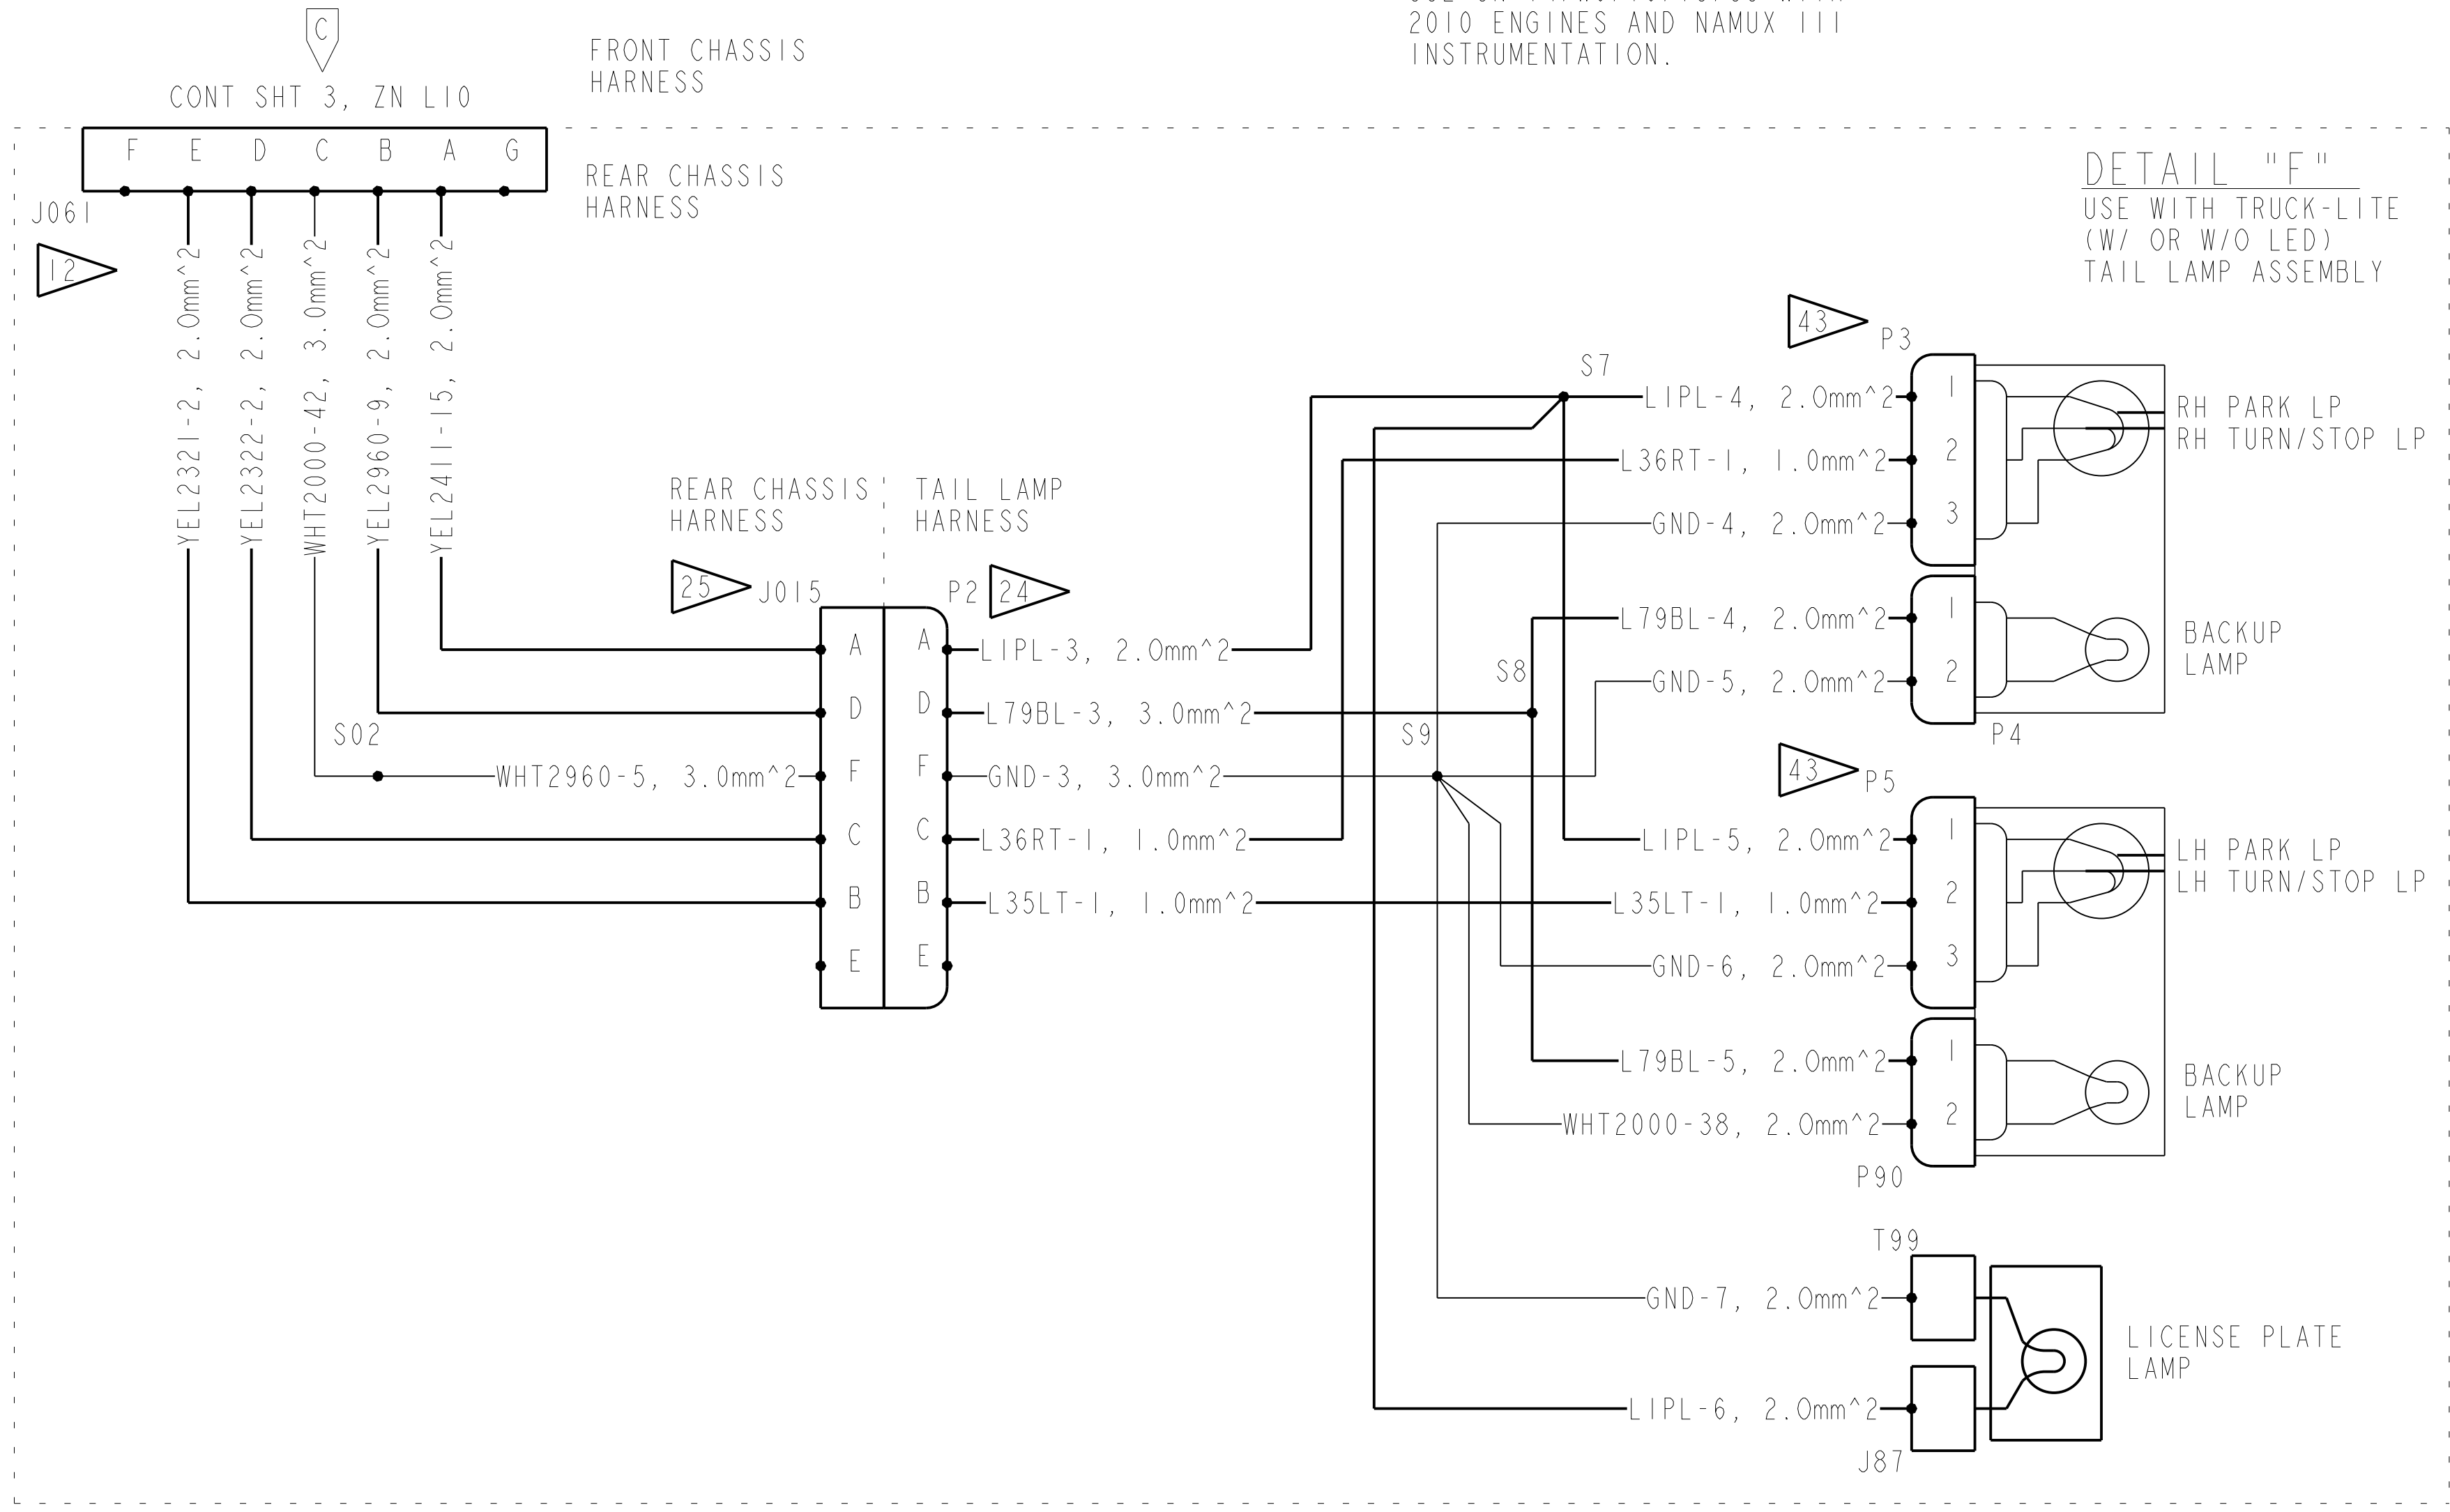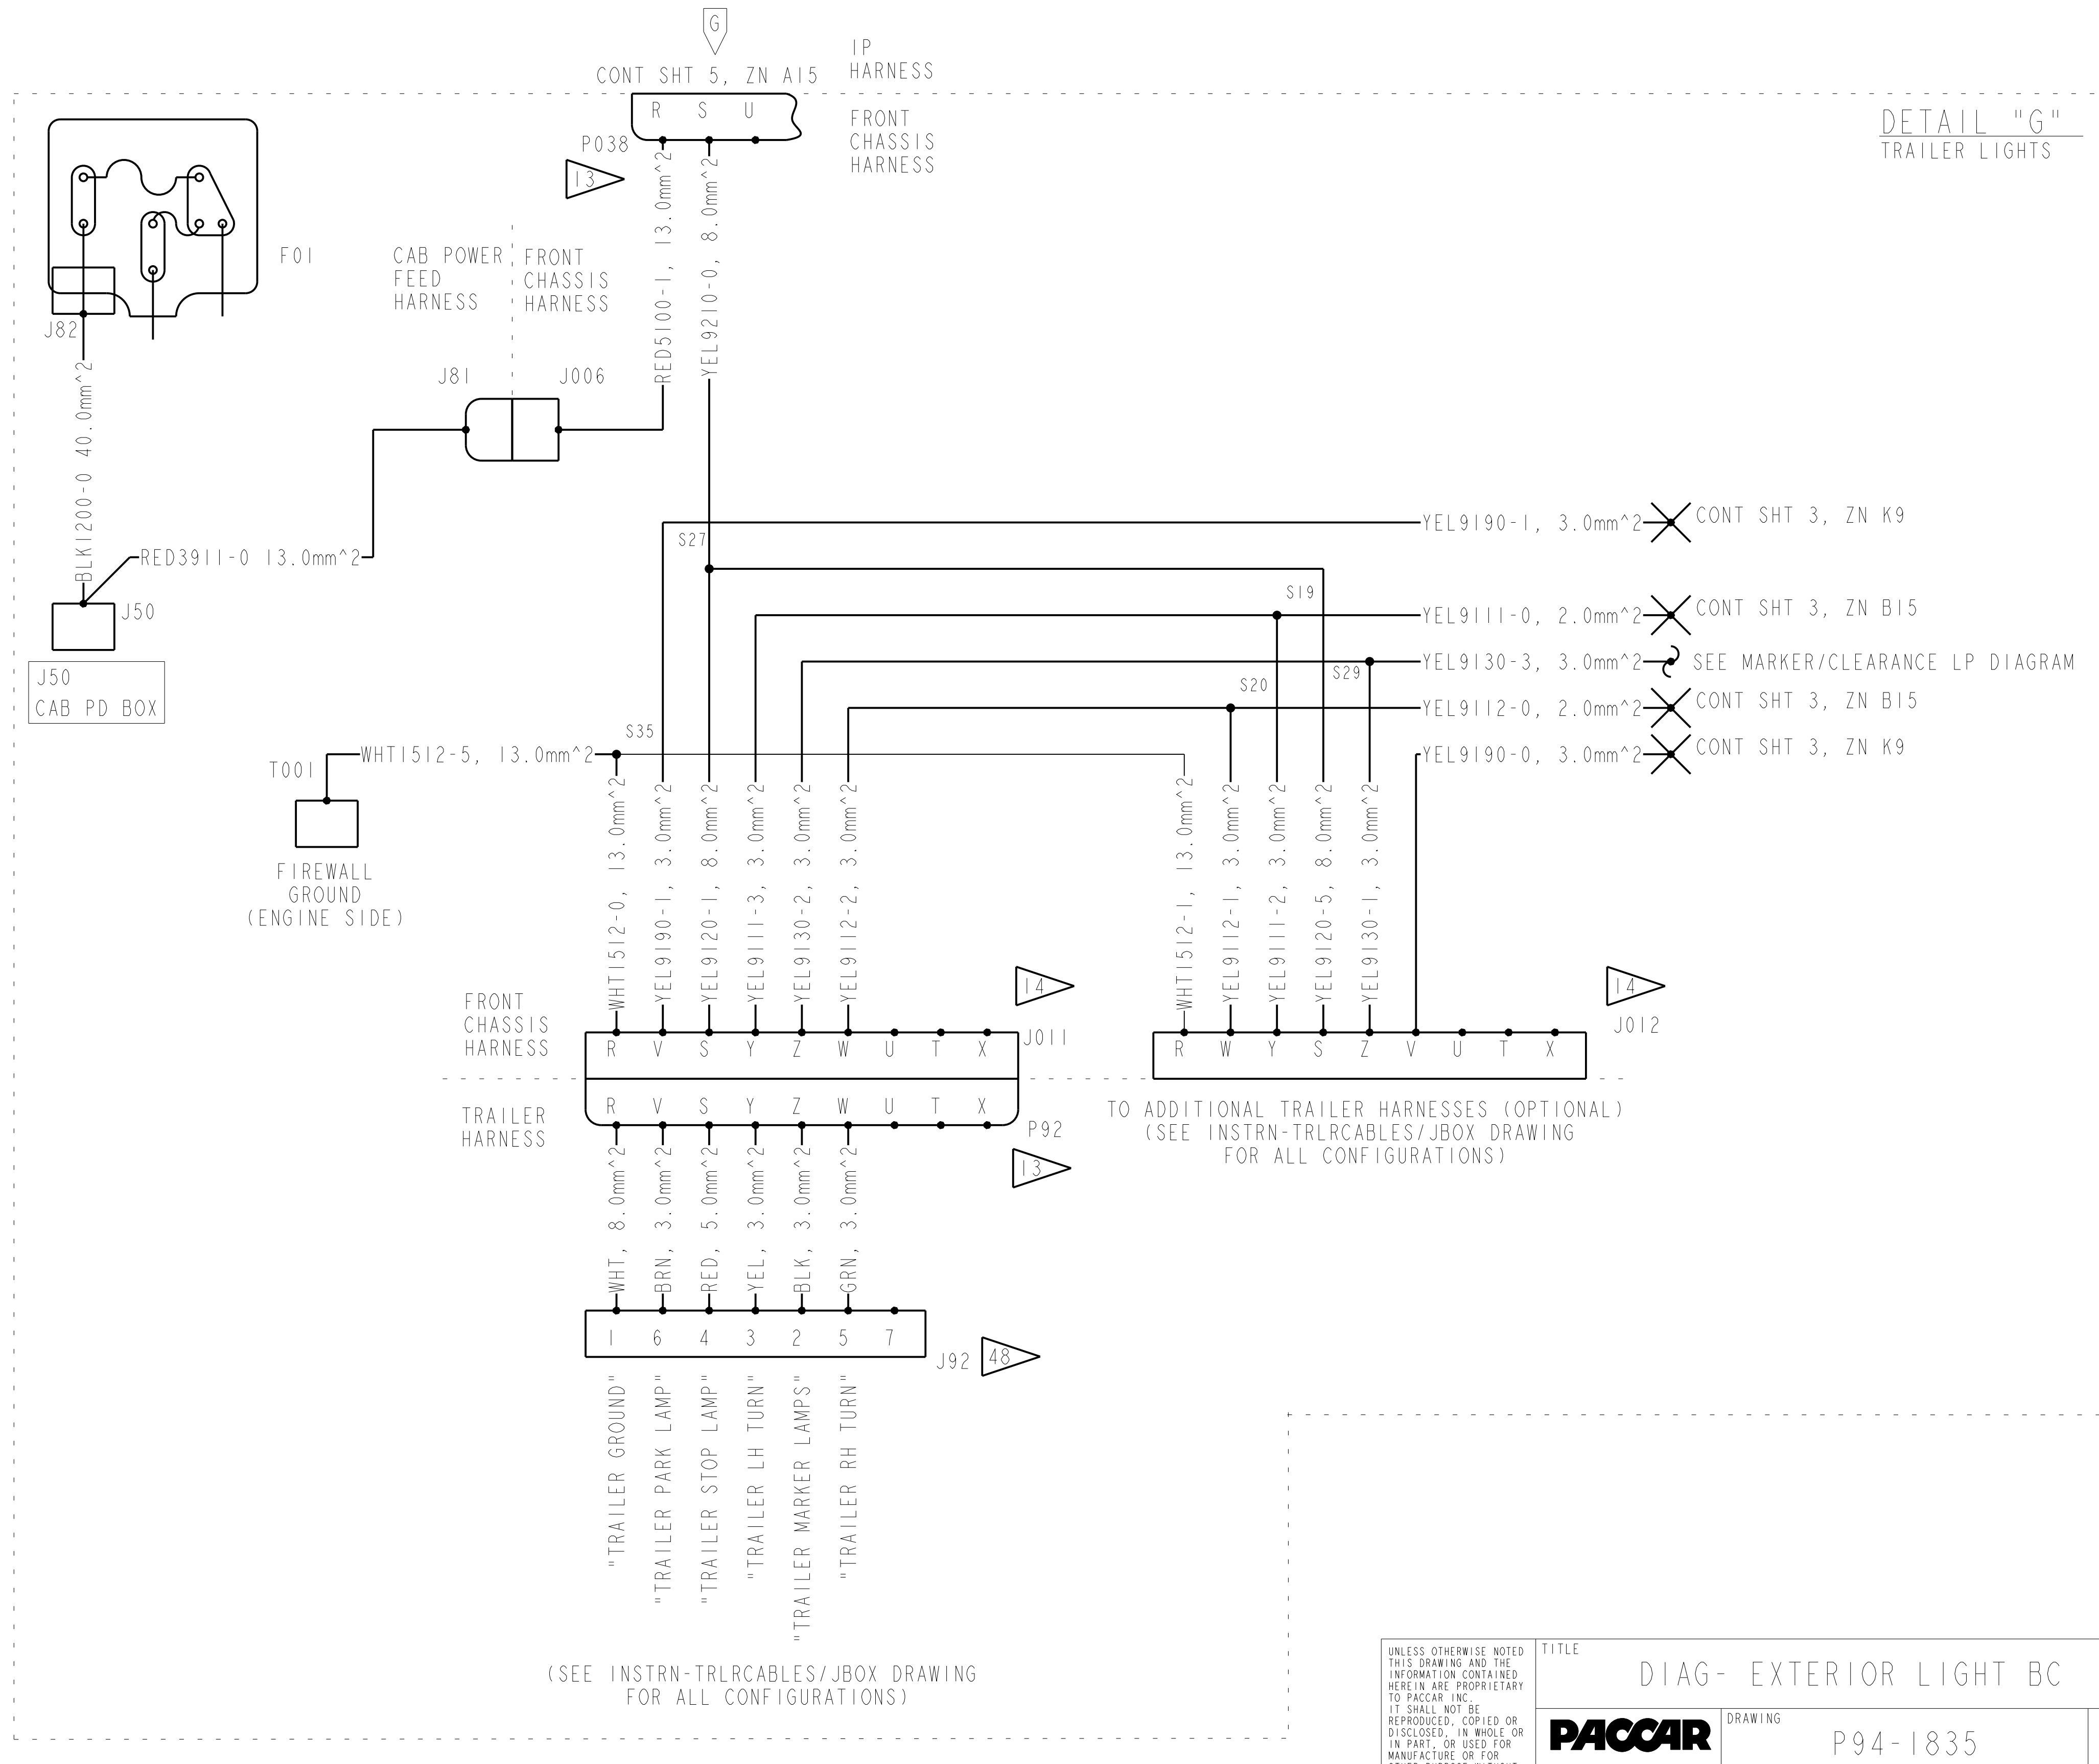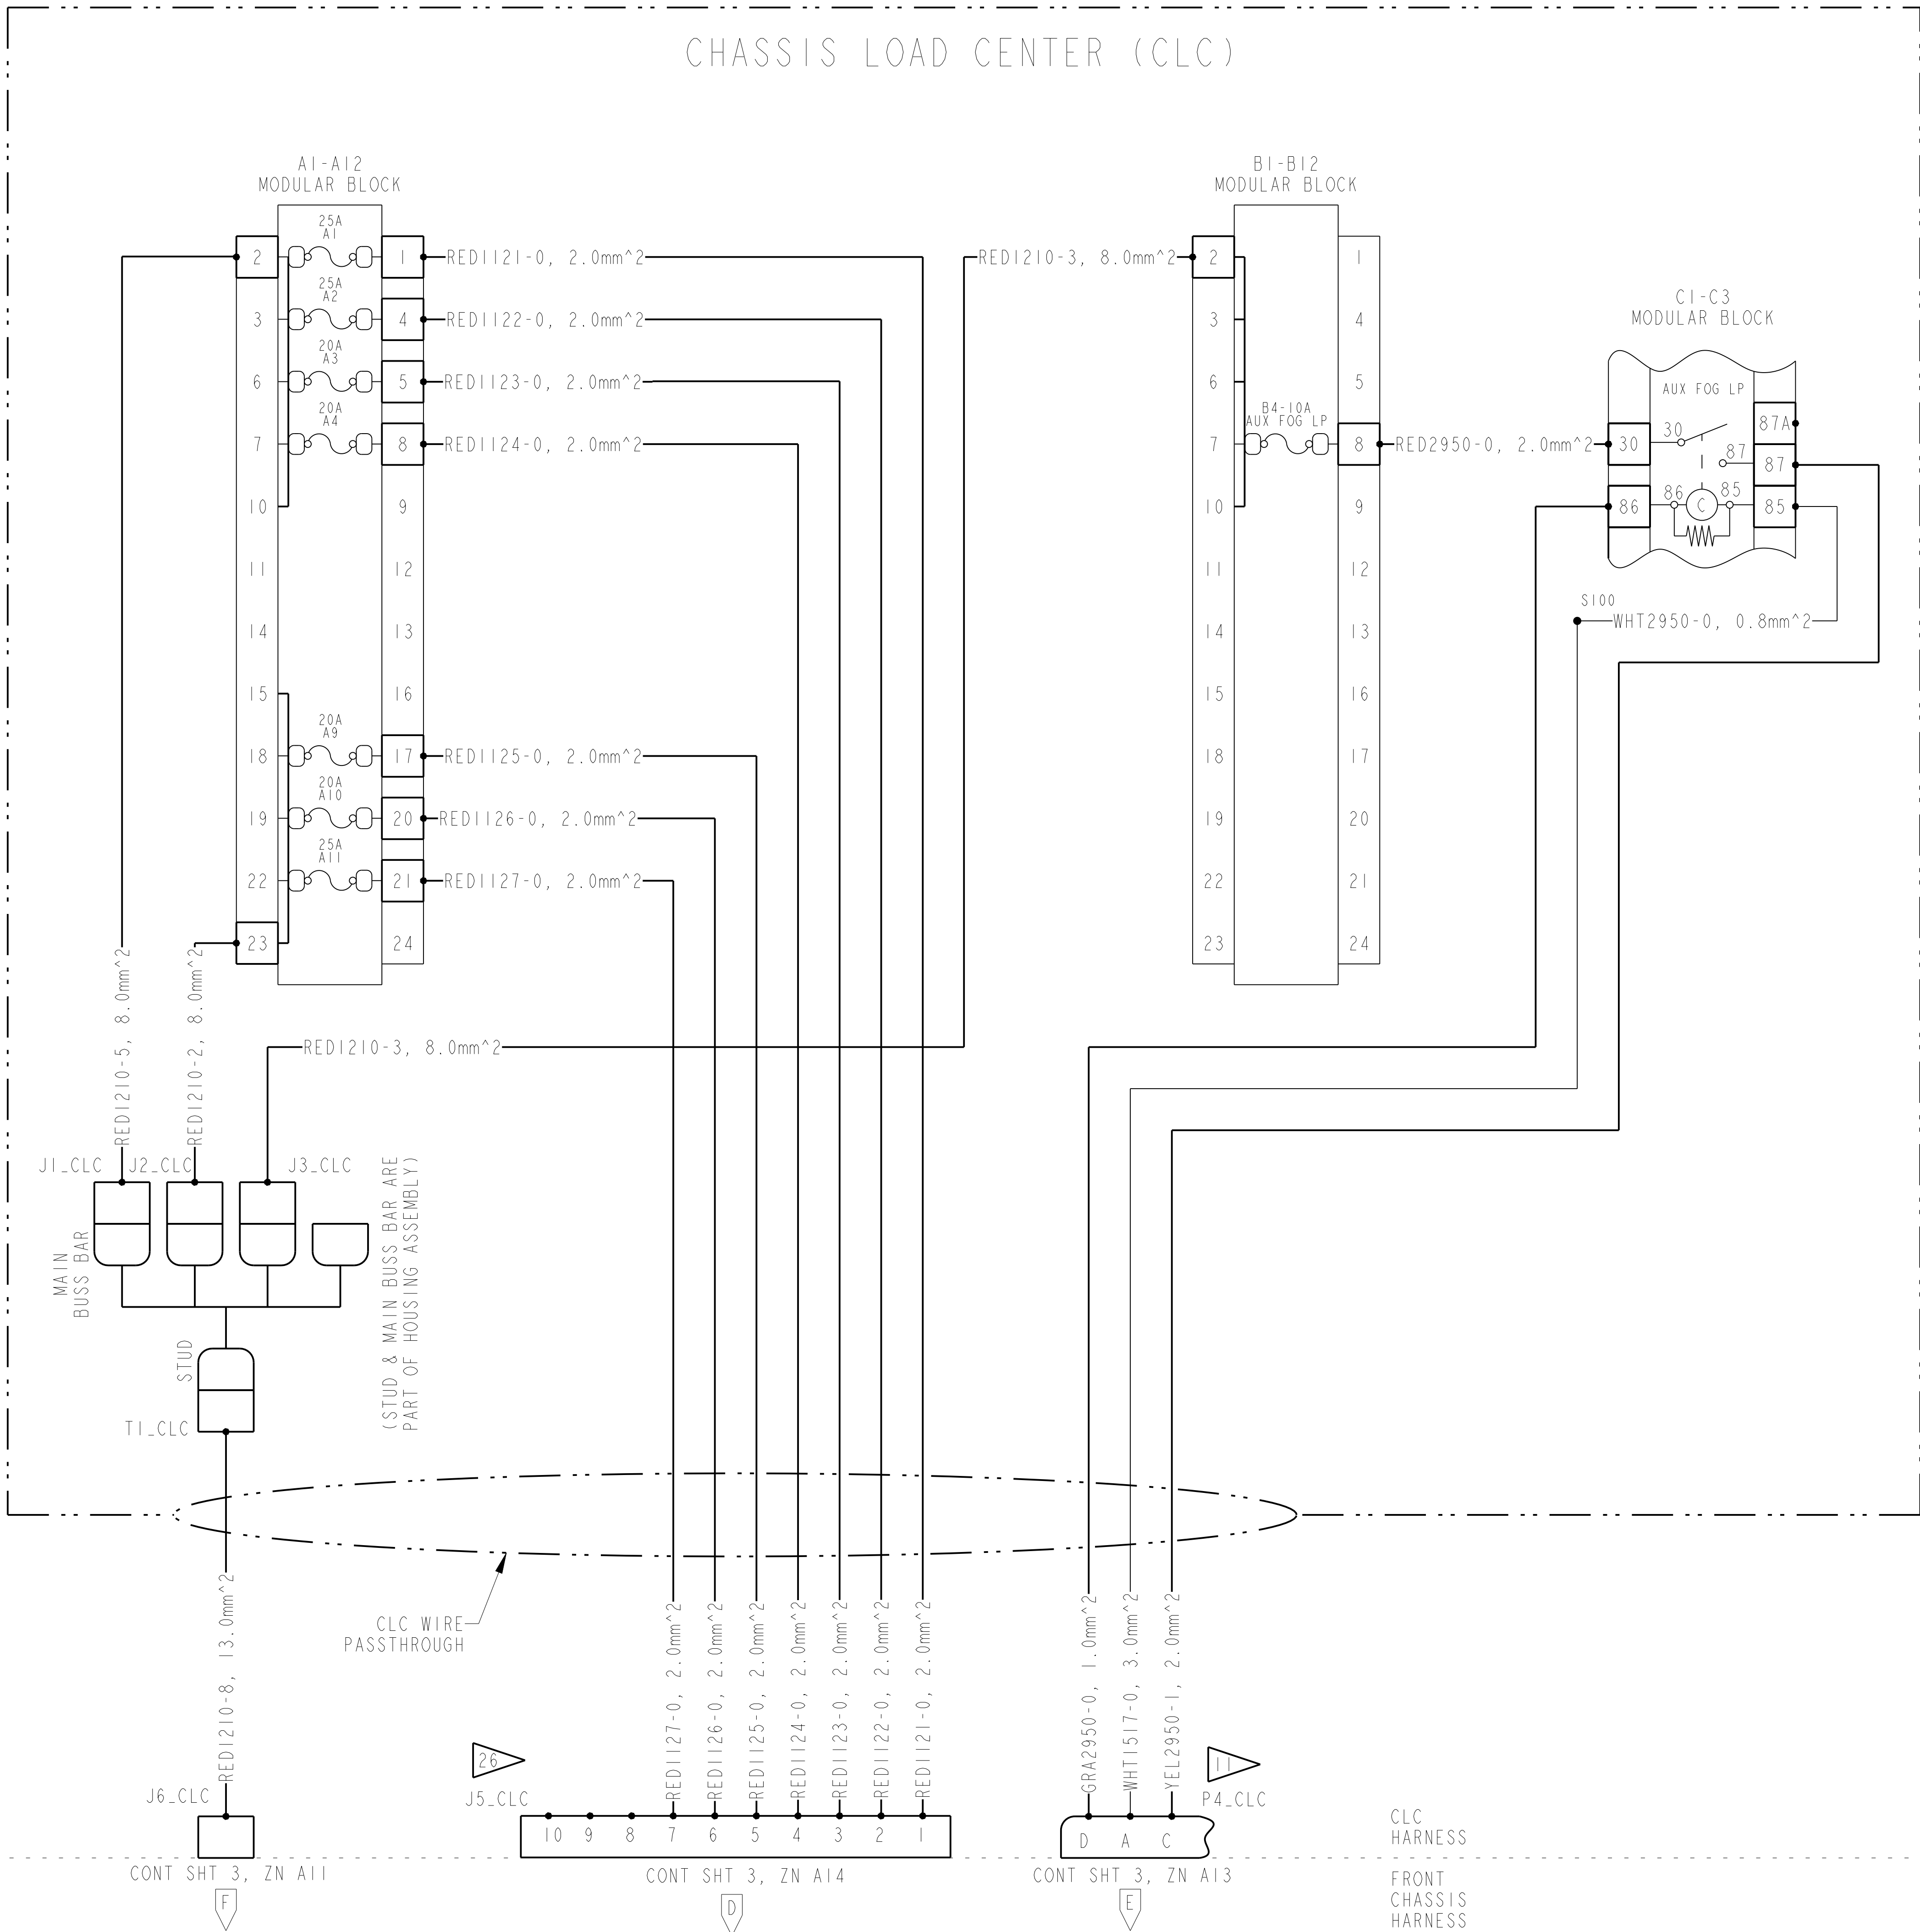

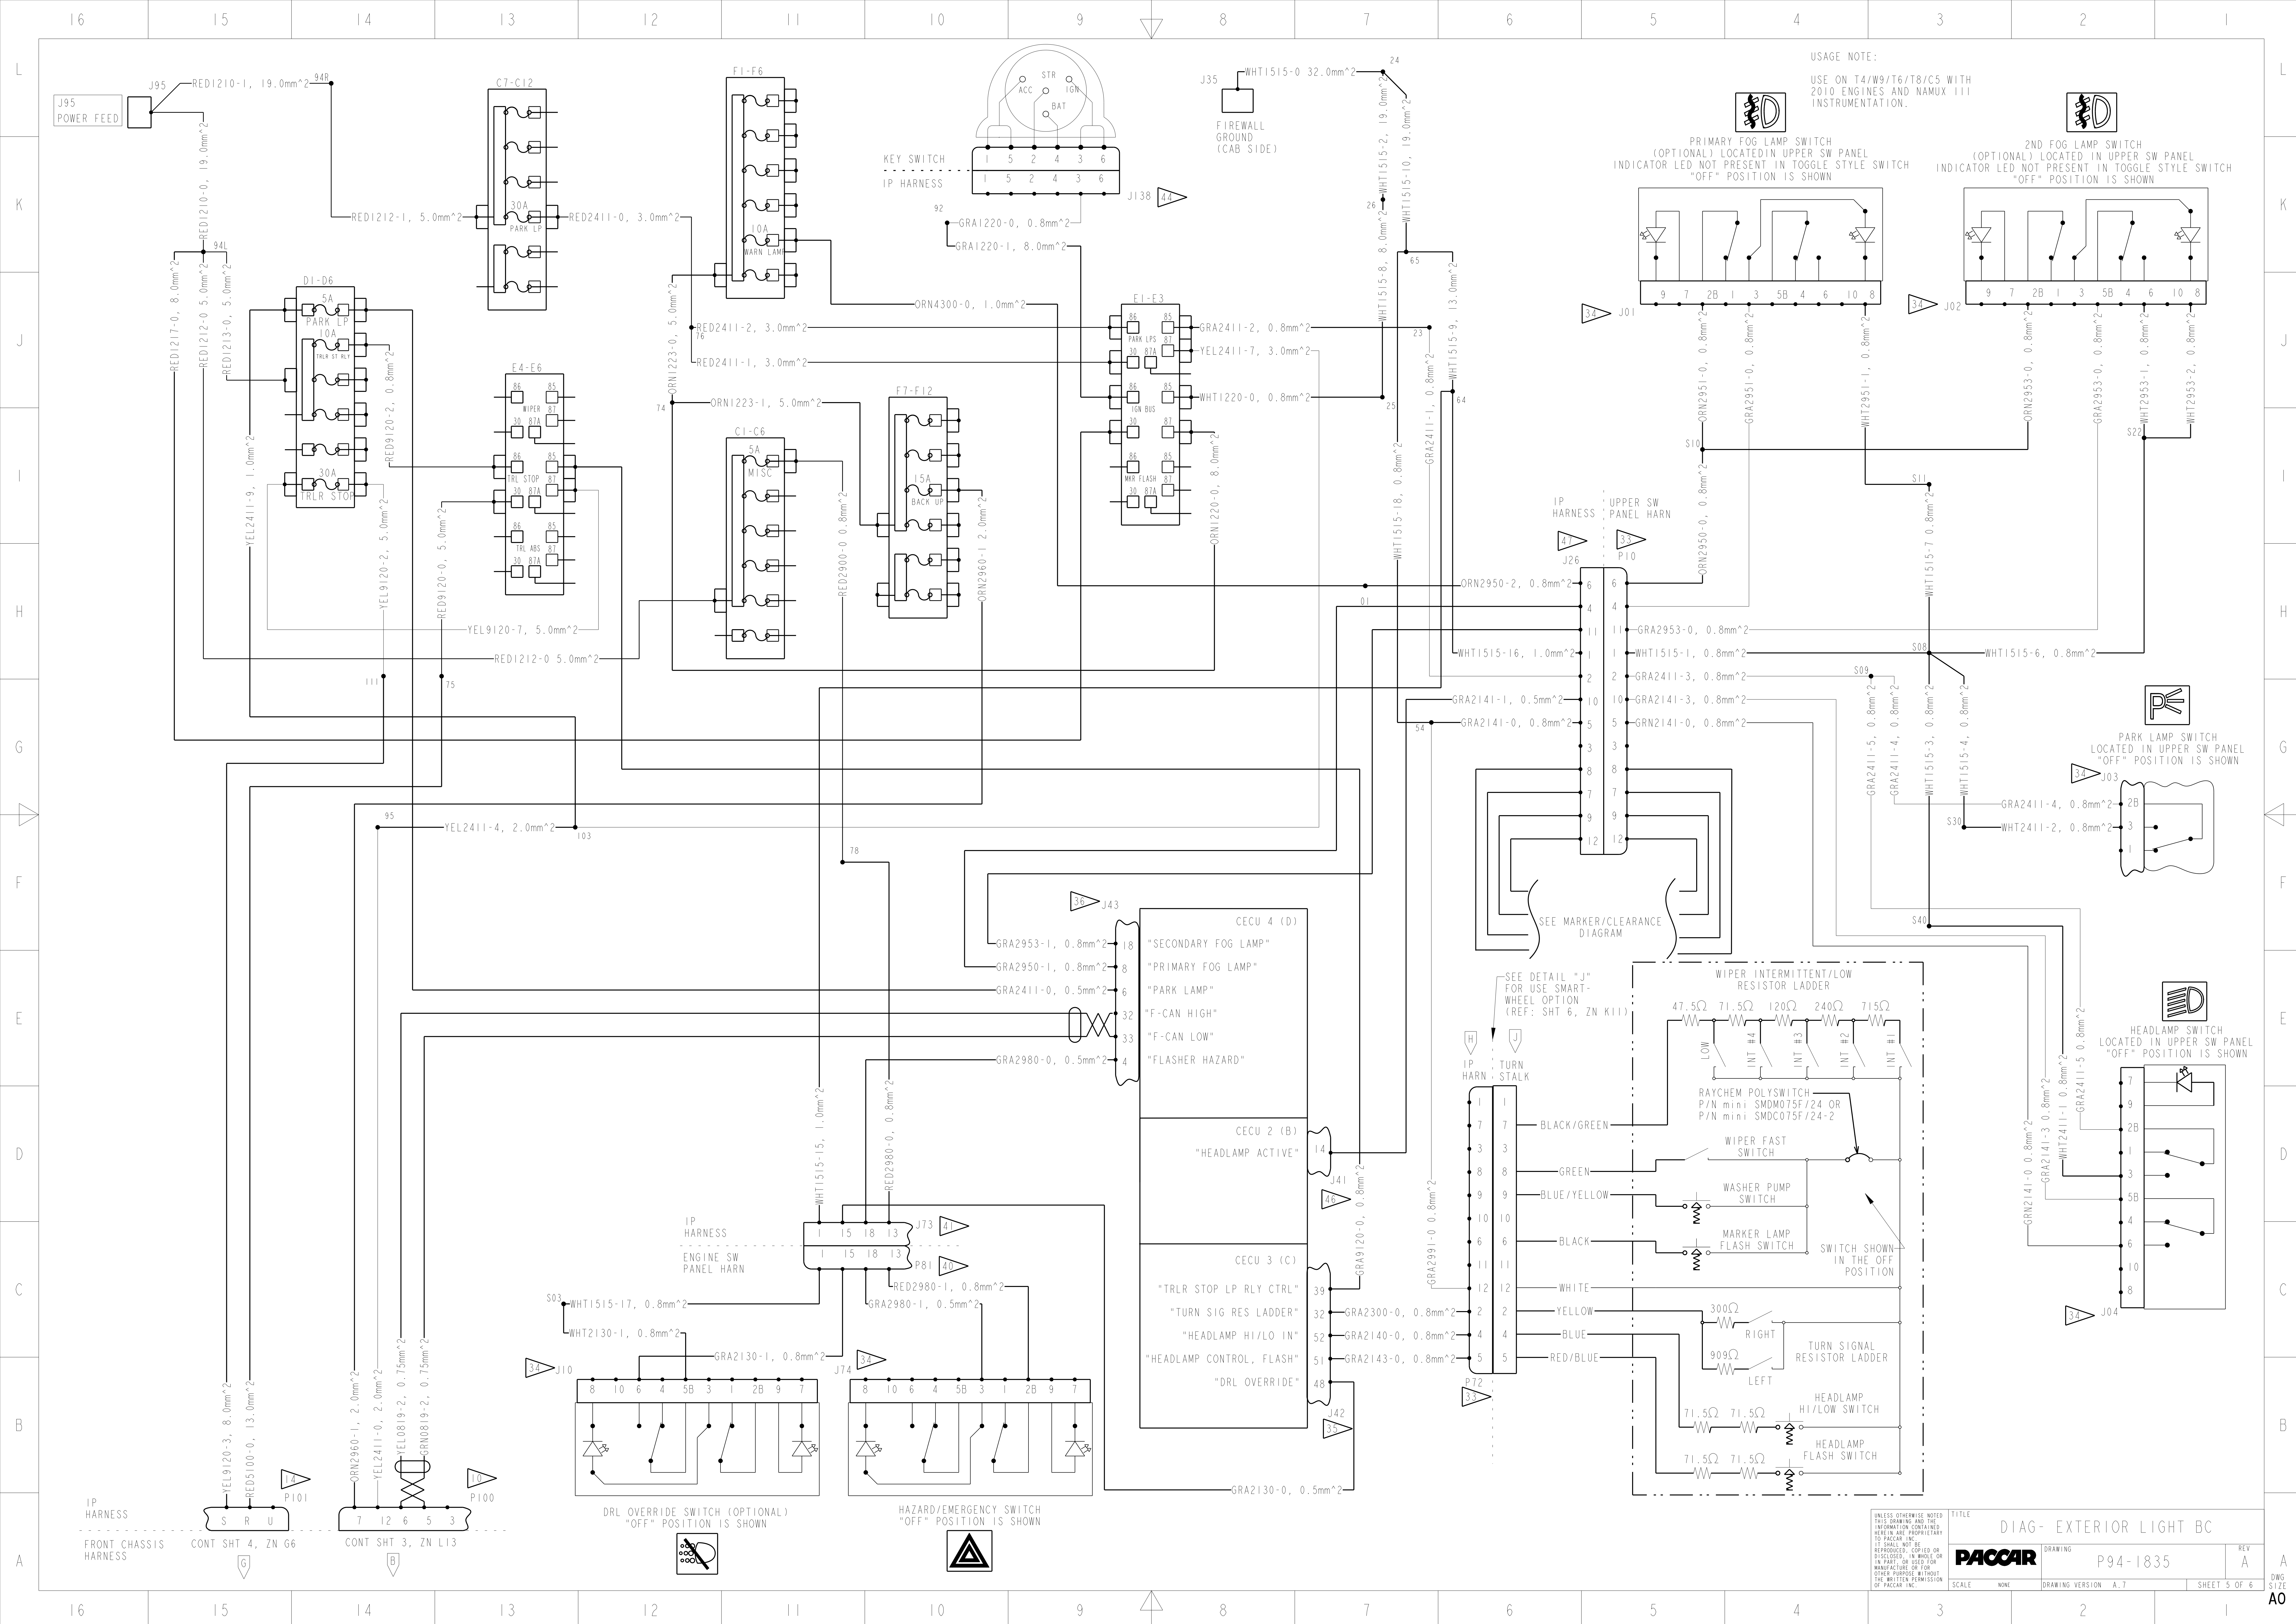

DETAIL "J"  
USE WITH SMART STEERING WHEEL  
(REF: SHT 5, ZN D6)

USAGE NOTE:

USE ON T4/W9/T6/T8/C5 WITH  
2010 ENGINES AND NAMUX III  
INSTRUMENTATION.

DETAIL "H"  
INSTRUMENT CLUSTER  
SEE INSTRUMENTATION DIAGRAM  
FOR GAUGE CLUSTER DETAIL

